


MILAN WIND GUARDS

Firetable Model: 8212-WG Fireplace Model: 8214-WG

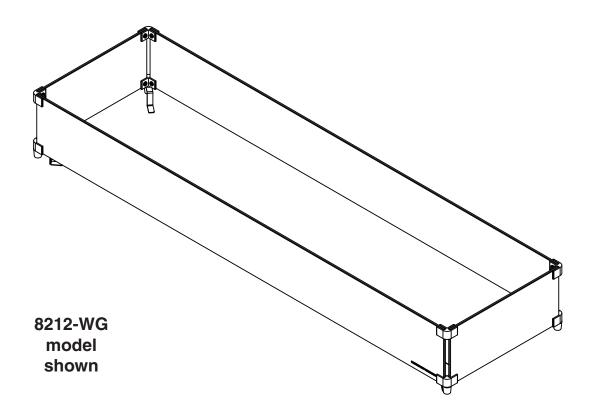


SPECIFICATIONS AND DIMENSIONS

This wind guard is for use with your American Fyre Designs Milan firetable / fireplace.

CAUTION: DO NOT touch any part of this accessory during operation or when HOT! The glass panels and other surfaces get HOT and can cause burns if touched.


Be sure the firetable / fireplace and this accessory are completely cool when handling.

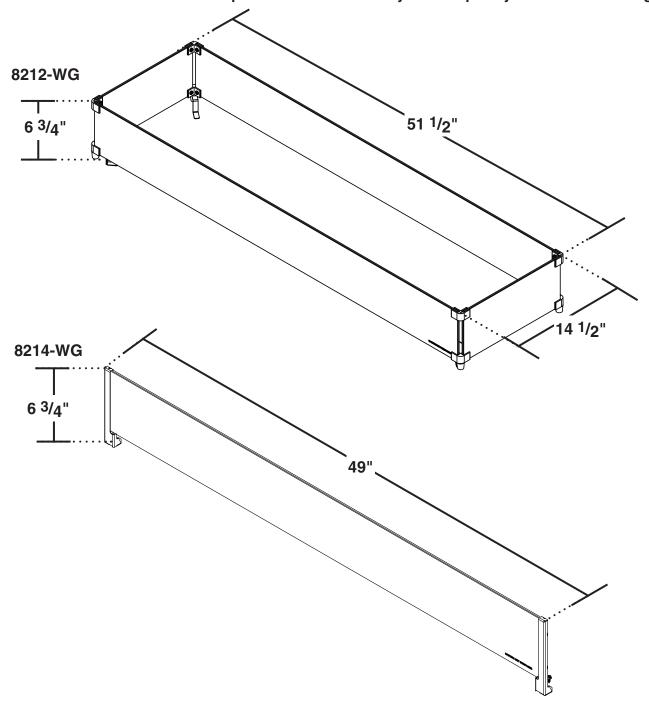


TOOLS REQUIRED


- Phillips screwdriver
- 5/16" nut driver
- · 2 assemblers recommended
- Soft cotton gloves for handling glass panels

Note: Use a soft non-abrasive surface for assembly to prevent any damage.

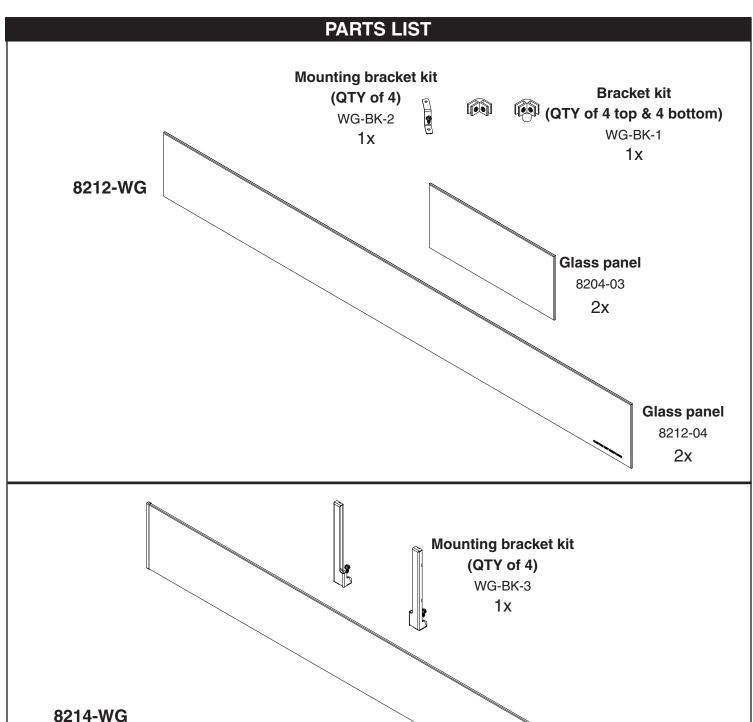

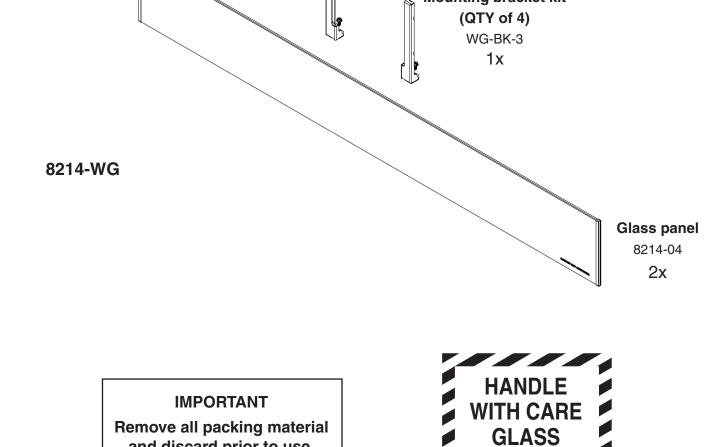


and discard prior to use.

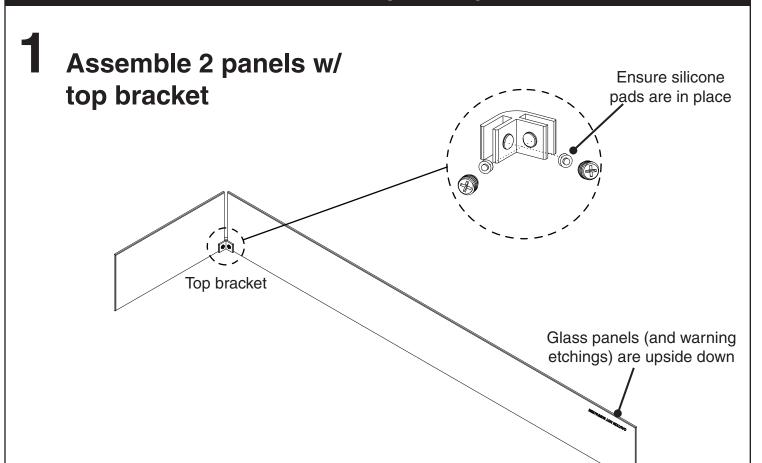


Assemble upside down (as shown) for ease of assembly.

2 Assemble all panels w/ remaining top brackets

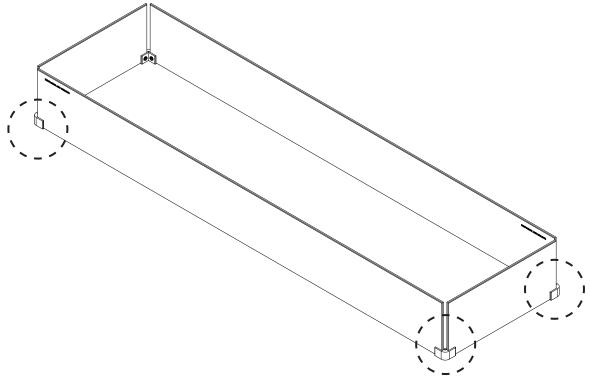


DO NOT overtighten screws. Tighten until snug. Overtightening can break glass.

3 Install bottom brackets

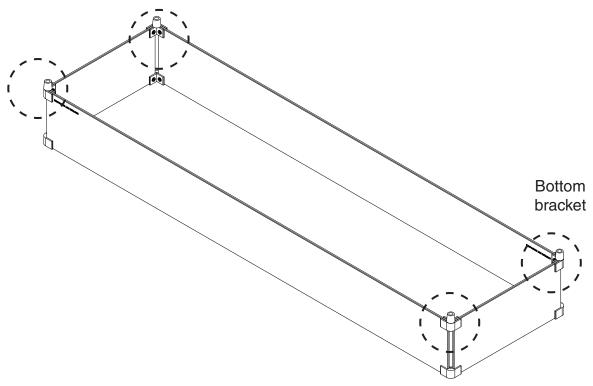


DO NOT overtighten screws. Tighten until snug. Overtightening can break glass.

4 Finish securing all screws

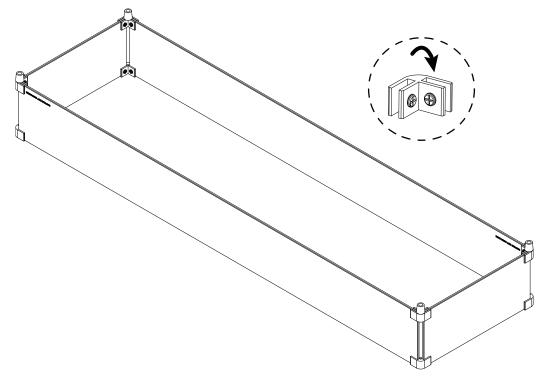


Gently secure all screws (on all brackets) 1/4" to 1/2" turn until panels are secure. DO NOT OVERTIGHTEN.

5 Install mounting bracket

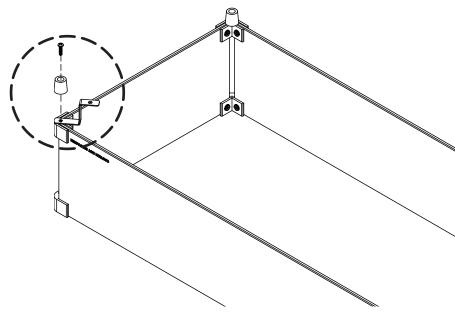


Remove rubber peg from bottom bracket, place mounting bracket, then reinstall rubber peg to bottom bracket.

6 Assemble all remaining mounting brackets

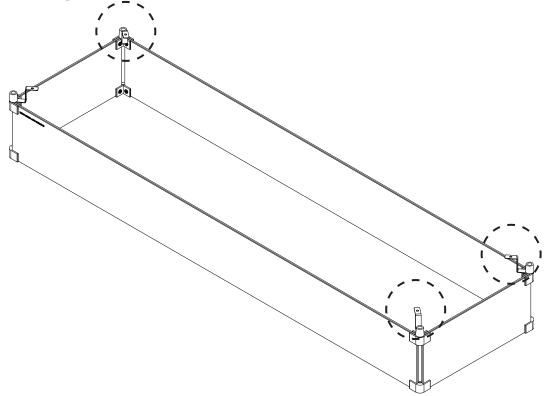


7 Place on firetable

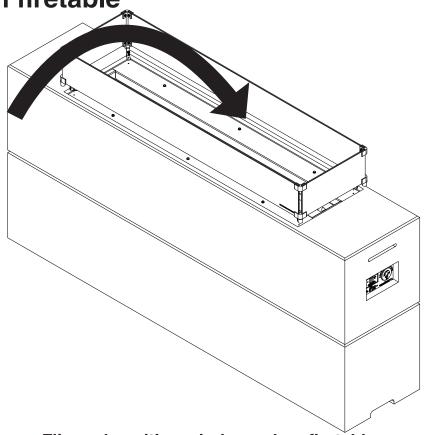


Flip and position wind guard on firetable.

Install on firetable

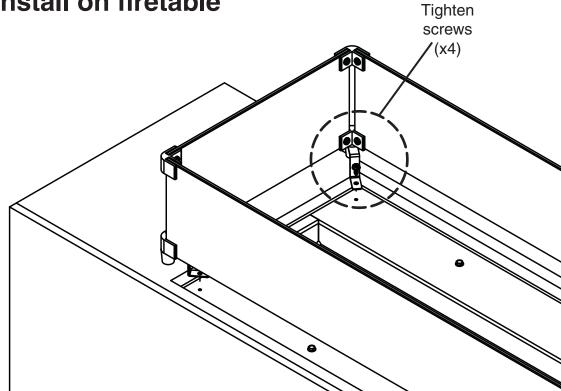


Use a 5 /16" nut driver and supplied four screws to fasten guard in place. Start all four screws to ensure guard is properly aligned, then fasten all screws.

1 Install panel

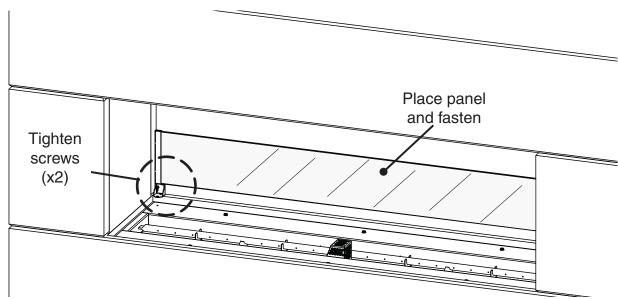

Place one wind guard panel into burner area, ensuring it is centered. While holding, use a $\frac{5}{16}$ " nut driver and two of supplied screws to fasten panel in place.

2 Repeat for second panel

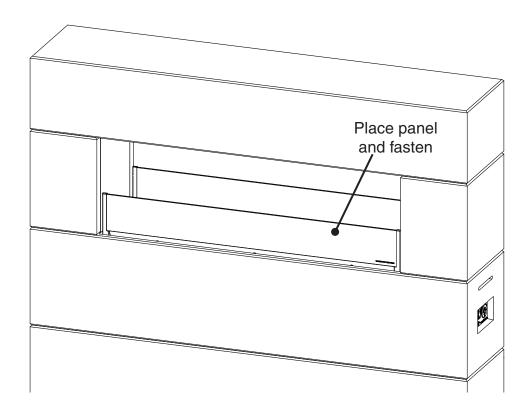

CARE AND CLEANING

- Clean the glass periodically to remove any buildups caused by the elements and combustion. It is recommended that the glass be cleaned 2-3 times during each heating season, depending on use and environment conditions.
- Clean using a non-abrasive glass cleaner and a clean lint-free cloth.
- Never attempt to clean glass while hot.
- DO NOT touch glass while in operation or within 10 minutes following use.

