

INSTALLATION INSTRUCTIONS

Tools You Will Need:



Silicone Sealant



Pipe tape







 


 
Philips Screwdriver

Pliers

Adjustable wrench

Available Handle Options








▲ LFC204-XX-MCHDL




▲ LFC204-XX-BCHDL



 
▲ LFC204-XX-PCHDL




INSTALLATION STEPS:

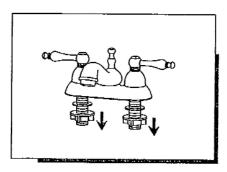


1. Remove the mounting hardware from the faucet.

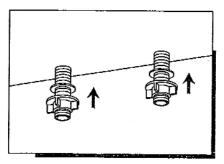

3. Re-assemble the mounting hardware, screw and tighten lock nuts onto faucet.

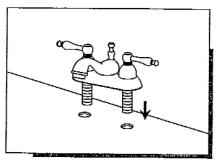


2. Place silicone sealant beneath the plastic gasket and iustall faucet through center hole.

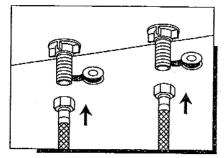


4. Apply pipe tape to threads. Attach water supplylines on end to the faucet and screw onto inlet ports.



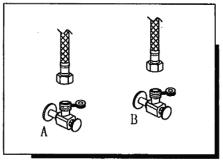



5. Connect to water supply.

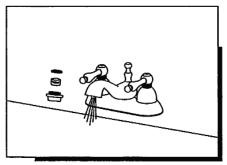

6. After installing faucet, remove aerator assembly and open the hot and cold water supplies. Check for leaks.Turn on faucet handle for one minute to flush debris from faucet.Close the handles and re-assemble the aerator.

Exploded Drawing

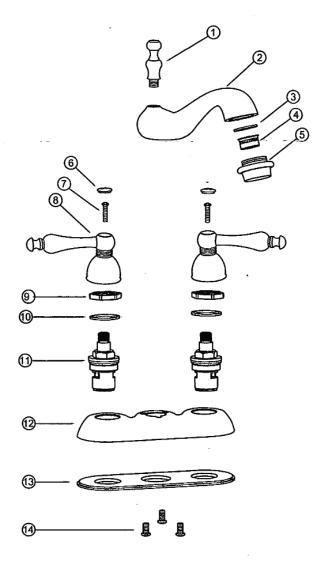

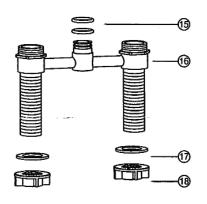

18	Lock Nut	2
17	Rubber Washer	2
16	Inside Waterway	1
15	O-rtng	2
14	Screw	3
13	Plastic plate	1
12	Escutcheon	-1
. 11	Ceramic Disc Cartridge	2
10	Plastic Washer	2
9	Lock Nut	2
8	Handle	2 .
7	Screw	2
6	Handle Cap	2
5	Aerator Cover	1
4	Aerator	1
3	Gasket	1
2	Spout	1
1	Spout Trim Cap	1
No.	Part Description	Quantity