ASSEMBLY INSTRUCTION

Read this instruction carefully. Remove all wrapping material, staples and straps from the carton. See hardware and furniture part list

For guidance. Be sure you have all wooden furniture parts on a clean and flat soft surface, such as a carpet or rug, to prevent from being scratched. Follow the figure to start assembling.

CAUTION:

- 1. Do not FULLY TIGHTEN the nut or screw untill all is ready to assemble.
- 2. Do not OVER TIGHTEN the nut or screw to avoid causing damages to the thread.
- 3. Keep all hardware part out reach of children.


NO	PART LIST	QTY
Α	BACK REST	1 PC
В	FRONT LEG	1 PC
С	SIDE RAIL	2 PCS
D	WOODEN SEAT WITH SCOOP	1 PC


		
NO	DESRIPTION	QTY
1	JCBC SCREW M6 X 50MM	6 PCS
2	WOOD DOWEL Ø8 x 30MM	4 PCS
3	CSK SCREW M4 x 30MM	3 PCS
4	SPRNG WASHER M6	6 PCS
5	M4 ALLEN KEY	1 PC

MODEL: 339C

STEP 1


Attached C to B according to the hole and tighten it using hardware number 1,2,4, and 5.

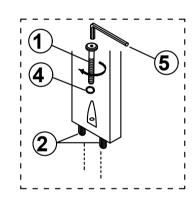

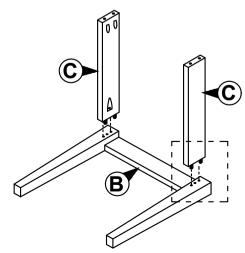


STEP 2


Align the whole part from STEP I Stick D to the whole assemble to A . Tighten the part of \overline{C} and A using hardware number $\overline{1}$,4 and 5 .

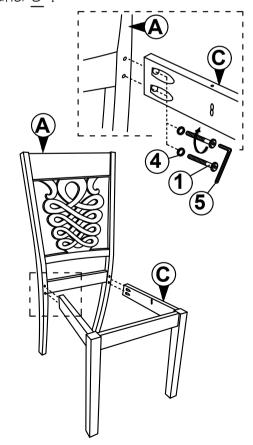

STEP 3

part and fully-tighten it with hardware number 3.

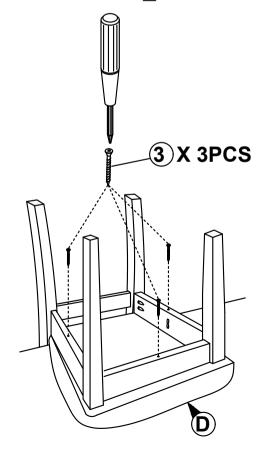

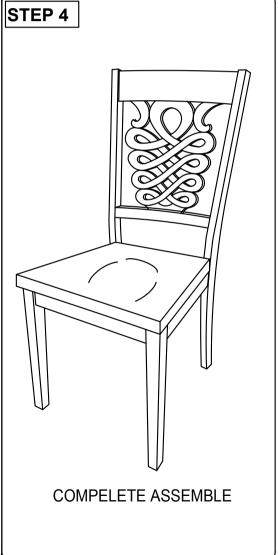

ASSEMBLY INSTRUCTION MODEL: 7230T

Read this instruction carefully. Remove all wrapping material, staples and straps from the carton. See hardware and furniture part list

For guidance. Be sure you have all wooden furniture parts on a clean and flat soft surface, such as a carpet or rug, to prevent from being scratched. Follow the figure to start assembling.

CAUTION:

- 1. Do not FULLY TIGHTEN the nut or screw untill all is ready to assemble.
- 2. Do not OVER TIGHTEN the nut or screw to avoid causing damages to the thread.
- 3. Keep all hardware part out reach of children.

NO	PART LIST	QTY
Α	TABLE TOP	1 PC
В	TABLE LEG	4 PCS

NO	DESRIPTION		QTY
1	JCBC SCREW M6 x 70MM	9	8 PCS
2	FLAT WASHER 6/19"	0	8 PCS
3	SPRING WASHER 6/13"	0	8 PCS
4	M4 ALLEN KEY		1 PC

