## **ASSEMBLY INSTRUCTION**


## **MODEL : 338C**

Read this instruction carefully. Remove all wrapping material, staples and straps from the carton. See hardware and furniture part list

For guidance. Be sure you have all wooden furniture parts on a clean and flat soft surface, such as a carpet or rug, to prevent from being scratched. Follow the figure to start assembling. CAUTION :

- 1. Do not FULLY TIGHTEN the nut or screw untill all is ready to assemble.
- 2. Do not OVER TIGHTEN the nut or screw to avoid causing damages to the thread.
- 3. Keep all hardware part out reach of children.

NO	PART LIST	QTY	NO	DESRIPTION		QTY
Α	BACK REST	1 PC	1	JCBC SCREW M6 X 50MM	0	6 PCS
В	FRONT LEG	1 PC	2	WOOD DOWEL Ø8 x 30MM		4 PCS
С	SIDE RAIL	2 PCS	3	CSK SCREW M4 x 30MM	OLDONO DO	3 PCS
D	WOODEN SEAT WITH SCOOP	1 PC	4	SPRNG WASHER M6	0	6 PCS
			5	M4 ALLEN KEY		1 PC

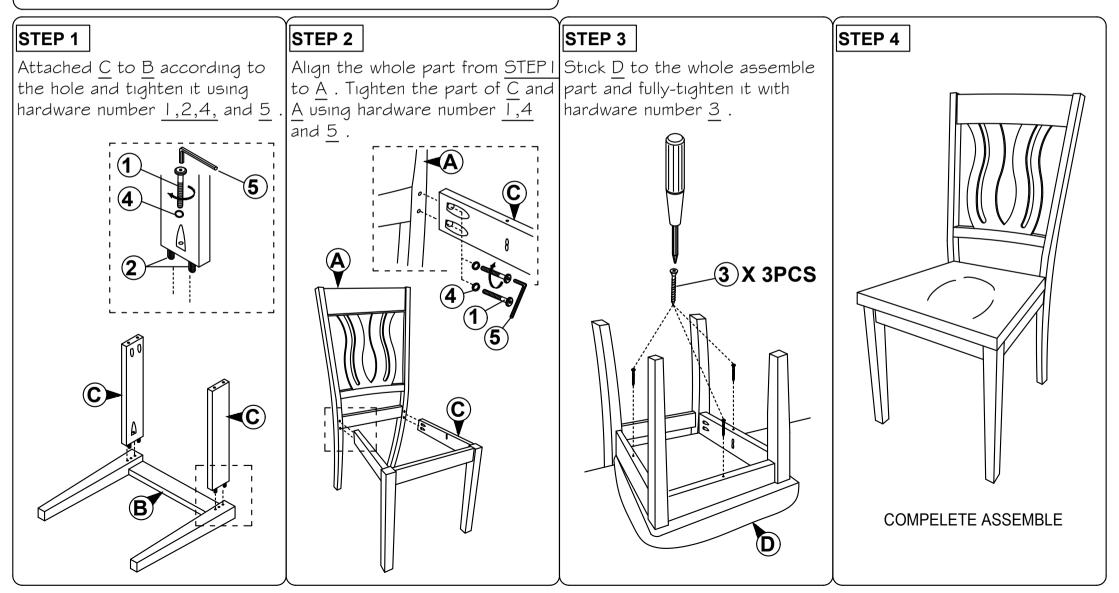

## ASSEMBLY INSTRUCTIONS

## MODEL : 7008T

Read this instruction carefully, remove all wrapping material, staples and straps from the carton. See hardware and furniture part list. For guidance. Be sure you have all wooden furniture parts on a clean and soft surface to prevent from being scratched. Follow the figure to start assembling.

Caution:

1. Do not FULLY -TIGHTEN the nut or bolt until all nut or nut bolt is ready to assembled.

2. Do not OVER- TIGHTEN the nut or nut bolt to avoid causing damages to the thread.

3. Keep all hardware part out of reach of children.

PART LIST							
No.	DESCRIPTION	QTY					
А	TABLE TOP	1 PC					
В	TABLE LEG	4 PCS					

HARDWARE LIST									
No.	DESCRIPTION		QTY						
1	FLAT WASHER 6/19"	0	8 PCS						
2	SPRING WASHER 6/13"	Ø	8 PCS						
3	JCBC SCREW M6 X 70MM	0	8 PCS						
4	M4 ALLEN KEY		1 PC						

