







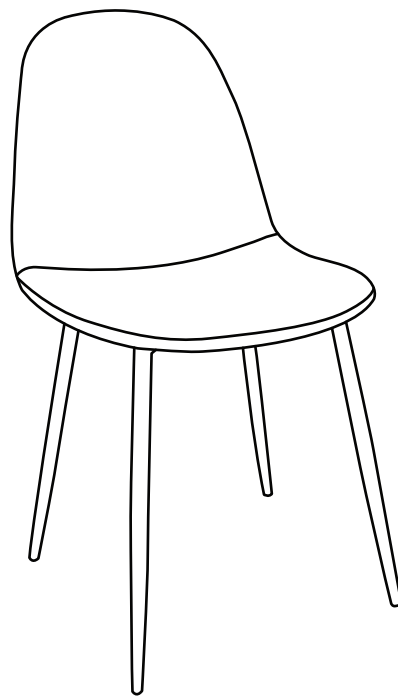

Dining Chair
CF501619

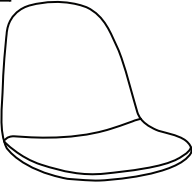


PARTLIST

 


A 	B 
Seat 2PCS	Leg 2PCS

HARDWARE LIST

#1  m6X20	#2  m6X18X1.5t	#3 
Bolt 8PCS (Extra1)	Flat Washer 8PCS (Extra1)	Allen Wrench 1PC

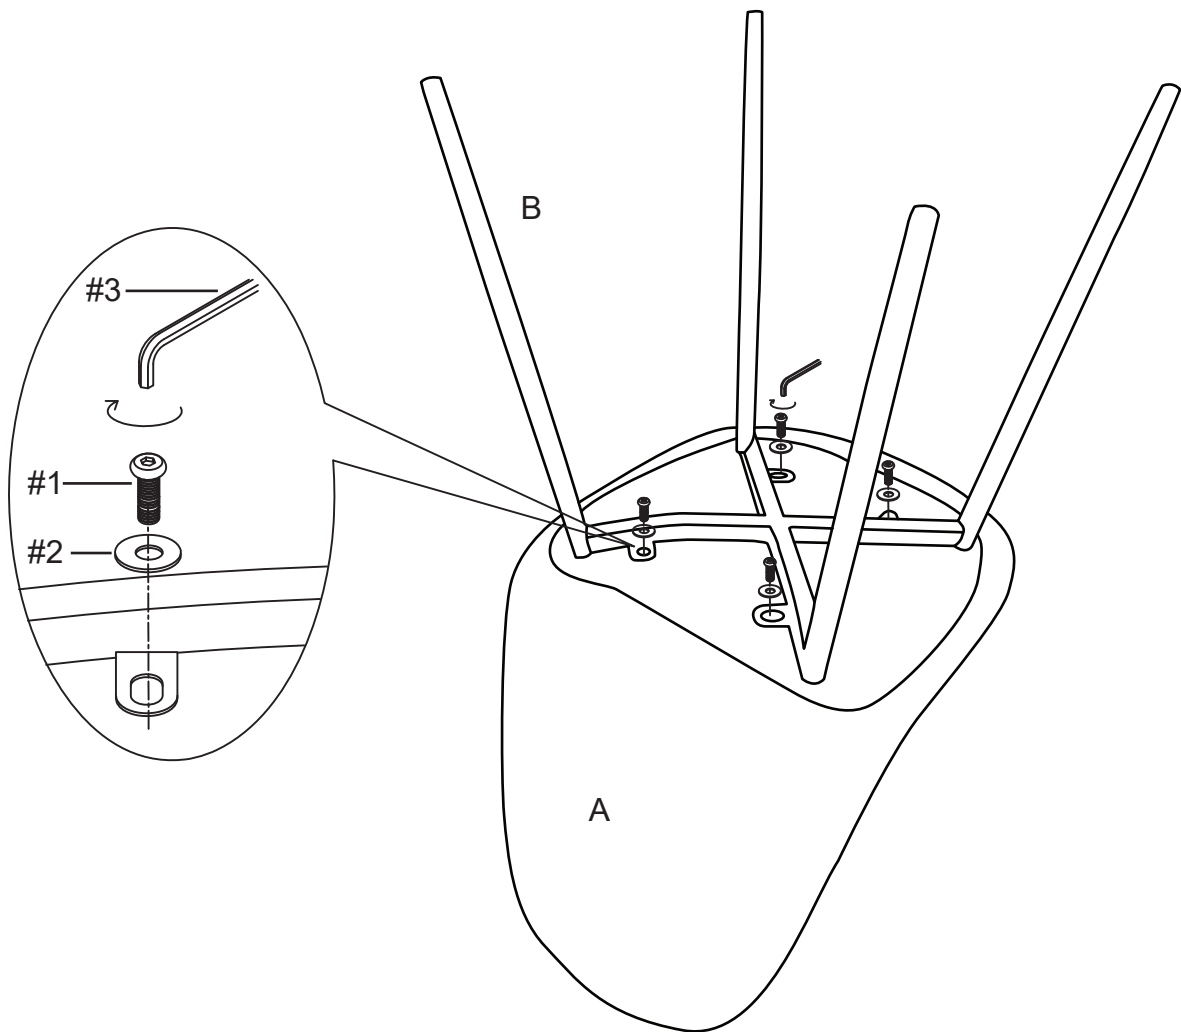Step 1: Carefully turn seat (part A) upside down on a soft flat surface, such as carpet. Attach leg (part B) to seat (part A) using bolts (part #1), flat washer (part #2) and allen wrench (part #3) and tighten all the bolts. Repeat for remaining chair.



- | | | |
|----|---|----|
| #1 |  | X4 |
| #2 |  | X4 |
| #3 |  | X1 |