




Dining Bench CF8021

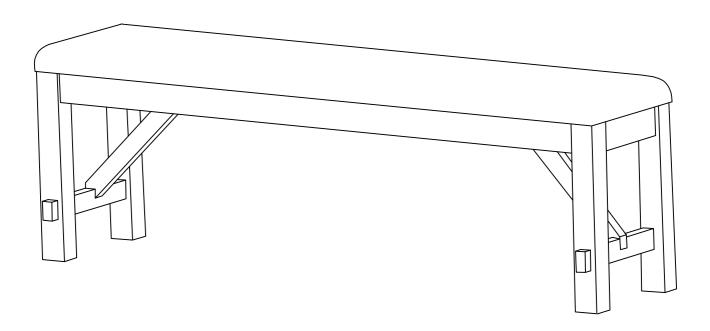


PART LIST

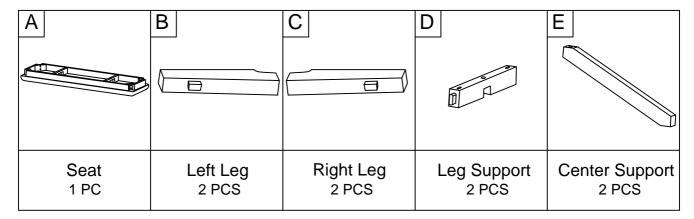

HARDWARE LIST

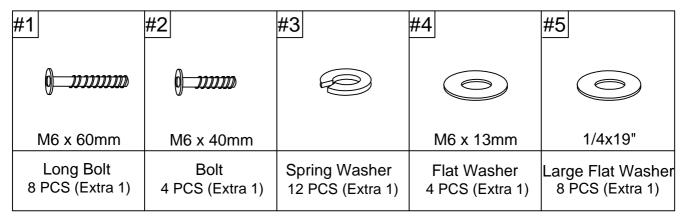

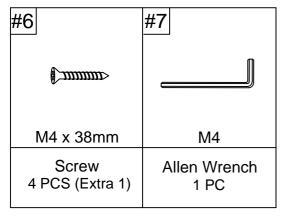


ADDITIONAL TOOLS (Not Provided)

Note: It is not recommended to use power tools during assembly.




Step 1 . Lay seat (part A) upside down on a soft surface, such as carpet. Attach legs (parts B & C) to seat (part A) using long bolts (part #1), spring washers (part #3), large flat washers (part #5) and allen wrench (part #7). Attach leg supports (part D) to legs (parts B & C) using screws (part #6) and phillips head screwdriver.

NOTE: Please do not fully tighten bolts until unit is fully assembled.

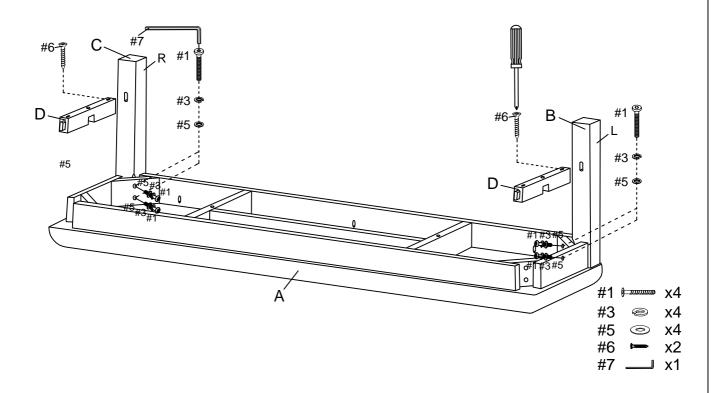


Step 2. Attach legs (parts B & C) to assembled unit (parts A & D) using long bolts (part #1), spring washers (part #3), large flat washers (part #5), screws (part #6), allen wrench (part #7) and phillips head screwdriver.

NOTE: Please do not fully tighten bolts until unit is fully assembled.

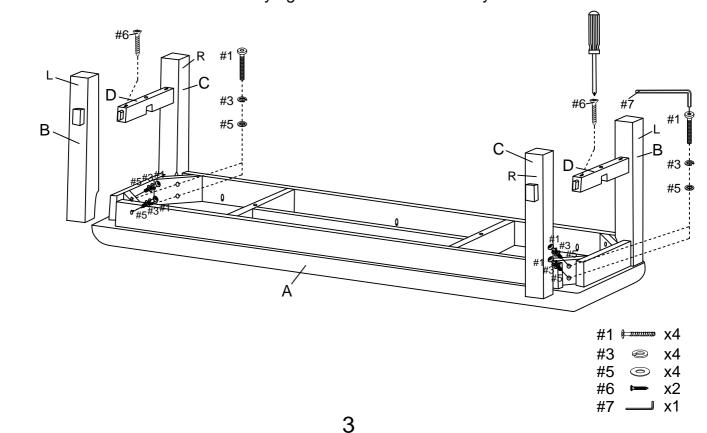

Step 3 . Attach center supports (part E) to seat (part A) and leg supports (part D) using bolts (part #2), spring washers (part #3), flat washers (part #4) and allen wrench (part #7).

NOTE: Please fully tighten all bolts at this time.

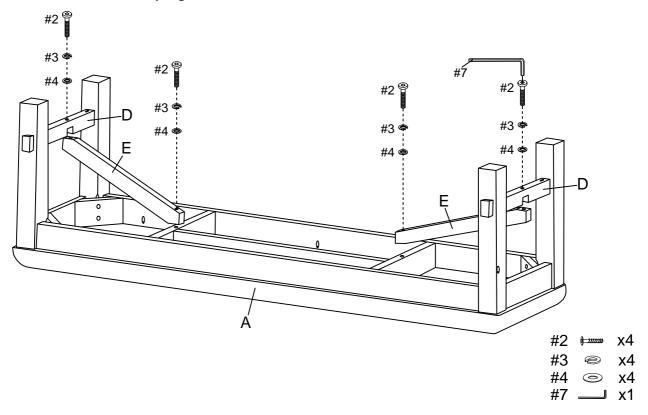

Step 4 . Carefully turn assembled unit upright.

