
 

 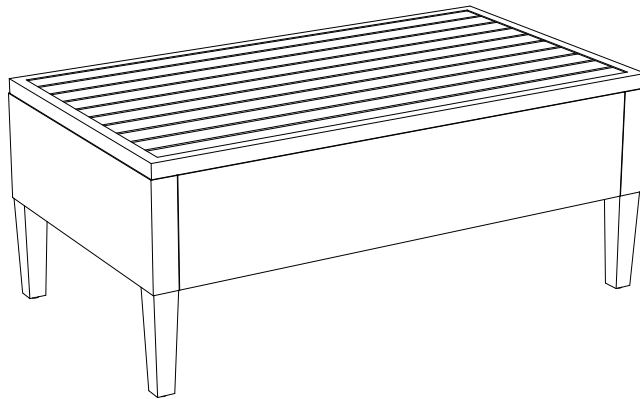




 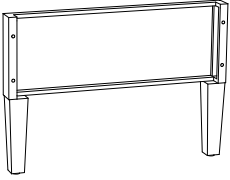


Outdoor Wicker Coffee Table
CO6225



PART LIST


<p>A</p> 	<p>B</p> 	<p>C</p> 
<p>Top Panel 1 PC</p>	<p>End Panel 2 PCS</p>	<p>Side Panel 2 PCS</p>




HARDWARE LIST

<p>#1</p>  <p>M6*35mm</p>	<p>#2</p>  <p>M6mm</p>	<p>#3</p>  <p>M6mm</p>
<p>Bolt 12 PCS (Extra 1)</p>	<p>Flat Washer 12 PCS (Extra 1)</p>	<p>Allen Wrench 1 PC</p>

Step 1. Lay top panel (part A) upside down on a soft flat surface, such as carpet, as shown below. Attach side panels (part C) to top panel (part A) using bolts (part #1), flat washers (part #2) and allen wrench (part #3).

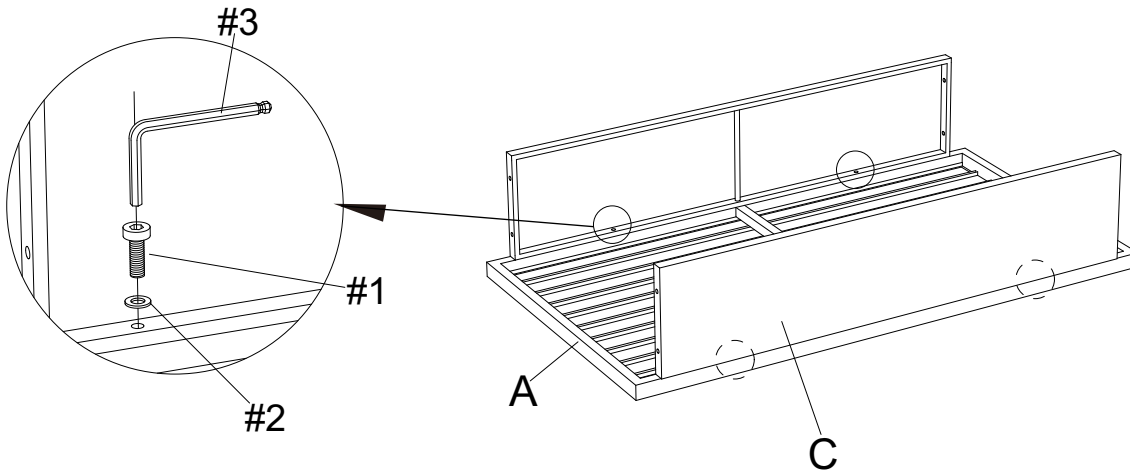NOTE: Please do not fully tighten bolts until unit is fully assembled.







- | | | |
|----|---|----|
| #1 |  | x4 |
| #2 |  | x4 |
| #3 |  | x1 |

Step 2. Attach end panels (part B) to top panel (part A) and side panels (part C) using bolts (part #1), flat washers (part #2) and allen wrench (part #3).

NOTE: Please fully tighten all bolts at this time.

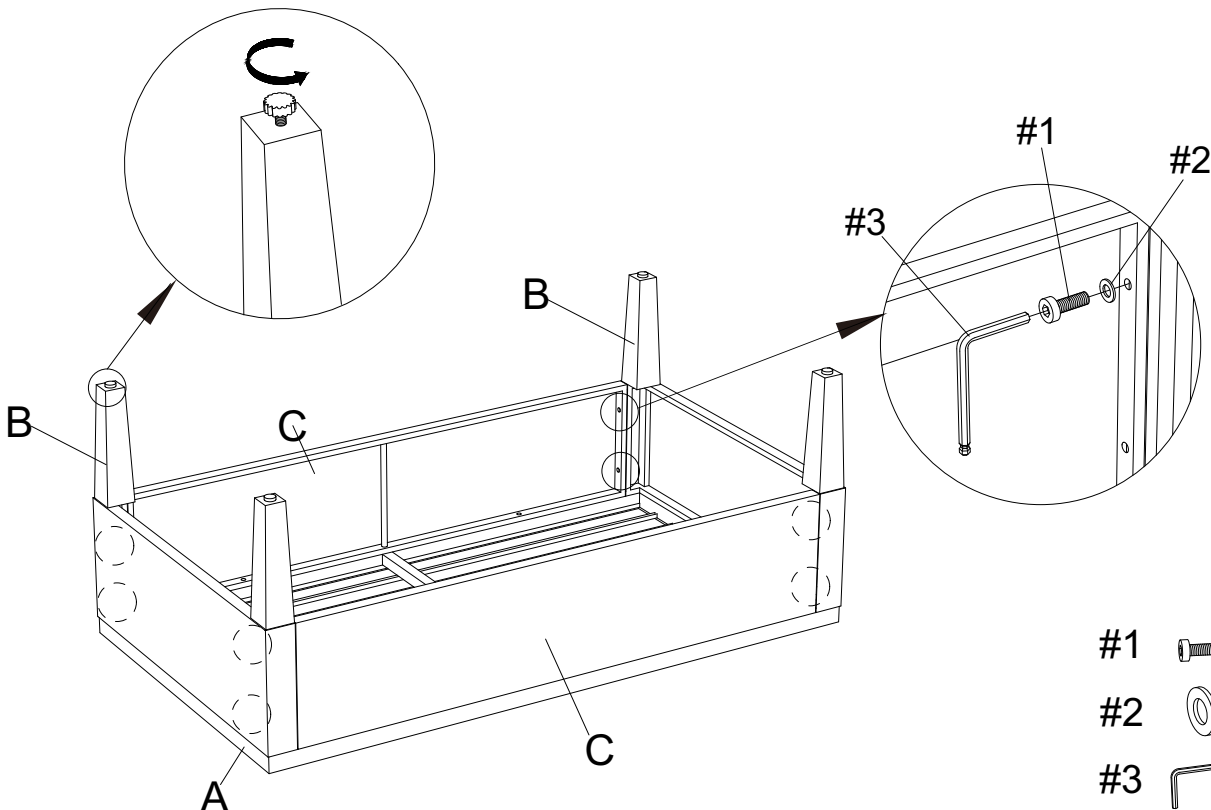It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.



- | | | |
|----|---|----|
| #1 |  | x8 |
| #2 |  | x8 |
| #3 |  | x1 |

Step 3. Carefully turn unit upright as shown below.

