


## Outdoor Wicker Arm Chair CO7168

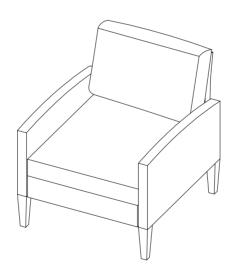

## PART LIST


A	B	C	D	E
Right Arm Panel 2 PCS	Left Arm Panel 2 PCS	Seat Panel 2 PCS	Back Panel 2 PCS	Back Cushion 2 PCS
F				
Seat Cushion 2 PCS	<u> </u>			

## HARDWARE LIST

#1	#2	#3		
	$\bigcirc$			
M6*35mm	M6mm	M6mm		
Bolt 20 PCS (Extra 2)	Flat Washer 20 PCS (Extra 2)	Allen Wrench 1 PC		


Step 1. Lay right arm panel (part A) upside down on a soft flat surface, such as carpet, as shown below. Attach seat panel (part C) to right arm panel (part A) using bolts (part #1), flat washers (part #2) and allen wrench (part #3).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

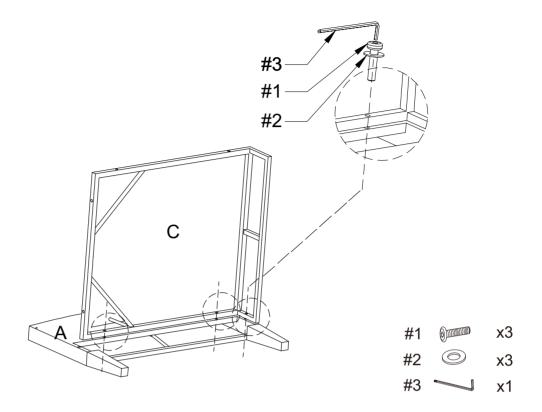


Step 2. Attach back panel (part D) to right arm panel (part A) and seat panel (part C) using bolts (part #1), flat washers (part #2) and allen wrench (part #3).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

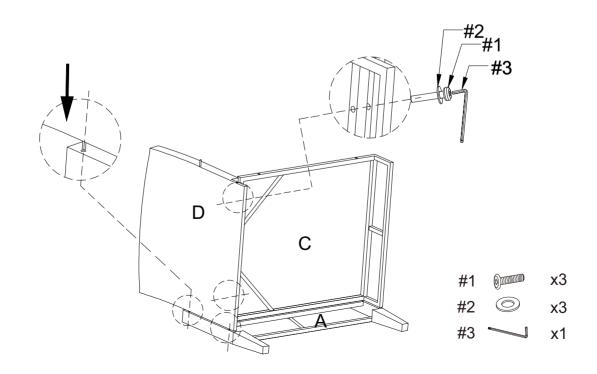

Step 3. Attach left arm panel (part B) to back panel (part D) and seat panel (part C) using bolts (part #1), flat washers (part #2) and allen wrench (part #3).

NOTE: Please fully tighten all bolts at this time.

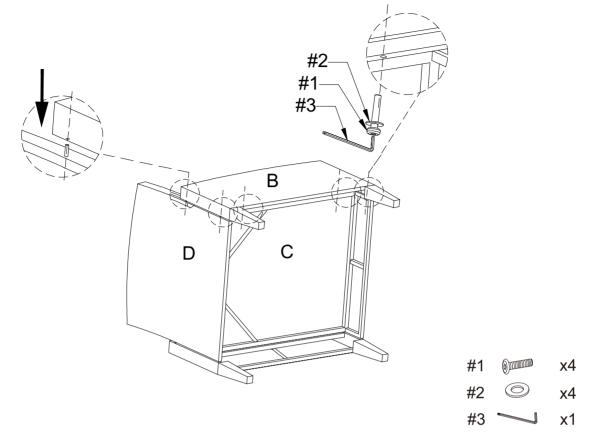

Step 4. Carefully turn unit upright. Add seat cushion (part F) and back cushion (part E) as shown below. Repeat steps 1-4 to assemble remaining chair.

