



## Outdoor Wicker Arm Chair CO7140

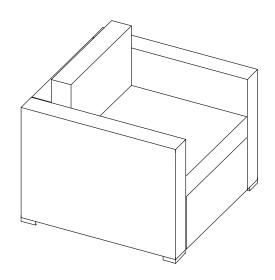

## PART LIST

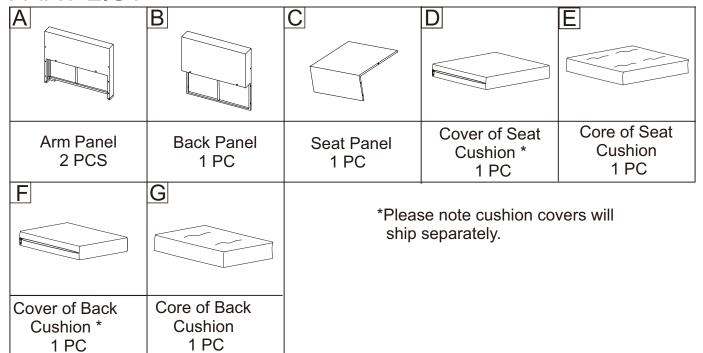

## HARDWARE LIST

#1	#2	#3	#4	#5
(1)				
M6*50mm	M6mm	D18mm	M6mm	M6mm
Bolt 16PCS	Nut 16 PCS	Washer 32 PCS	Wrench 1 PC	Allen Key 1 PC


## **EXTRA HARDWARE LIST**

#1	#2	#3
0		
M6*50mm	M6mm	D18mm
Bolt 1 PC	Nut 1 PC	Washer 1 PC

1 PC


Step 1. Lay back panel (part B) down on a soft flat surface, such as carpet, as shown below. Attach arm panel (part A) to back panel (part B) using bolts(part #1),washers (part #3), nuts (part #2),wrench(part #4) and allen key (part #5).

NOTE:Please do not fully tighten bolts until unit is fully assembled.

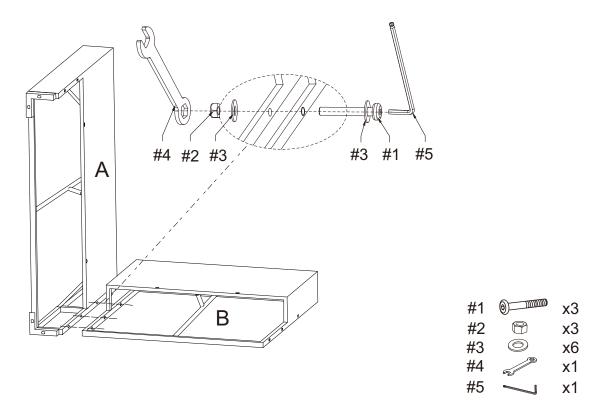


Step 2. Attach seat panel (part C) to assembled unit (parts A&B) using bolts (part #1), washers (part #3), nuts (part #2), wrench (part #4) and allen key (part #5).

NOTE:Please do not fully tighten bolts until unit is fully assembled.

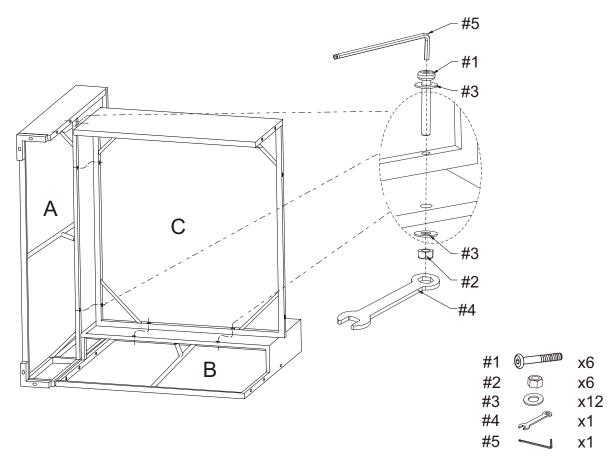


Step 3. Attach arm panel (part A) to assembled unit (parts C&B) using bolts (part #1), washers (part #3), nuts (part #2), wrench (part #4) and allen key (part #5).

NOTE: Please fully tighten all bolts at this time.

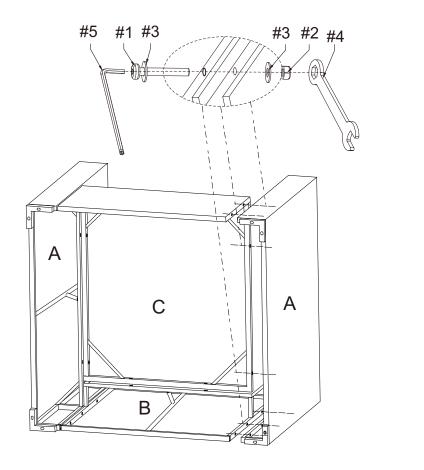

Step 4.Insert core of seat cushion (part E) into cover of seat cushion (part D). Insert core of back cushion (part G) into cover of back cushion (part F).

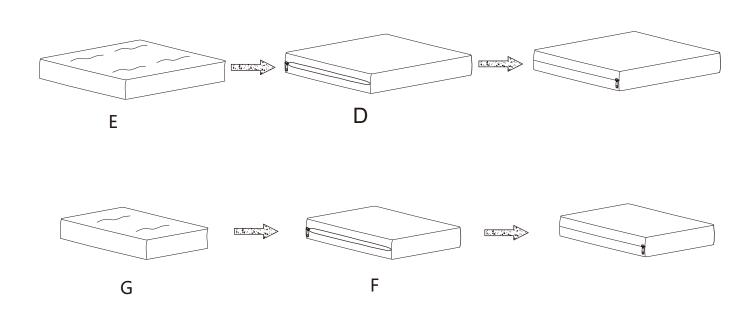

Step 6. Carefully turn the assembled chair upright and add cushions as shown below.

