

- Please check your product packaging to make Sure the included accessories are in the "list of standard accessories".if any parts are missing, please contact your local dealer immediately
- Do not allow any sharp objects to come in contact with the cabinet, as it will scratch the surface
- Continuous and prolonged exposure to direct sunlight may cause discoloration to the wood.
- Continuous and prolonged exposure to direct sunlight may cause discoloration to the wood.
- Please avoid using cleaning products that contain bleach or ammonia.
- Wood surface should only be cleaned with wood care products such as soapy water or furniture polish.

: NO·	-60X30-	DCMD


_	
l	

	2.56"
<u>6</u> 1.1 <u>4</u> "	1
	31.61"

ERECTING TOOL



DRAWER'S ADJUST

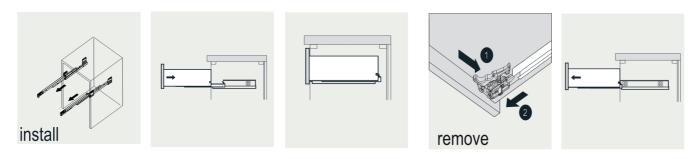

INSTALLATION INSTRUCTIONS

