



- Please check your product packaging to make Sure the included accessories are in the "list of standard accessories".if any parts are missing, please contact your local dealer immediately
- Do not allow any sharp objects to come in contact with the cabinet, as it will scratch the surface
- Continuous and prolonged exposure to direct sunlight may cause discoloration to the wood.
- Continuous and prolonged exposure to direct sunlight may cause discoloration to the wood.
- Please avoid using cleaning products that contain bleach or ammonia.
- Wood surface should only be cleaned with wood care products such as soapy water or furniture polish.

MODLE NO: EVMR34-36X30-LED

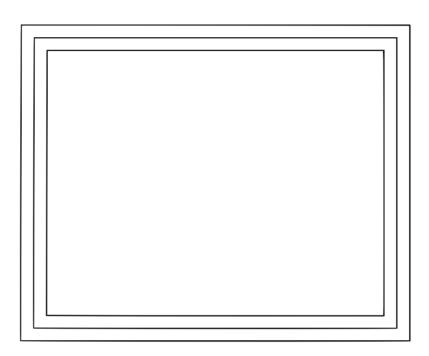


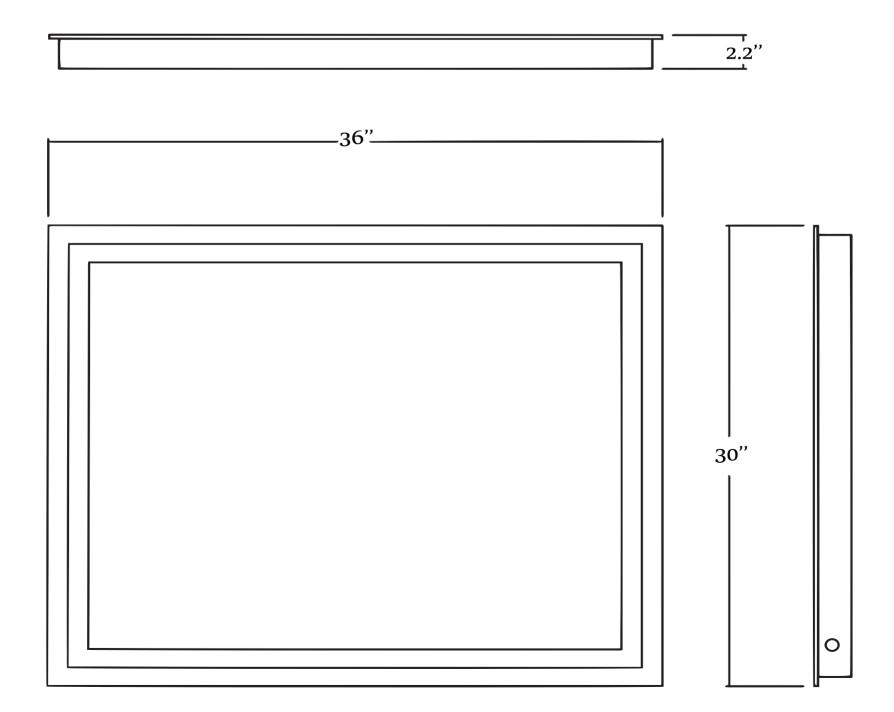

ERECTING TOOL



DRAWER'S ADJUST

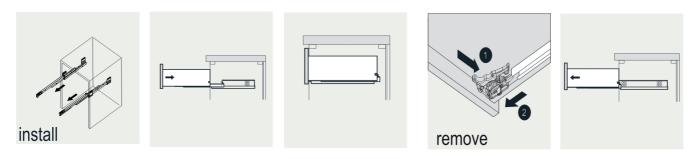

INSTALLATION INSTRUCTIONS

