



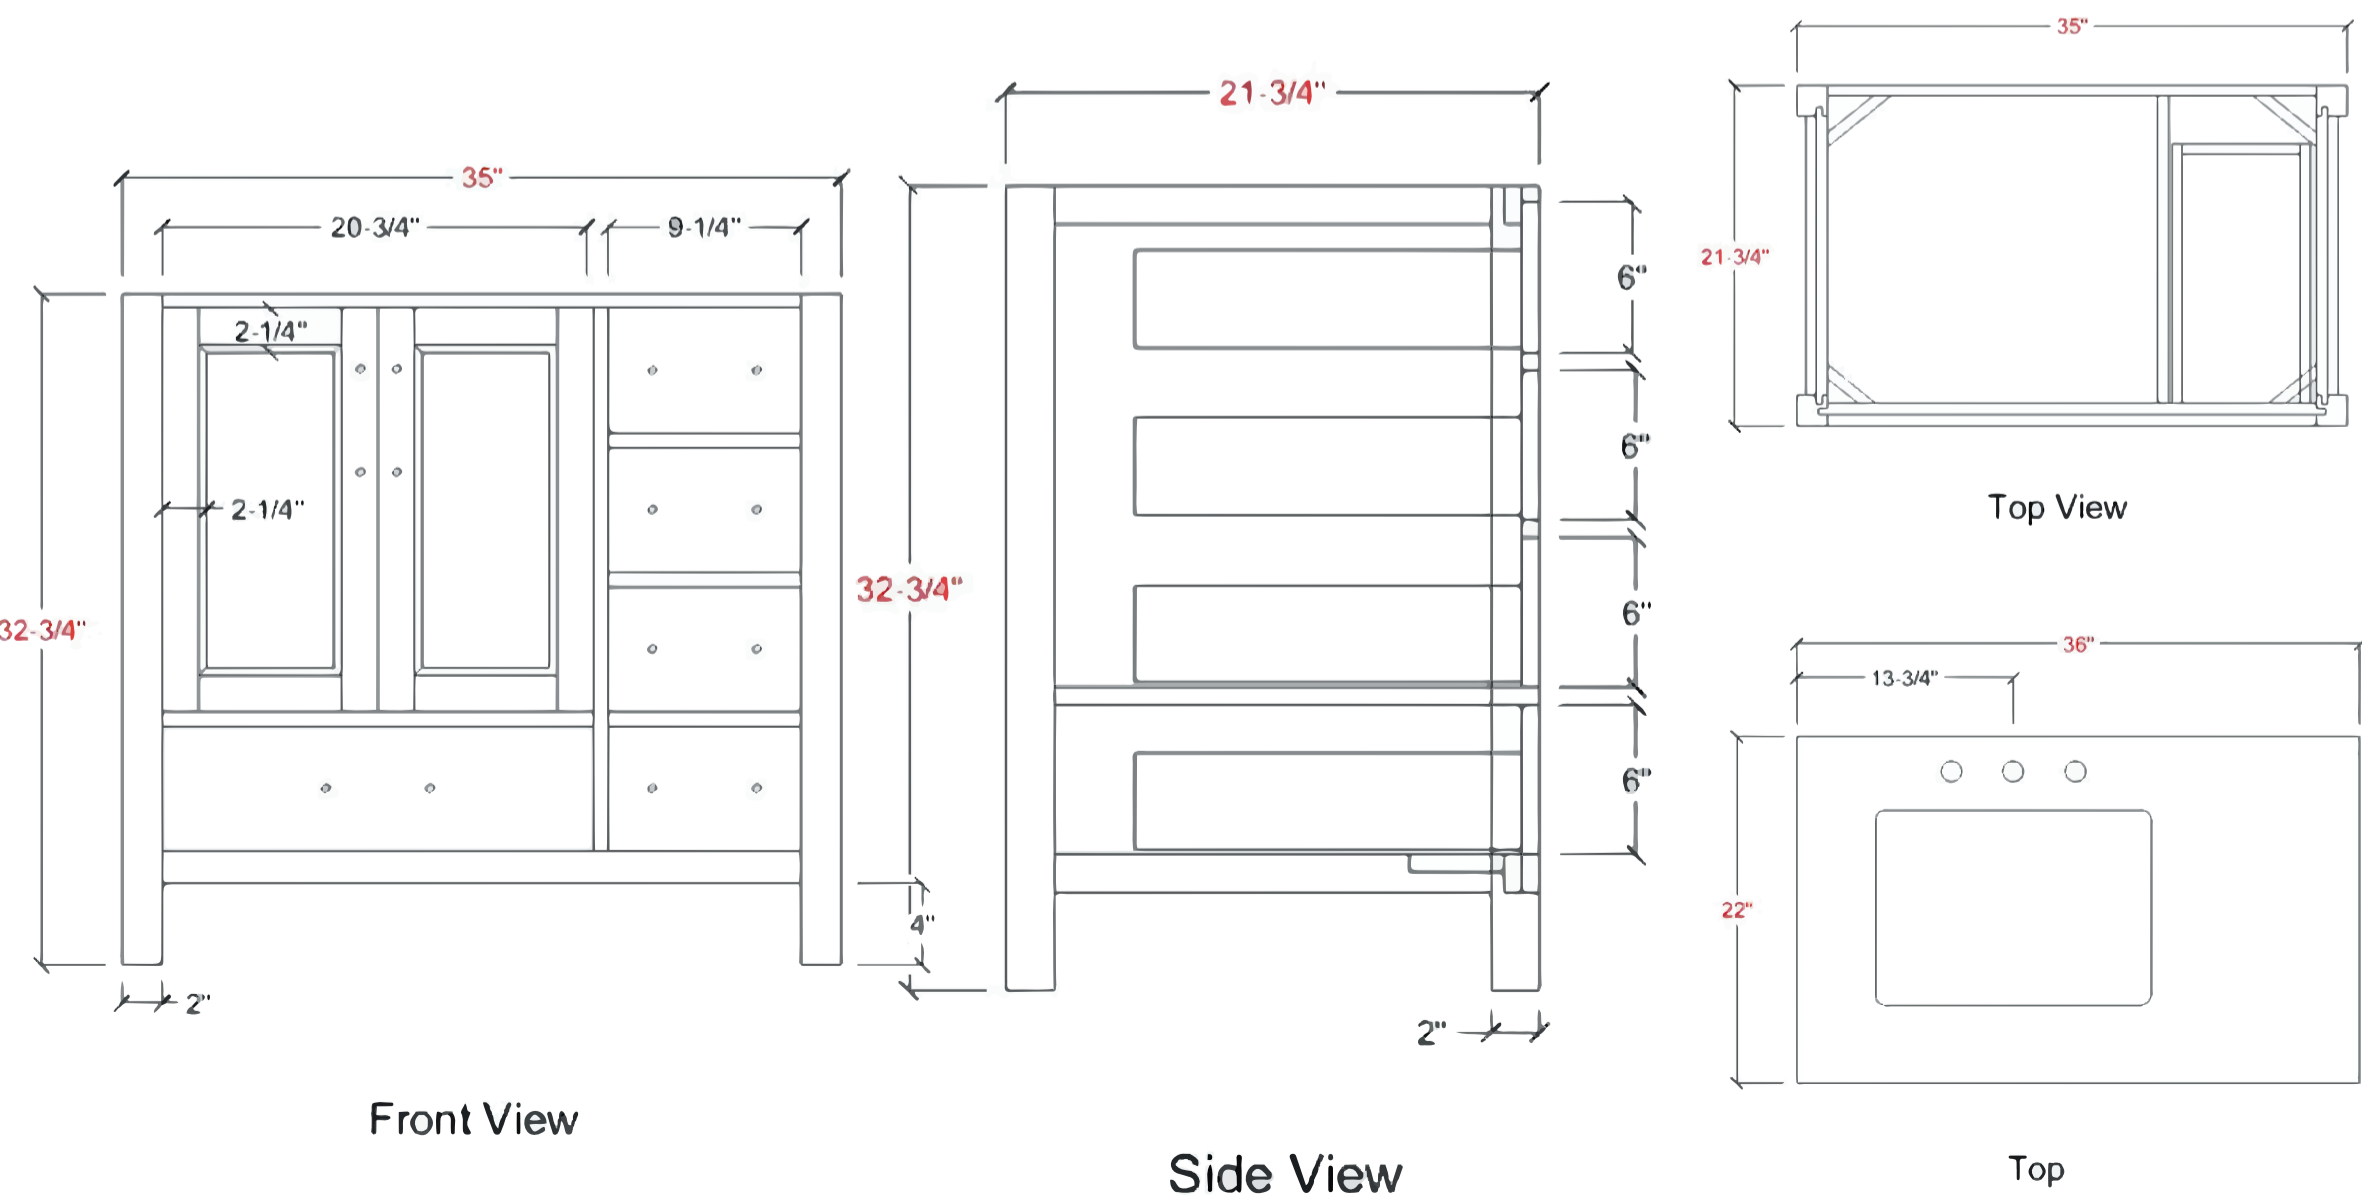

MODEL NO : EVVN413-36BLU

- Please check your product packaging to make sure the included accessories are in the "list of standard accessories". If any parts are missing, please contact your local dealer immediately.
- Do not allow any sharp objects to come in contact with the cabinet, as it will scratch the surface.
- Continuous and prolonged exposure to direct sunlight may cause discoloration to the wood.
- Continuous and prolonged exposure to direct sunlight may cause discoloration to the wood.
- Please avoid using cleaning products that contain bleach or ammonia.
- Wood surface should only be cleaned with wood care products such as soapy water or furniture polish.

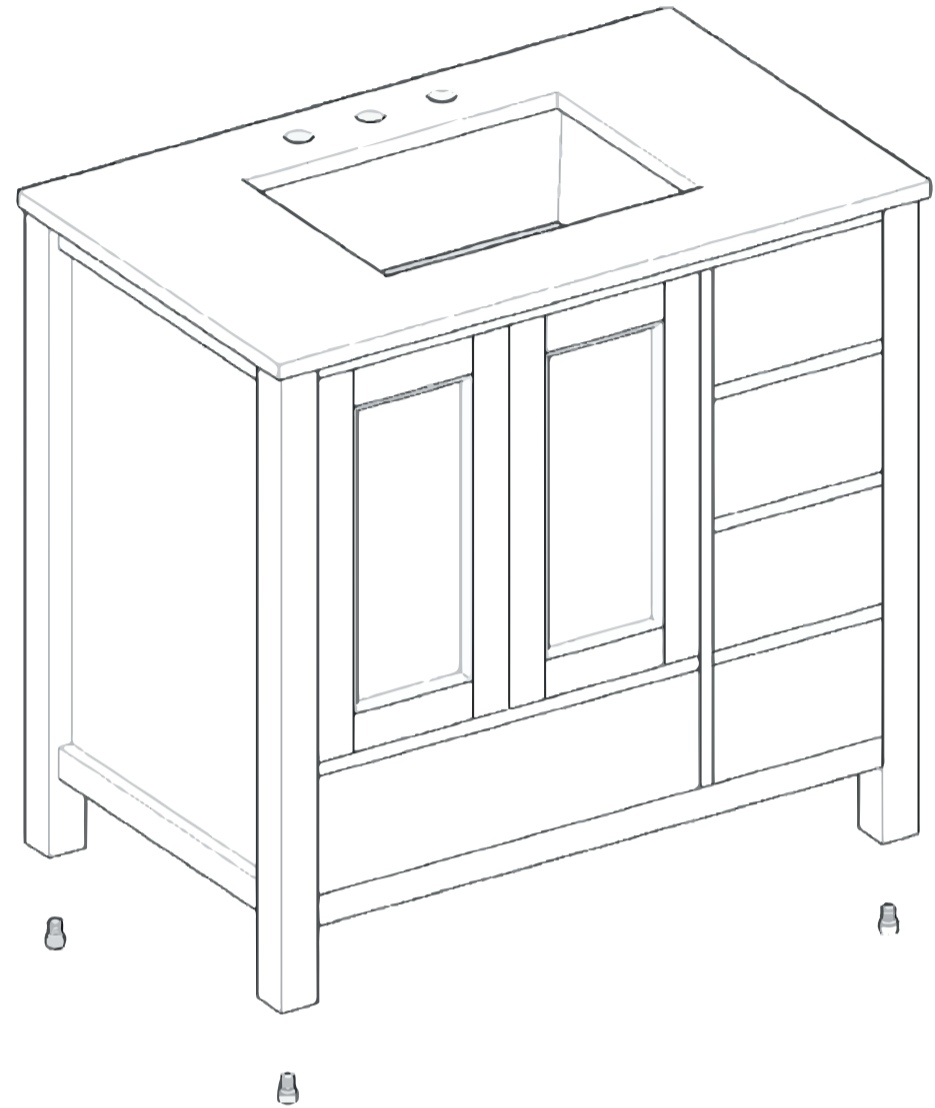


Front View


Side View

Top

ERECTING TOOL

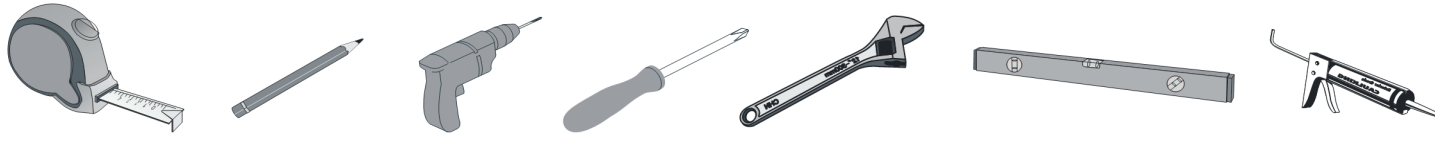

DRAWER'S ADJUST

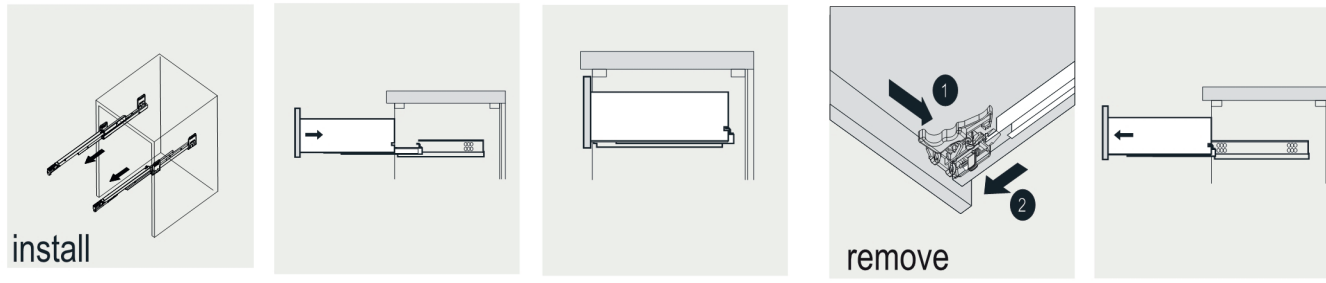

INSTALLATION INSTRUCTIONS

