
 
Weatherly Garden Bench

 
Assembly Guide



HARDWARE

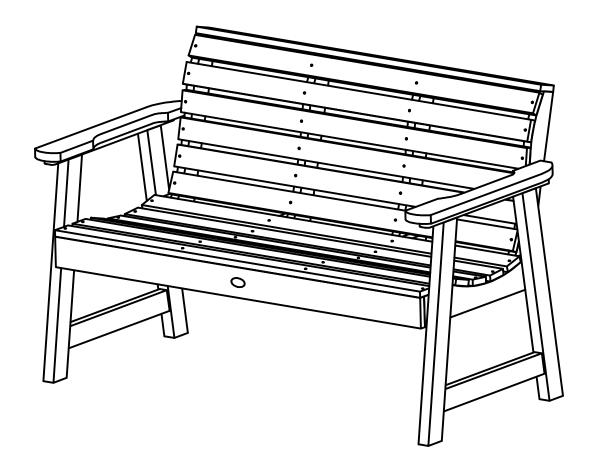





IMPORTANT!

DO NOT fully tighten the bolts until all bolts are started. Once all bolts are inserted, go back & tighten all the bolts.

Retain these instructions for future reference

INCLUDED TOOLS


5/32" HEX KEY

 
1) Attach Back To Seat Using Six "A" Bolts as Shown.



For information on Care and Cleaning or to register your *highwood*® product, please visit www.highwood-usa.com.

BENW3/4 10.31.2016 PAGE 1 OF 2

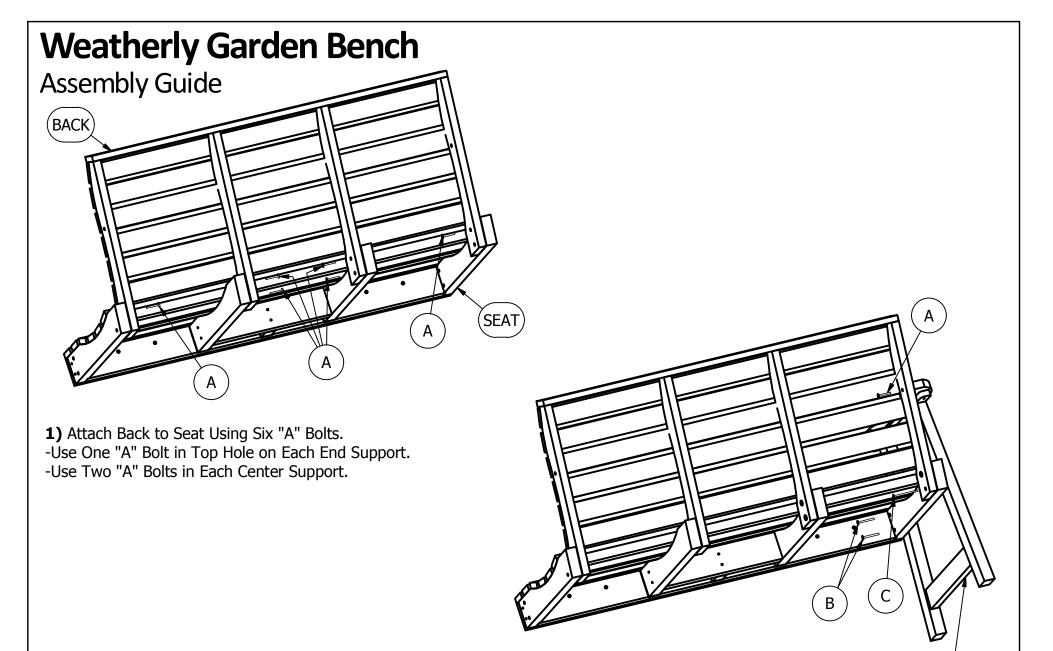



3) Repeat on Other Side.



For information on Care and Cleaning or to register your *highwood*® product, please visit www.highwood-usa.com.

BENW3/4 10.31.2016 PAGE 2 OF 2

LEG ASSEMBLY