

#### INSTALLATION INSTRUCTIONS

K1-4200

SINGLE HANDLE THERMOSTATIC ROUGH, TO SUIT K1-4400 & K1-4401


K1-4400


SINGLE CROSS HANDLE THERMOSTATIC TRIM ONLY, TO SUIT K1-4200 ROUGH


K1-4401

SINGLE LEVER THERMOSTATIC TRIM ONLY, TO SUIT K1-4200 ROUGH

K1-4200 K1-4400

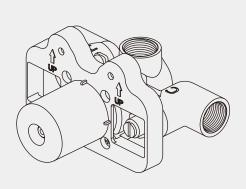

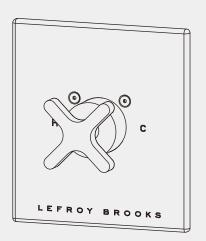


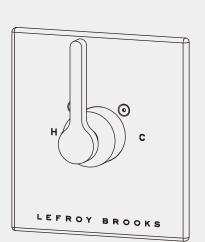


K1-4401

## **Dimensions** in Inches (& Millimetres)

K1-4200

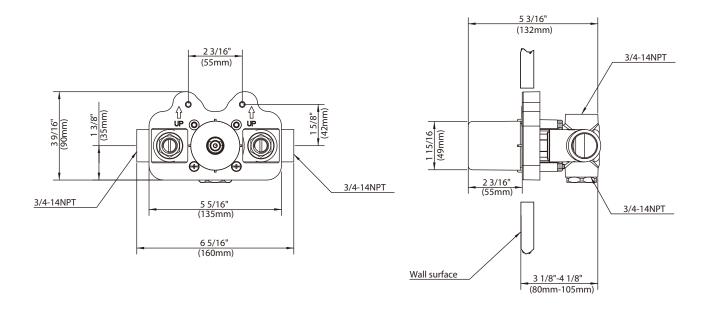

K1-4400 K1-4401

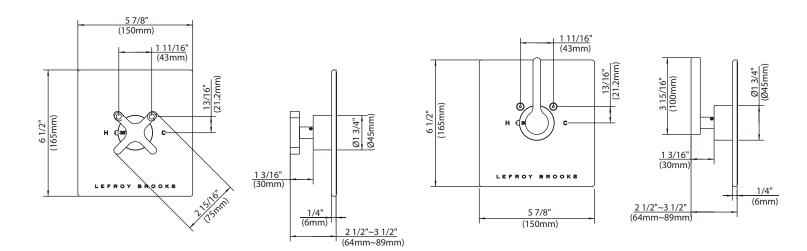

## What you need to know

### **Tools:**

Adjustable Wrench Groove Joint Pliers Hacksaw Phillips Screwdriver Pipe Tape Spatula Spirit Level



### **Maintenance**

Your new bathroom faucet is designed for years of trouble-free performance.

Keep it looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, wire wool and harsh chemicals as these will dull the finish and void your warranty.

## **Safety Tips**

If you are soldering during faucet installation, remove cartridges, seats, gaskets and washers prior to applying flame, otherwise you will void the warranty.

Cover drain openings to avoid losing small parts.

When cutting or soldering pipe, use safety glasses to protect your eyes.

## **Important Points**

Prior to beginning installation. turn off the cold and hot water lines and open the old faucet to release built-up pressure.

Overtightening nuts may cause damage.

Wrap all threaded connections with pipe tape available at your local plumbing supply store. Always wrap in a clockwise direction. The fittings should be installed by a state-licenced plumber.

#### Please note:

When there is a difference in water pressure between hot and cold supplies to the mixing valve, the pressures should by equalized by a plumber in accordance with best practice and legislation.


## **Things You May Need**

Correct installation may vary depending on previous faucet installation. All necessary supplies required for faucet installation are not included, but may be found where plumbing supplies are sold. It is suggested that IAPMO and/or CSA approved plumbing supplies are used during installation.

## **Standards**

IAPMO/cUPC Listed Meets A112.18.1 Meets ASSE 1016

### **Flow Rate**

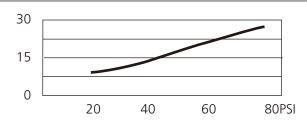


#### Please note:

Final achievable flow rate is dependent on the outlets fitted, see relevant outlets (spouts, roses, sprays) for fully assembled product flow rate.

## Steps 1-4

## **Installation Procedure**

Lefroy Brooks always recommends that plumbing products be installed by a licensed professional. Shut off main water supply before installation.

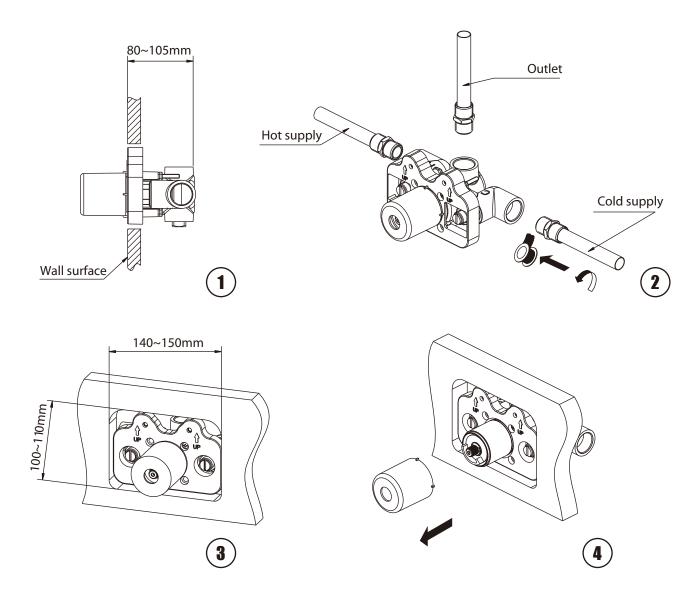


- Before installing the valve into the wall, please note that a distance between 80mm~105mm from the wall surface to the rear of the valve should be left so that can fit the trim kit further.
- Install valve assembly into the wall.
- Cut a hole on the wall surface for fitting the trim kit. The hole dimension is as the figure instructed.
- Throw away the protective caps just while the building construction is completed and you are ready to fit the trim kit in.

## Steps 5-8

## **Installation Procedure**

Lefroy Brooks always recommends that plumbing products be installed by a licensed professional. Shut off main water supply before installation.

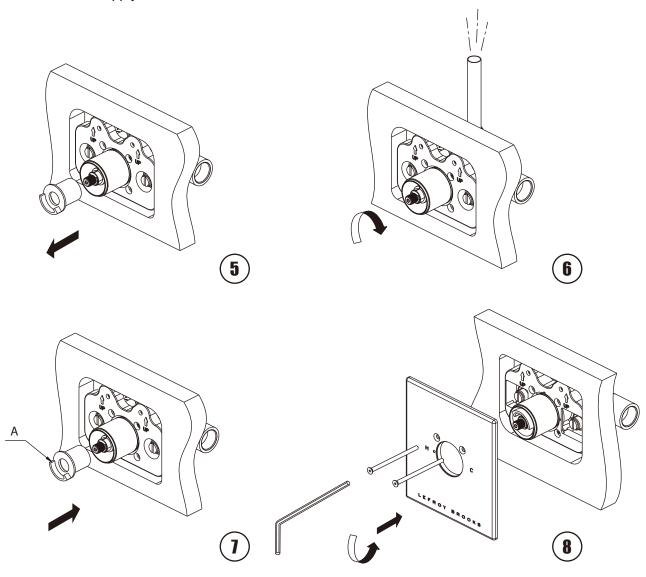

- Take out the stopper.
- Turn on the flow controller. Turn the thermostatic cartridge till you get the water temperature at 38°.


Suggestion: attach a hose to the outlet and guide water to basin or a receiver to get the temperature and prevent it from wetting the floor.


- Fix the stopper and make sure its "A" plane as mentioned is horizontal and on the left side.
- Fix the front plate with screws.

# **Steps 9-11**

## **Installation Procedure**

Lefroy Brooks always recommends that plumbing products be installed by a licensed professional. Shut off main water supply before installation.

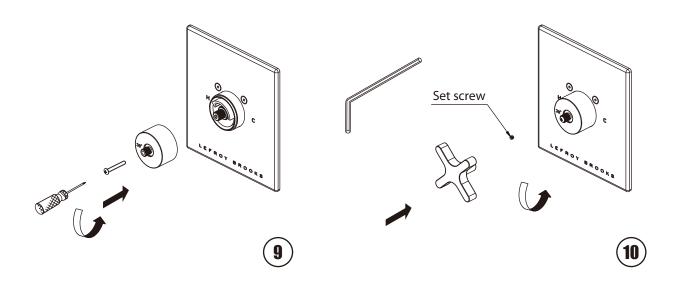

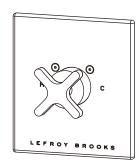



Finish.

- Fix the canopy with screw. When it is fixed, the temperature-limit-button is at horizontal position.
- Install handle assembly with set screws.

# **Exploded View**

### **Parts List**

K1-4200 Spindle (017119) O-ring (048038) 2 3 Nut (009111) 4 O-ring (063060) 5 Spring (005060) Cartridge (024092) 6 7 Oil-seal (010113) 8 Body (076706) Plug (028604) 9 O-ring (048017) 11 Thermostatic cartridge (507132) 12 Pin (003146) 11 13 Adjusting ring (104061) 12 13 14 Stopper (049108) 14 15 Sleeve (041754) Plaster guard (127214) 16 Screw (008230) 17 K1-4400 Handle (069688) 2 Extension stem (110405) 3 Screw (008772) 4 Screw (008154) 10, 5 Screw (008994) 6 Button (036276) 7 Spring (005157) 8 Canopy (018421-50) 9 Pin (003153) Screw (008793) 10 11 Front panel (006506-52) 12 Seal (068328) Allen wrench (031000) 13 14 Allen wrench (031003) K1-4401 Handle (069699) 2 Extension stem (110405) 3 Screw (008772) Screw (008154) 5 Button (036276) 6 Screw (005157) 7 Spring (008994) 8 Canopy (018421-50) Pin (003153) 10 Front panel (006506-52) Screw (008793) 11 12 Seal (068328)

Allen wrench (031000)

Allen wrench (031003)

13

14

### For additional assistance or service call

718-302-5292

9am to 5pm EST Monday to Friday



www.lefroybrooks.com

LEFROY BROOKS INC, 1828 TROUTMAN STREET, RIDGEWOOD, NY, 11385 TELEPHONE: 718-302-5292. FAX: 718-302-4177