

INSTALLATION INSTRUCTIONS


M1-4202


THREE HANDLE THERMOSTATIC ROUGH WITH 2 FLOW CONTROLS, TO SUIT M1-4403 & X1-2012

M1-4403

CROSS HANDLE THERMOSTATIC WITH TWO LEVER FLOW CONTROL TRIM ONLY, TO SUIT M1-4202 ROUGH


M1-4202 M1-4403

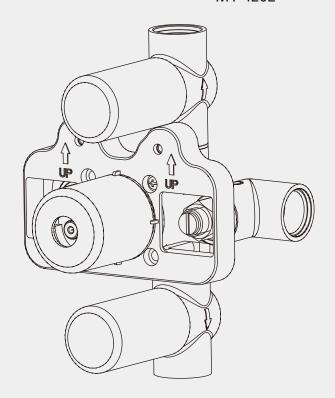


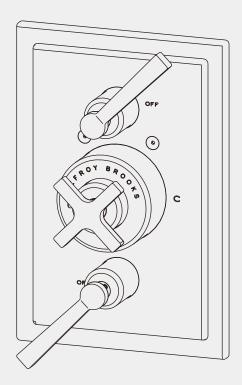


Dimensions in Inches (& Millimetres)


M1-4202

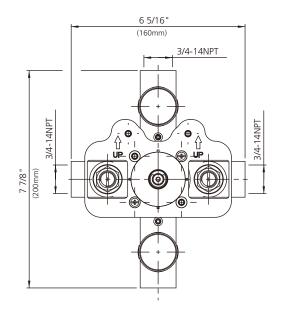

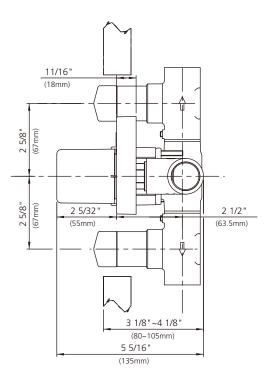

M1-4403

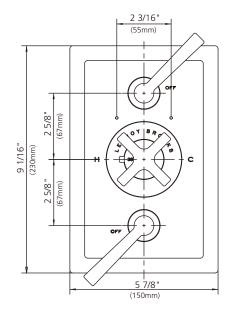

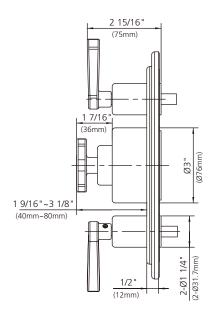

Whilst every effort is made to ensure accuracy, design and dimensions are subject to change without notice as part of the company's product development process.

What you need to know

Tools:

Adjustable Wrench Groove Joint Pliers Hacksaw Phillips Screwdriver Pipe Tape Spatula Spirit Level



Maintenance

Your new bathroom faucet is designed for years of trouble-free performance.

Keep it looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, wire wool and harsh chemicals as these will dull the finish and void your warranty.

Safety Tips

If you are soldering during faucet installation, remove cartridges, seats, gaskets and washers prior to applying flame, otherwise you will void the warranty.

Cover drain openings to avoid losing small parts.

When cutting or soldering pipe, use safety glasses to protect your eyes.

Important Points

Prior to beginning installation. turn off the cold and hot water lines and open the old faucet to release built-up pressure.

Overtightening nuts may cause damage.

Wrap all threaded connections with pipe tape available at your local plumbing supply store. Always wrap in a clockwise direction. The fittings should be installed by a state-licenced plumber.

Please note:

When there is a difference in water pressure between hot and cold supplies to the mixing valve, the pressures should by equalized by a plumber in accordance with best practice and legislation.


Things You May Need

Correct installation may vary depending on previous faucet installation. All necessary supplies required for faucet installation are not included, but may be found where plumbing supplies are sold. It is suggested that IAPMO and/or CSA approved plumbing supplies are used during installation.

Standards

IAPMO/cUPC Listed Meets A112.18.1 Meets ASSE 1016 (M1-4202 only)

Flow Rate

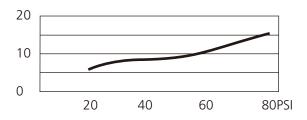


Please note:

Final achievable flow rate is dependent on the outlets fitted, see relevant outlets (spouts, roses, sprays) for fully assembled product flow rate.

Steps 1-4

Installation Procedure

Lefroy Brooks always recommends that plumbing products be installed by a licensed professional. Shut off main water supply before installation.

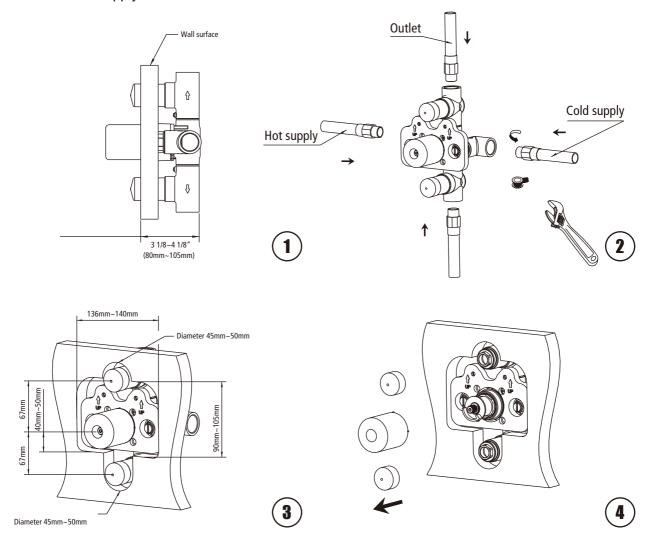


- Before installing the valve into the wall, please note that a distance between 80mm~105mm from the wall surface to the rear of the valve should be left so that the trim can be fitted correctly.
- Install valve assembly into the wall.
- Cut a hole on the wall surface for fitting the trim kit. The hole dimension is as shown in figure 3.
- Throw away the protective caps only when building construction is completed and you are ready to fit the trim kit in.

Steps 5-8

Installation Procedure

Lefroy Brooks always recommends that plumbing products be installed by a licensed professional. Shut off main water supply before installation.

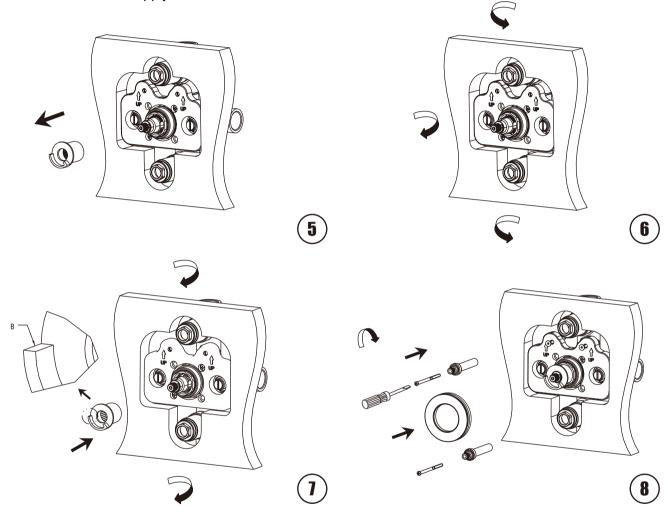



- Take out the stopper.
- Turn on the flow controller. Turn the thermostatic cartridge until the water temperature is at 38. Suggestion: attach a hose to the outlets and guide the water to the basin or another container to test the temperature and prevent it from spilling on the floor.
- Turn off the water supply. Install the stopper and make sure its "B" plane as shown is horizontal and on the left side.
- Fix the stem extension and the adjusting ring.

Steps 9-12

Installation Procedure

Lefroy Brooks always recommends that plumbing products be installed by a licensed professional. Shut off main water supply before installation.

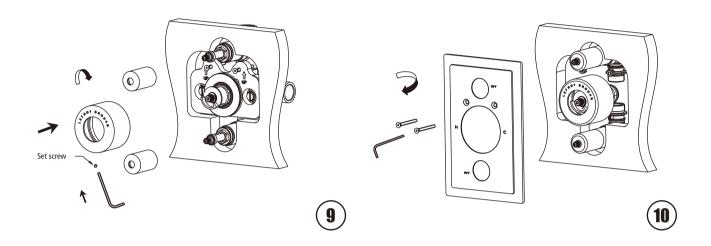

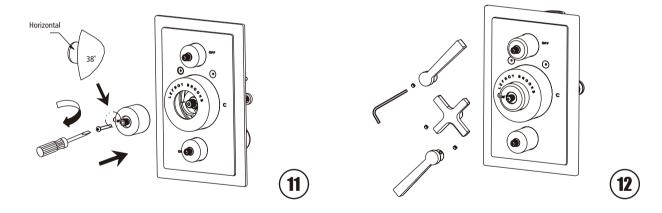


Install the canopies.

- Fix the canopy with screw. When it is fixed, check that the temperature-limit-button is in the horizontal position.
- Fix the front plate with screws.

 12 Install handle assembly with set screws.

Exploded View

Parts List

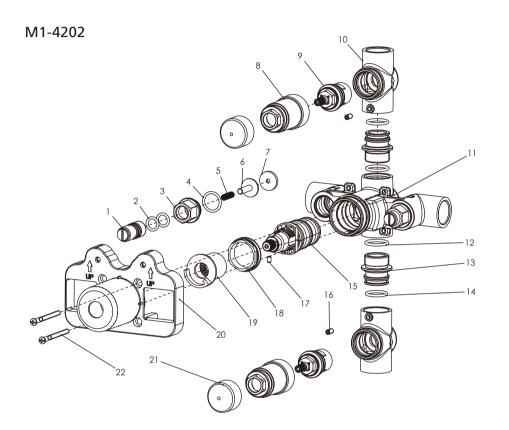

1	Spindle (017119)
2	O-ring (048038)
3	Nut (009111)
4	O-ring (063060)
5	Spring (005060)
6	Cartridge (024092)
7	Oil-seal (010113)
8	Sleeve (067946)
9	Cartridge assembly (50

9 Cartridge assembly (507455) 10 Body (076707) 11 Body (076706) 12 O-ring (048017)

12 O-ring (048017) 13 Adaptor (067945) 14 O-ring (004096N)


15 Thermostatic cartridge (507132)

16 Set screw (053009) 17 Pin (003146)

18 Adjusting ring (104061) 19 Stopper (049108) 20 Plaster guard (127215)

21 Rubber protective cap (045432)

22 Screw (008241)

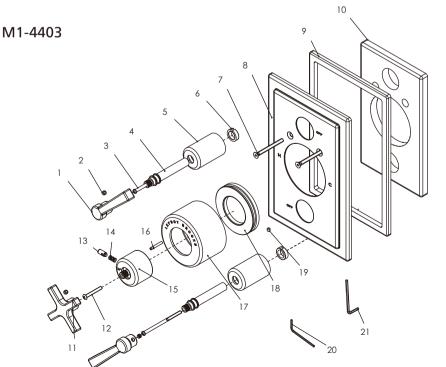

Handle (029686) 2 Set screw (292598) Screw (008196) 3 Spindle (110386) Canopy (018960) 5 Clip (012242) 6 7 Screw (008186) 8 Front panel (006582-50) 9 Seal (010939) 10 Seal (013817) 11 Handle (029685) 12 Screw (008994) 13 Button (036272) Spring (005157) 14 Adaptor (067960-50) 15 16 Pin (003147) 17 Canopy (018959-50) Adjusting ring (104295) 18 Set screw (065086) 19 20 Allen wrench (031003) Allen wrench (031000)

For additional assistance or service call

718-302-5292

9am to 5pm EST Monday to Friday



www.lefroybrooks.com

LEFROY BROOKS INC, 1828 TROUTMAN STREET, RIDGEWOOD, NY, 11385 TELEPHONE: 718-302-5292. FAX: 718-302-4177