


Rotating TV Wall Mount

Instruction Manual

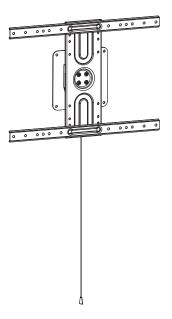

SKU: MOUNT-VW080P



Scan the QR code with your mobile device or follow the link for helpful videos and specifications related to this product.

https://vivo-us.com/products/mount-vw080p

GET IN TOUCH | Monday-Friday from 7:00am-7:00pm CST



help@vivo-us.com



www.vivo-us.com Chat live with an agent!



309-278-5303


NARNING!

If you do not understand these directions, or if you have any doubts about the safety of the installation, please call a qualified technician. Check carefully to make sure there are no missing or defective parts. Improper installation may cause damage or serious injury. Do not use this product for any purpose that is not explicitly specified in this manual. Do not exceed weight capacity. We cannot be liable for damage or injury caused by improper mounting, incorrect assembly or inappropriate use.



WARNING: CHOKING HAZARD

SMALL PARTS - NOT FOR CHILDREN UNDER 3 YEARS. ADULT SUPERVISION IS REQUIRED.

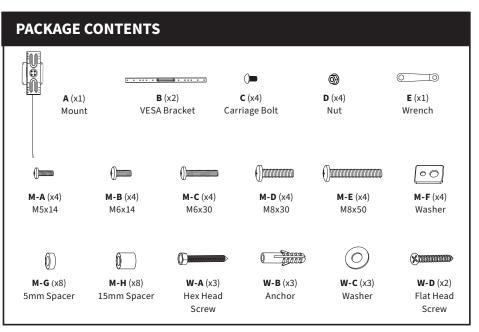

TOOLS NEEDED

NOTE: SOME HARDWARE INCLUDED MAY NOT BE USED















DO NOT INSTALL INTO DRYWALL ALONE. VERIFY YOUR WALL CONSTRUCTION. USE WOOD STUDS TO MOUNT. We include mounting for brick and concrete walls. If unsure, please contact us at vivo-us. com, email at help@vivo-us.com, or call us at 309-278-5303.


DO NOT EXCEED WEIGHT CAPACITY.

Failure to do so may result in serious injury.




ASSEMBLY STEPS

STEP 1

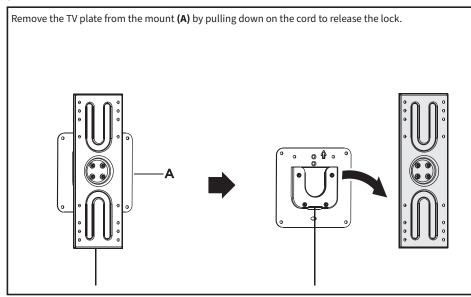


OPTION A: WOOD STUD WALL


Using the center holes on the mount, mark drilling locations. Use of a stud finder is highly recommended. Drill 2.4" (60mm) deep holes using a 3/16" (4.5mm) drill bit, and secure the mount to the wall using flat head screws (W-D) in upper two holes, and hex head screw (W-A) with washer (W-C) in the lower hole.

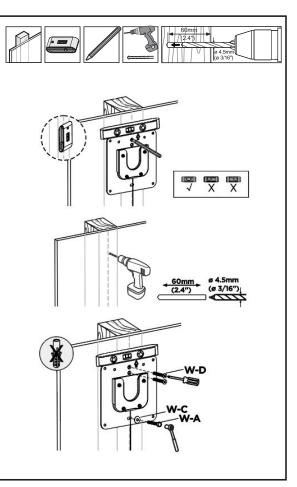

STEP 2 (Continued)

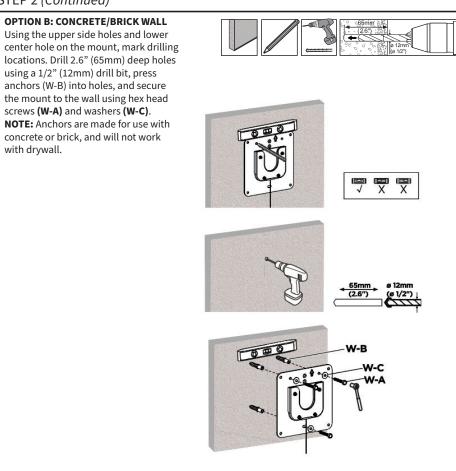



STEP 3

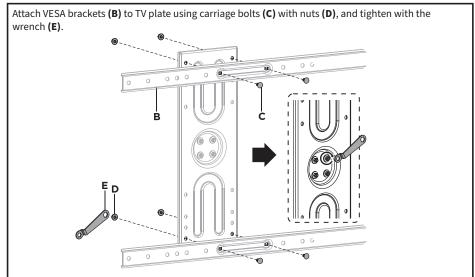

With TV face down on a flat surface, secure assembled VESA brackets to the TV using bolts (M-A, M-B, M-C, M-D, M-E) and washers (M-F). Use spacers (M-G, M-H) between the TV and brackets if needed.



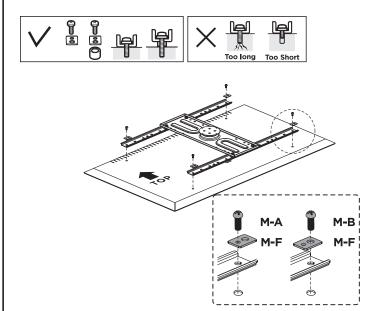

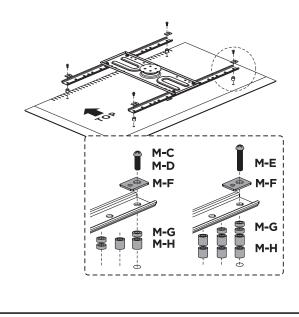

STEP 5

Carefully place the TV plate with brackets and TV into the opening on top of the mount until the latch has engaged. The cord may be hidden by attaching to any part of the steel mount.




 


STEP 6

Freely rotate the TV to the desired position and adjust the tilt as desired. To remove the TV, pull down on the cord to release the latch, then lift the TV off from the mount.



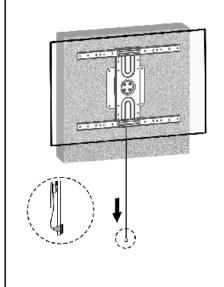



NOTE: To ensure safety at all times it is recommended that the mount be firmly attached to the mounting plate and wall. Also, ask another person for assistance whenever ransitioning from Landscape to Portrait positions.







Open Monday - Friday 7:00am - 7:00pm CST,

our dedicated support team can offer immediate assistance with rapid response times. If any parts are received damaged or defective, please contact us. We are happy to replace parts to ensure you have a fully functioning product.



309-278-5303

AVG. RESOLUTION TIME (within office hrs): 5M 4S



www.vivo-us.com Chat live with an agent! AVG. RESOLUTION TIME (within office hrs): < 15 M



help@vivo-us.com

AVG. RESPONSE TIME (within office hrs): 1HR 8M

- 23% within < 15m
- 38% within < 30m
- 61% within < 1hr
- 83% within < 2hr
- 92% within < 3hr