




100" Collapsible Green Screen

Instruction Manual

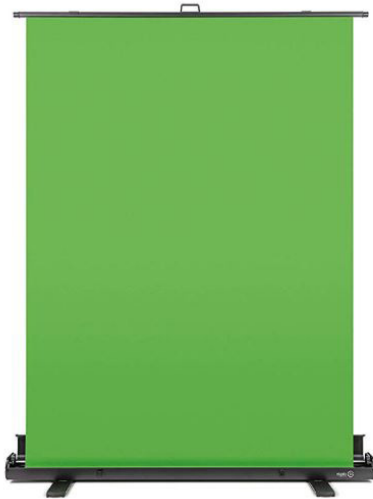

SKU: PS-TP-100G



Scan the QR code with your mobile device or follow the link for helpful videos and specifications related to this product.

<https://vivo-us.com/products/ps-tp-100g>

GET IN TOUCH | Monday-Friday from 7:00am-7:00pm CST



help@vivo-us.com



www.vivo-us.com
Chat live with an agent!



309-278-5303

WARNING!

If you do not understand these directions, or if you have any doubts about the safety of the installation, please call a qualified technician. Check carefully to make sure there are no missing or defective parts. Improper installation may cause damage or serious injury. Do not use this product for any purpose that is not explicitly specified in this manual. Do not exceed weight capacity. We cannot be liable for damage or injury caused by improper mounting, incorrect assembly or inappropriate use.

WARNING: CHOKING HAZARD

SMALL PARTS - NOT FOR CHILDREN UNDER 3 YEARS. ADULT SUPERVISION IS REQUIRED.

WARNING: FOLLOW INSTRUCTIONS TO PREVENT PRODUCT DAMAGE AND/OR PERSONAL INJURY:

- DO **NOT** FOLD SCREEN
- DO **NOT** USE FINGERS OR HARD OBJECTS TO TOUCH SCREEN SURFACE
- DO **NOT** SPLASH LIQUIDS OR CHEMICALS ON SCREEN SURFACE
- KEEP SCREEN **AWAY** FROM HOT OBJECTS OR FIRE.


TIPOVER WARNING

SERIOUS OR FATAL CRUSHING INJURIES CAN OCCUR FROM TIPOVER. TO HELP PREVENT TIPOVER:

- NEVER ALLOW CHILDREN TO CLIMB, STAND, HANG, OR PLAY ON ANY PART OF TRIPOD.
- USE TIPOVER RESTRAINT OR ANCHOR TOP OF SCREEN TO WALL USE OF TIPOVER RESTRAINTS MAY ONLY REDUCE, BUT NOT ELIMINATE RISK OF TIPOVER.
- DO NOT PLACE SCREEN OUTDOORS IN WINDY CONDITIONS.

USE OF TIPOVER RESTRAINTS MAY ONLY REDUCE, BUT NOT ELIMINATE RISK OF TIPOVER.

PRODUCT STRUCTURE

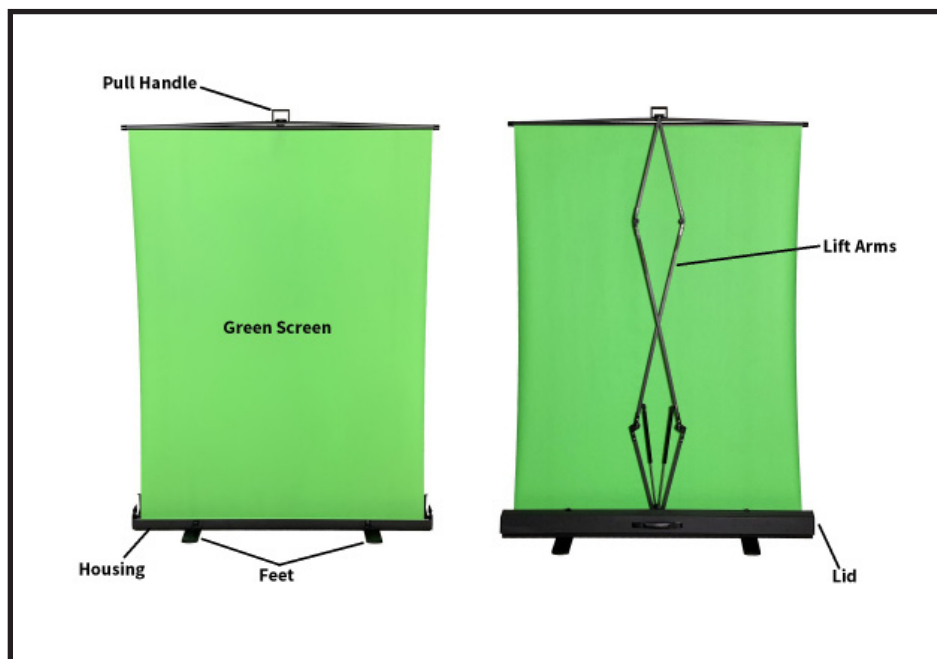

ASSEMBLY STEPS

STEP 1

Turn feet 90 degrees to the “unfolded” position. If needed, turn the knob on each foot for level adjustment.

STEP 2

Release the latches and open the lid.

STEP 3

Grip the handle on the top of the screen and gently pull up to the extended position. If the maximum height is difficult to reach, a rod or other long object may be used to assist. Do not pull on the screen material to extend.

COLLAPSING STEPS

STEP 1

Grip the handle on the top of the screen and gently pull down until the screen is fully retracted. If the top is difficult to reach, a rod or other long object may be used to assist. Do not pull on the screen material to retract.

STEP 2

Close the lid and secure the latches.

STEP 3

Turn the feet 90 degrees to the “folded” position.

CLEANING

If screen becomes dirty, wipe gently with a soft, damp cloth. A light cleanser (such as hand soap) or detergent may be used for difficult spots. Do NOT use bleach or solvents to clean screen material.



Open **Monday - Friday 7:00am - 7:00pm** CST,
our dedicated support team can offer immediate assistance with rapid response times. If any parts are received damaged or defective, please contact us. We are happy to replace parts to ensure you have a fully functioning product.


 help@vivo-us.com

AVG. RESPONSE TIME (*within office hrs*): **1HR 8M**

- 23% within < 15m
- 38% within < 30m
- 61% within < 1hr
- 83% within < 2hr
- 92% within < 3hr

 www.vivo-us.com
Chat live with an agent!

AVG. RESOLUTION TIME (*within office hrs*): **< 15 M**

 309-278-5303

AVG. RESOLUTION TIME (*within office hrs*): **5M 4S**