


Black Mobile TV Cart

Instruction Manual

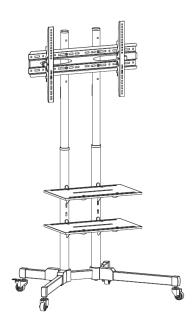

SKU: STAND-TV01B




Scan the QR code with your mobile device or follow the link for helpful videos and specifications related to this product.

https://vivo-us.com/products/stand-tv01b

GET IN TOUCH | Monday-Friday from 7:00am-7:00pm CST



 



www.vivo-us.com Chat live with an agent!



309-278-5303



If you do not understand these directions, or if you have any doubts about the safety of the installation, please call a qualified technician. Check carefully to make sure there are no missing or defective parts. Improper installation may cause damage or serious injury. Do not use this product for any purpose that is not explicitly specified in this manual. Do not exceed weight capacity. We cannot be liable for damage or injury caused by improper mounting, incorrect assembly or inappropriate use.




TIPOVER WARNING

SERIOUS OR FATAL CRUSHING INJURIES CAN OCCUR FROM TIPOVER. TO HELP PREVENT TIPOVER:

- NEVER ALLOW CHILDREN TO CLIMB, STAND, HANG, OR PLAY ON ANY PART OF TV OR TV CART.
- USE TIPOVER RESTRAINT OR ANCHOR STAND TO WALL

USE OF TIPOVER RESTRAINTS MAY ONLY REDUCE, BUT NOT ELIMINATE RISK OF TIPOVER.

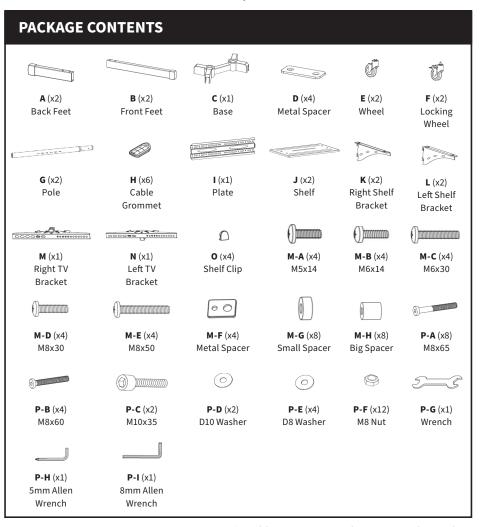



Failure to do so may result in serious injury.

WARNING: CHOKING HAZARD

SMALL PARTS - NOT FOR CHILDREN UNDER 3 YEARS. ADULT SUPERVISION IS REQUIRED.


(49.9kg)

ASSEMBLY STEPS


STEP 1 Remove plastic covers from base (C). Attach feet (A,B) using bolts (P-A) metal spacer (D) and nuts (P-F). Tighten using 5mm allen wrench (P-H) and wrench (P-G). Thread wheels (E,F) into bottom of feet using wrench (P-G). Reattach plastic covers.

STEP 2 Press button on bottom half of poles (**G**) to extend the two halves. Slide button into top hole to secure pole length. Insert rubber cable grommets (H) into holes as shown in diagram. Insert poles into base (C) and secure using bolts (P-C) and washers (P-D). Tighten using 8mm allen wrench (P-I). Ģ G P-D P-C P**-I**


STEP 3

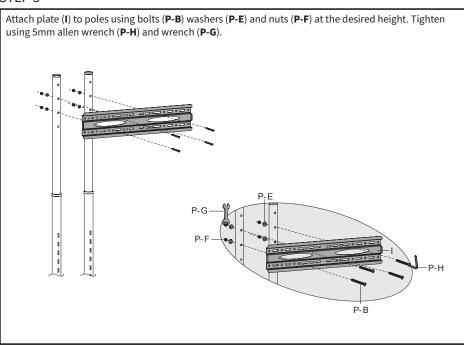


STEP 4

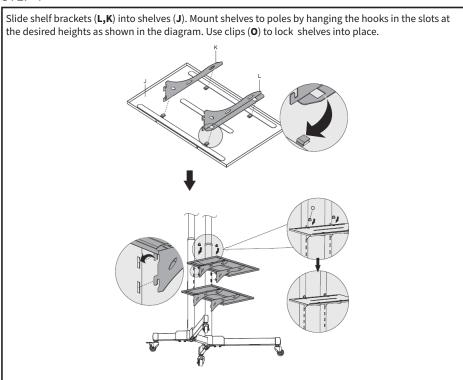


Attach TV brackets (**N,M**) to back of television using bolts (**M-A,M-B**) and metal spacers (**M-F**) using Phillips head screwdriver.

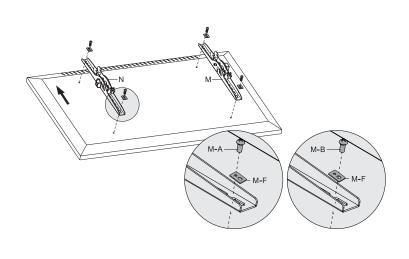


Attach TV brackets (N,M) to back of television using bolts (M-C, M-D, M-E) and metal spacers (M-F) using Phillips head screwdriver. If bolts are too long, spacers (M-G, M-H) may be required.

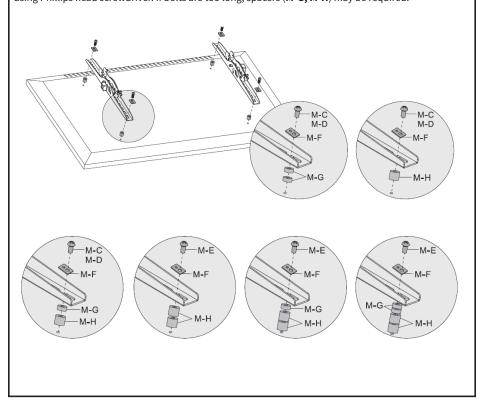

STEP 6

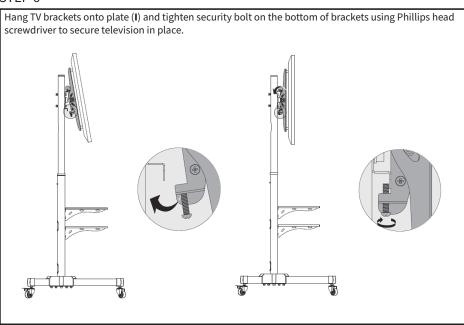

STEP 7

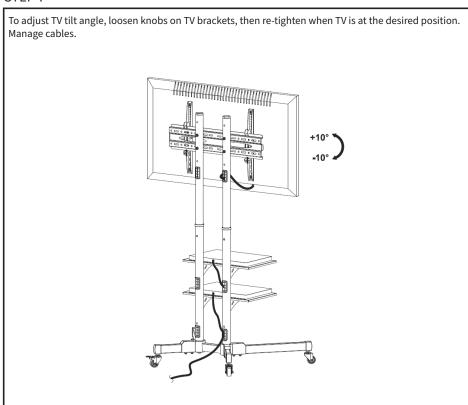



Open Monday - Friday 7:00am - 7:00pm CST,

our dedicated support team can offer immediate assistance with rapid response times. If any parts are received damaged or defective, please contact us. We are happy to replace parts to ensure you have a fully functioning product.



309-278-5303

AVG. RESOLUTION TIME (within office hrs): 5M 4S



www.vivo-us.com Chat live with an agent! AVG. RESOLUTION TIME (within office hrs): < 15 M



help@vivo-us.com

AVG. RESPONSE TIME (within office hrs): 1HR 8M

- 23% within < 15m
- 38% within < 30m
- 61% within < 1hr
- 83% within < 2hr
- 92% within < 3hr