




---

## DESK-E151EB Controller

### Instruction Manual

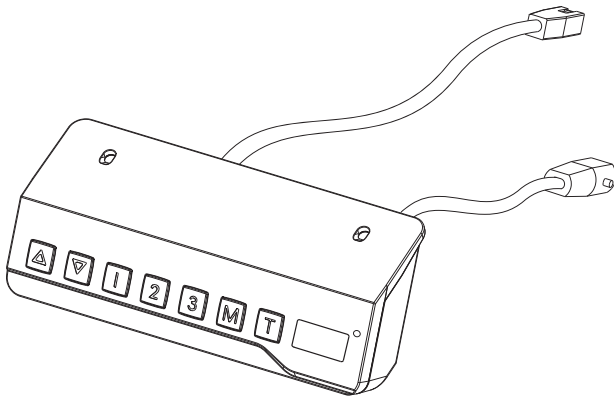

### SKU: DESK-E151EB Controller



Scan the QR code with your mobile device or follow the link for helpful videos and specifications related to this product.

<https://vivo-us.com/products/desk-e151eb>

---

GET IN TOUCH | Monday-Friday from 7:00am-7:00pm CST



help@vivo-us.com



www.vivo-us.com  
*Chat live with an agent!*



309-278-5303

## **WARNING!**

If you do not understand these directions, or if you have any doubts about the safety of the installation, please call a qualified technician. Check carefully to make sure there are no missing or defective parts. Improper installation may cause damage or serious injury. Do not use this product for any purpose that is not explicitly specified in this manual and do not exceed weight capacity. We cannot be liable for damage or injury caused by improper mounting, incorrect assembly, or inappropriate use.

## **ELECTRICAL SAFETY INSTRUCTIONS**

THIS PRODUCT IS POWERED BY ELECTRICITY. IN ORDER TO AVOID BURNS, FIRE AND ELECTRIC SHOCK, PLEASE READ THE FOLLOWING INSTRUCTIONS CAREFULLY.

- DO NOT CLEAN PRODUCT WHILE POWER IS CONNECTED.
- DO NOT DISASSEMBLE OR REPLACE COMPONENTS WHILE POWER IS CONNECTED.
- NEVER OPERATE THE SYSTEM WITH A DAMAGED CORD OR PLUG. PLEASE CONTACT YOUR SELLER TO REPLACE DAMAGED PARTS.
- NEVER OPERATE SYSTEM IN DAMP ENVIRONMENTS OR IF ANY ELECTRICAL COMPONENTS HAVE MADE CONTACT WITH LIQUIDS.
- ALTERATIONS OF THE GIVEN POWER UNIT ARE NOT ALLOWED.
- OUTDOOR USE IS PROHIBITED.

## OPERATING CONTROL PANEL

**OPERATING INSTRUCTIONS:** When the system is powered on, you will hear a beep and the existing desktop height will be displayed on the control panel.

### **Upward and Downward Movement**

Press and hold the up or down arrow until the desk reaches the desired height.

### **Memory Mode**

To store a certain height in the controller's memory, first press "M". The letter "S-" will be displayed. Now press "1", "2" or "3" within five seconds to store the current height in memory. Each number can store a different height. Once in memory, you can recall any of the three height settings by pressing the corresponding button. Touching any button (except for "T") will stop the automatic adjustment.

### **Timed Reminder Mode**

To set the timer, press "T". The display will flash "0.5h" representing 30 minutes. Press "T" repeatedly to increase 0.5 hours at a time. The maximum timer setting is 2 hours. The timer is set when the display stops flashing and the light in the top right corner of the controller is on. When the timer has reached the set time, a beep will sound reminding the user to adjust the working position. Once the timer setting has expired, the unit's timer is canceled. To deactivate the timer, press "T" five times or until the current height is displayed and the light in the upper right corner is turned off.

### **Power-Saving Mode**

When no actions are made for over 1 minute, the system will enter power-saving mode, touch any button to enter operation mode.

### **Switch the Displayed Unit of Measurement**

The preset measurement shown on the display is cm. If you would like to change cm to inch, restart the system by unplugging for at least 5 seconds and plugging back in, then press and hold "T" for 3 seconds. The controller will beep twice and change the displayed unit. Repeat to switch back from inch to cm.

### Reset Mode

If the desk must be reset, first lower the desk until it stops, then restart the system by unplugging for at least 5 seconds and plugging back in. Press and hold the down button until “RST” is displayed. Continue holding until the desk lowers completely, then moves up slightly. The reset process is complete when “RST” disappears and the current height is displayed.

## TROUBLESHOOTING

### Error Code Description/Resolution

- |            |                                                                                                                                                  |
|------------|--------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>ER1</b> | Overload in downward direction. Disconnect and reconnect power.                                                                                  |
| <b>ER2</b> | Overheating in controller. Wait 18 minutes to allow controller to cool.                                                                          |
| <b>ER3</b> | Motor connection fault. Reconnect motor and reset desk.                                                                                          |
| <b>ER5</b> | Desk weight limit exceeded. Decrease desk load before operating. If error appears after reducing weight, the AC adapter may need to be replaced. |

### NOTES

- Self-protection function: The unit will enter a protective mode should the system operate in excess of 2 minutes with “HOT” on the controller display. The system will return to normal operation after approximately 20 minutes.
- Over-current protection mode: While operating, should the load on the desk exceed rated specifications, the system will enter into over-current protection mode to protect the system from damage. When this happens, the desk will move downward approximately 30mm and come to a stop with the current height displayed.
- Do NOT remove or reconnect power to reset the unit when in a protective or “HOT” state, as this may damage the electronics.

### CAUTION!



Keep monitor and laptop base fully on the desktop.



Follow the cable routing instructions to avoid the potential to pinch cables.



Leave enough slack in cable to allow for full range of vertical motion (15" / 38 cm).



Raise desktop slowly to keep items stable.

Failure to follow these instructions may result in property damage and/or personal injury.



Open **Monday - Friday 7:00am - 7:00pm CST**, our dedicated support team can offer immediate assistance with rapid response times. If any parts are received damaged or defective, please contact us. We are happy to replace parts to ensure you have a fully functioning product.


 [help@vivo-us.com](mailto:help@vivo-us.com)

**AVG. RESPONSE TIME** (*within office hrs*): **1HR 8M**

- 23% within < 15m
- 38% within < 30m
- 61% within < 1hr
- 83% within < 2hr
- 92% within < 3hr

 [www.vivo-us.com](http://www.vivo-us.com)  
*Chat live with an agent!*

**AVG. RESOLUTION TIME** (*within office hrs*): **< 15 M**

 309-278-5303

**AVG. RESOLUTION TIME** (*within office hrs*): **5M 4S**