CROSLEY
FURNITURE

Dining Bench
CF5023

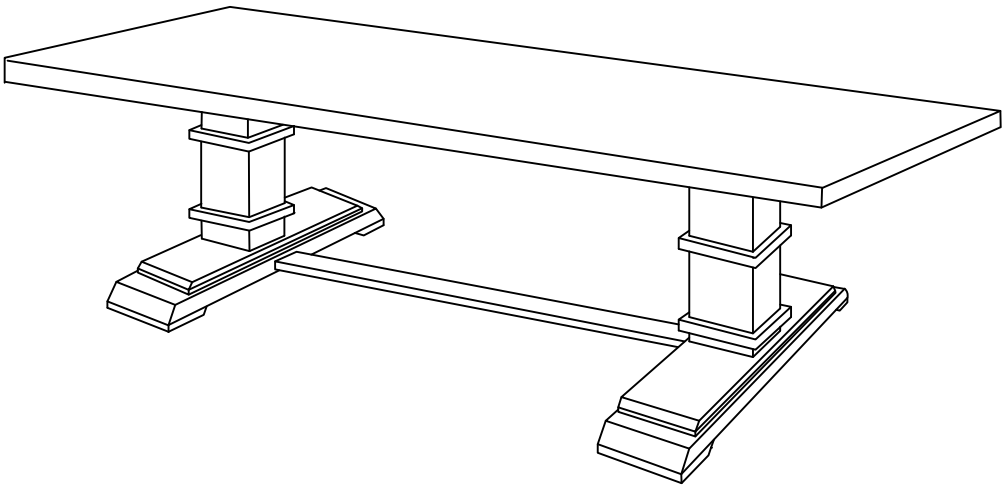

PART LIST

A	B	C	D	E
	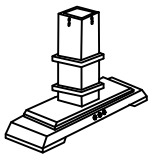			
Seat Panel 1 PC	Leg 2 PCS	Leg Support 1 PC	Pedestal Support 1 PC	Bench Support 4 PCS

HARDWARE LIST

#1	#2	#3	#4	#5
 5/16"	 5/16"	5/16"x22"	 12.8mm	 M6 x 50mm
Hex Nut 6 PCS (Extra 1)	Spring Washer 6 PCS (Extra 1)	Flat Washer 6 PCS (Extra 1)	Wrench 1 PC	Bolt 8 PCS (Extra 1)

#6	#7	#8
 1/4"	M6 x 13mm	M4
Small Spring Washer 8 PCS (Extra 1)	Small Flat Washer 8 PCS (Extra 1)	Allen Wrench 1 PC

Step 1 . Attach pedestal support (part D) to legs (part B) using flat washers (part #3) , spring washers (part #2), hex nuts (part #1) and wrench (part #4).

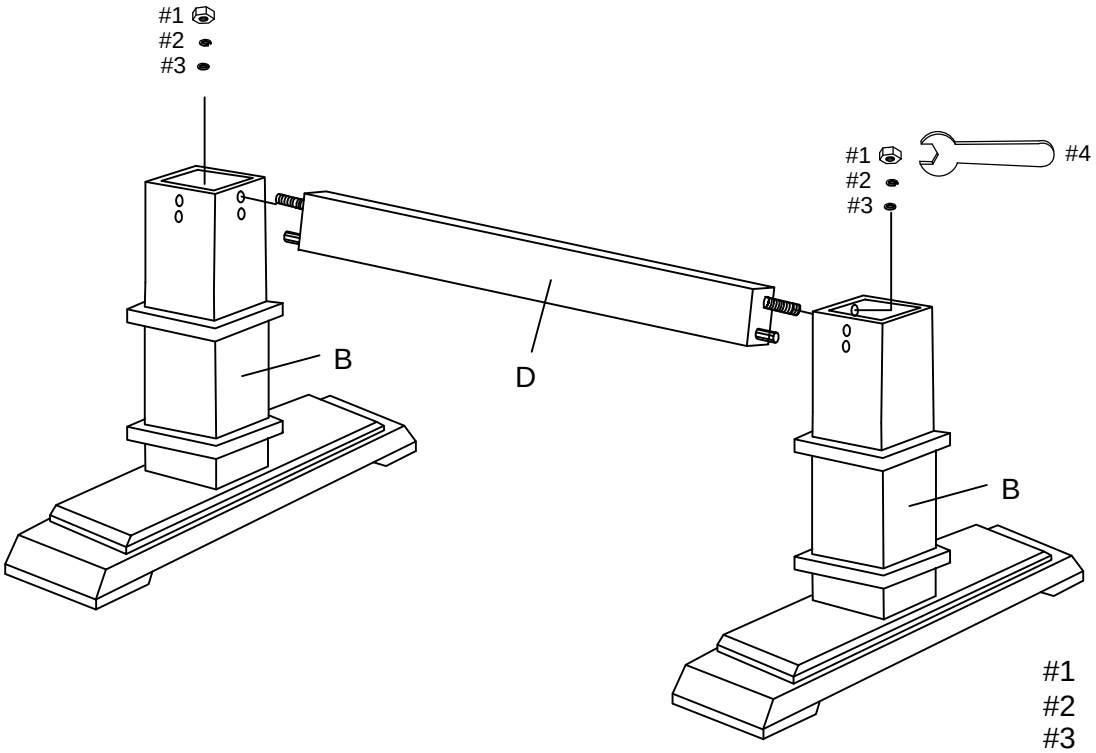

#1 x 2
#2 x 2
#3 x 2
#4 x 1

Step 2 . Attach bench supports (part E) to legs (part B) using flat washers (part #3), spring washers (part #2), hex nuts (part #1) and wrench (part #4).

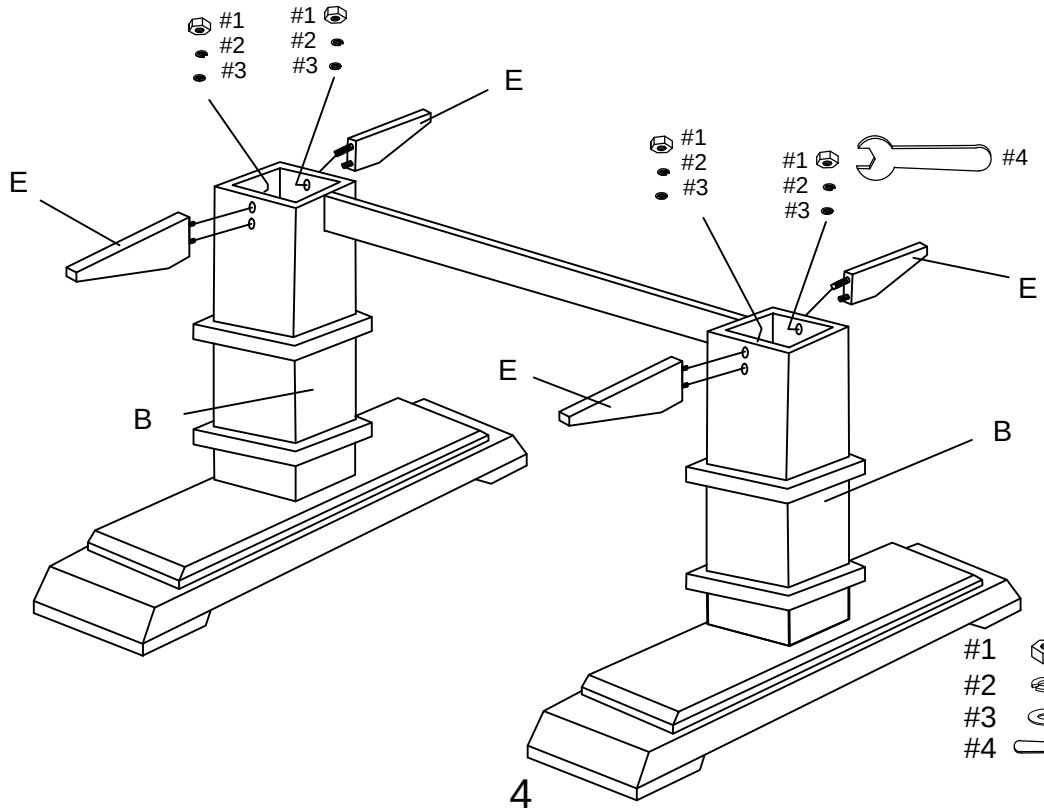

#1 x 4
#2 x 4
#3 x 4
#4 x 1

Step 3 . Lay assembled unit (parts B, D & E) upside down on soft surface, such as carpet. Attach leg support (part C) to legs (part B) using small flat washers (part #7), small spring washers (part #6), bolts (part #5) and allen wrench (part #8).

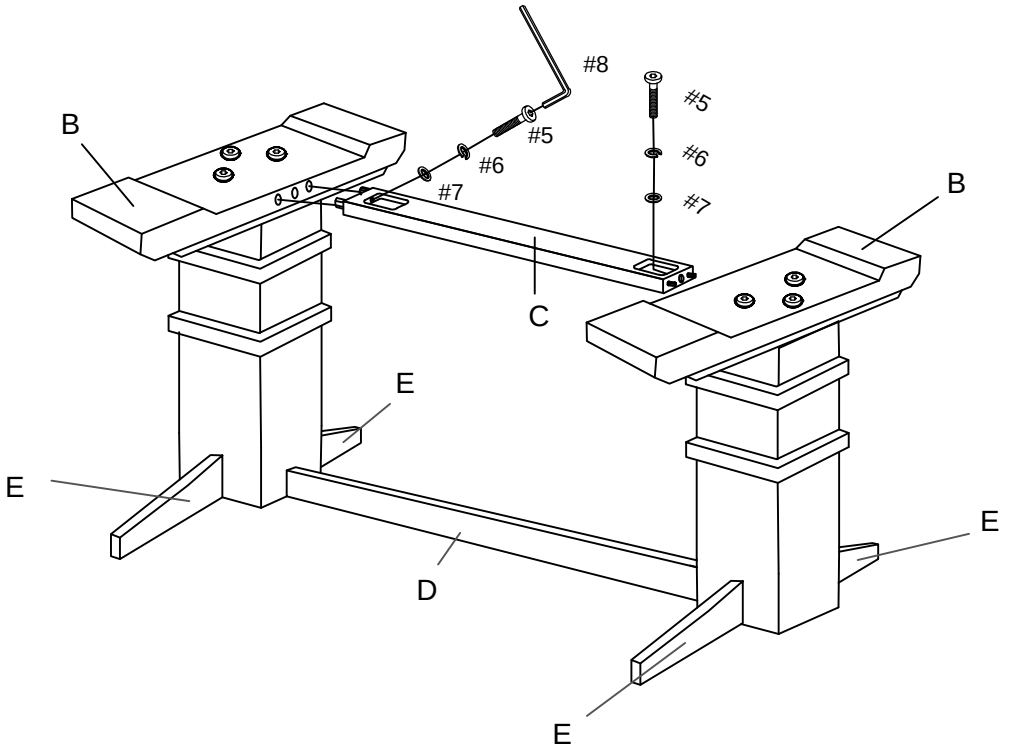

#5 x 2
#6 x 2
#7 x 2
#8 x 1

Step 4. Lay seat panel (part A) upside down on soft surface, such as carpet. Attach assembled unit (parts B, D & E) to seat panel (part A) using small flat washers (part #7), small spring washers (part #6), bolts (part #5) and allen wrench (part #8).

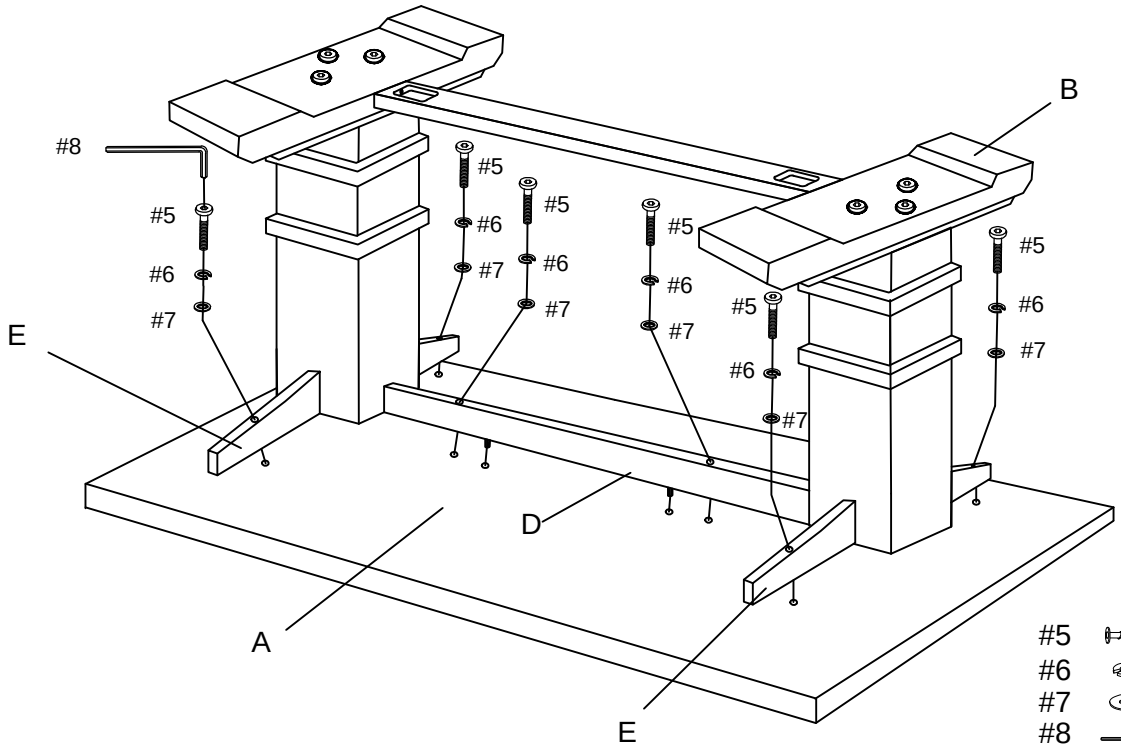

#5 x 6
#6 x 6
#7 x 6
#8 x 1
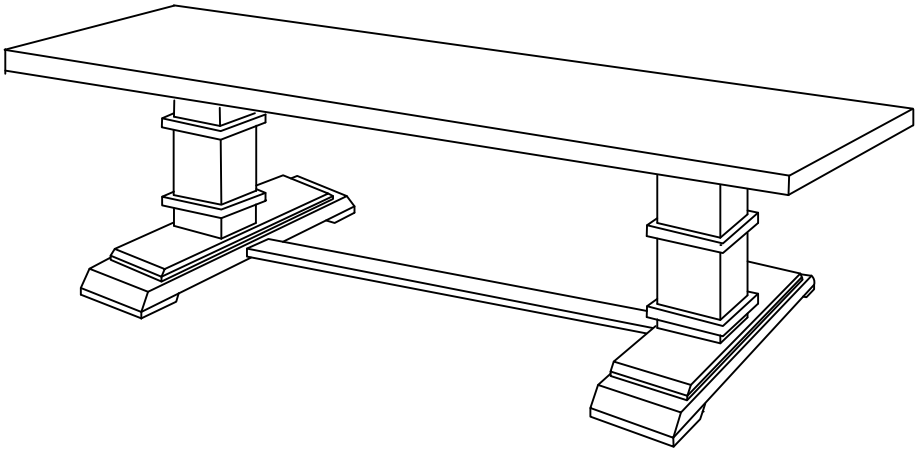
Step 5 . Carefully turn assembled unit upright.