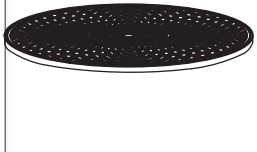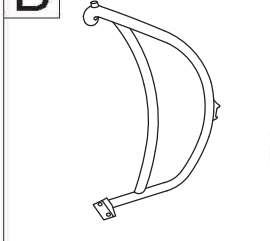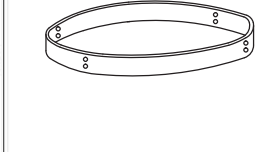# CROSLEY
FURNITURE

42"CAST ALUM. DINING TABLE
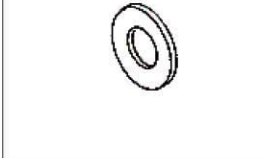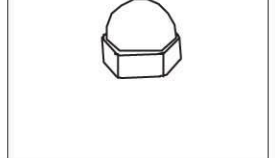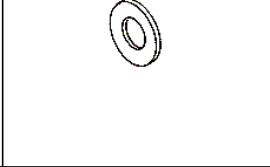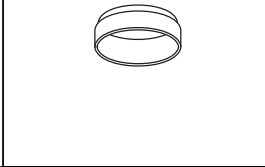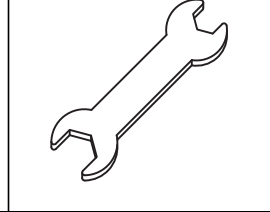
CO600142-BK

PARTS LIST

A	B	C
Top 1 PC	**Leg** 4 PCS	**Stretcher** 1 PC

HARDWARE LIST

1	2	3	4	5
Cylinder Bolt (M8*25) 4 PCS	**Spring Washer (M8)** 4 PCS	**Flat Washer (M8)** 4 PCS	**Nut (M8)** 4 PCS	**Nut Cap (M8)** 4 PCS

6	7	8	9
Bolt (M6*30) 8 PCS	**Flat washer (M6)** 8 PCS	**Bolt cap (M6)** 8 PCS	**Wrench (M6)** 1 PC

① Bolt (M8*25)   〰〰〰 x 4
② Spring Washer (M8)   ⬭   x 4
③ Flat Washer (M8)   ◎   x 4
④ Nut (M8)   ⬡   x 4
⑤ Nut Cap (M8)   ⬭   x 4
⑥ Bolt (M6*30)   〰〰〰 x 8
⑦ Flast Washer (M6)   ◎   x 8
⑧ Bolt Cap (M6)   ◍   x 8

Step 1: Place Top (A) upside down on a soft cloth.

Insert all Cylinder Bolts (Part #1) into the pre-drilled holes of Top (A).

Step 2: Attach two adjacent Legs (B) to Top (A) by inserting the Cylinder Bolts (Part #1) through the holes in the ends of the Legs (B). Now secure the Legs (B) using Flat Washers (Part #3),Spring Washers (Part #2) & Nuts (Part #4).
Note - -Tighten Nuts only half way using wrench (#9) .

⑦Flat Washer (M6)   ⑥Bolt (M6*30)
⑧Bolt Cap (M6)

⑤Nut Cap (M8)
④Nut (M8)
②Spring Washer (M8)
③Flat Washer (M8)

① Bolt(M8*25)
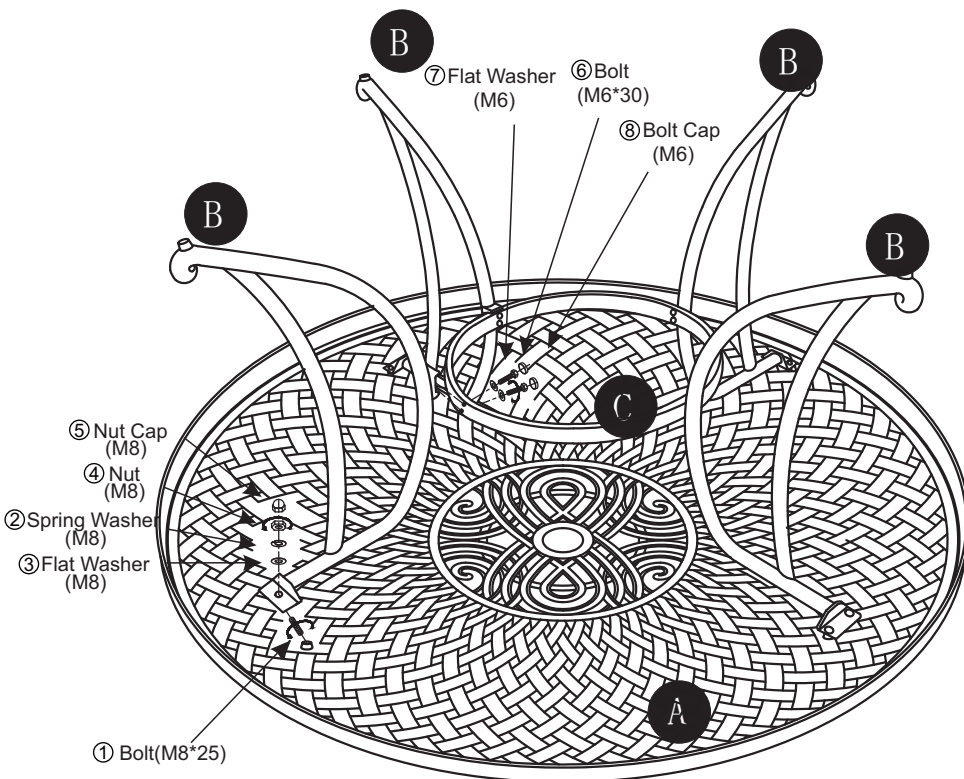
Step 3: Attach Stretcher (C) to attached Legs (B) using Flat Washers (Part #7),and Bolts (Part #6) as shown. Note - Tighten Nuts only half way with wrench (#9).Now attach the other two Legs (B) to Top (A) & Stretcher (C) using the same method as the first two legs.Tighten all bolts completely with wrench (#9).
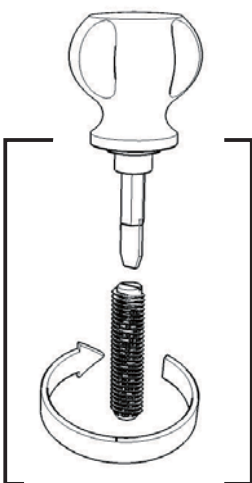
Figure 1

Figure 2

Flathead screw driver(not included)
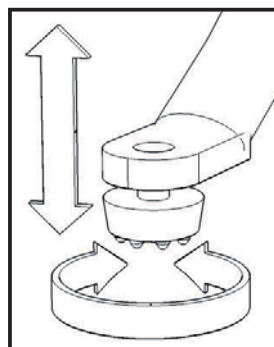
Step 4: Cover all Nuts and bolts with Nut Caps (Part #5) & Bolt Caps (Part #8).Turn the table over into the upright position in your congratulations! You are finished.