

www.avant-styles.com


SKU: KS-70028

REV3.19.18


Prior to installation, please check the items you have received against the packing list. Report any missing items to your local dealer immediately.


Protect all surfaces from sharp objects, high heat sources, direct prolonged sunlight and chemical hazards.


Professional installation is recommended.

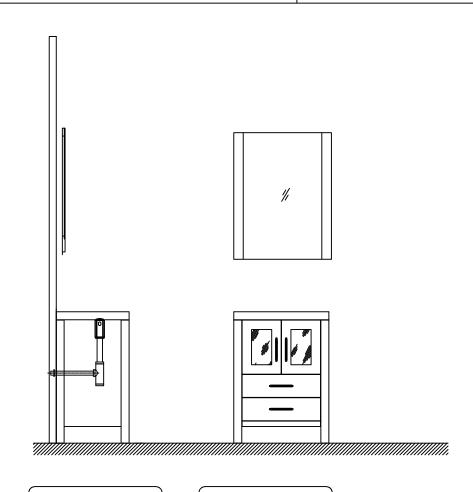


PARTS LIST (may differ depending on purchase)

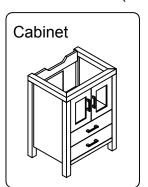


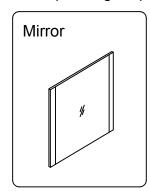

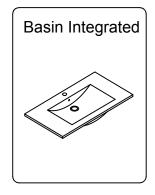

OR

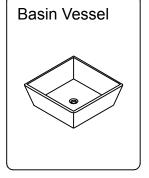

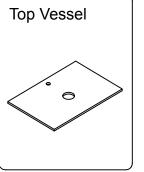




www.avant-styles.com


SKU: KS-70028


REV3.19.18


REQUIRED TOOLS

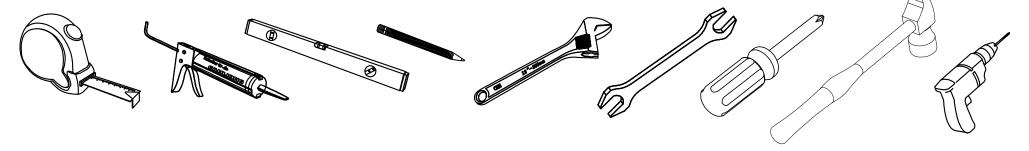

DRAWER REMOVAL

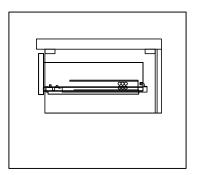

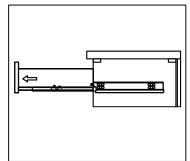

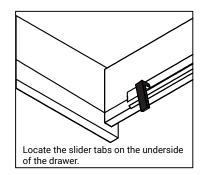


REMOVAL

- 1. Pull tabs toward center
- 2. Lift and pull drawer out


RE-INSTALL

- 1. Align drawer hole with slider stud
- 2. Push tabs back in to secure


DOOR ADJUSTMENT

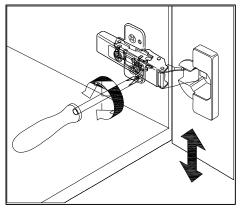

Adjusts the door vertically

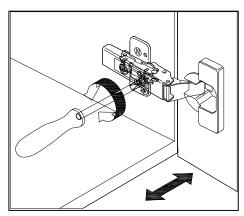

Adjusts the door horizontally

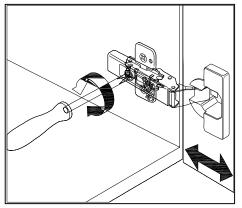

Adjusts the door forward and backwards





www.avant-styles.com


SKU: KS-70028

REV3.19.18


Mirror Installation

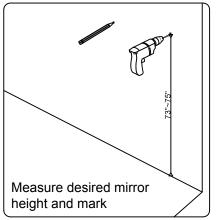


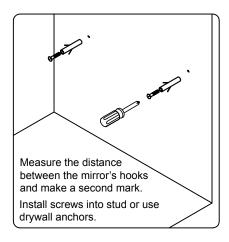


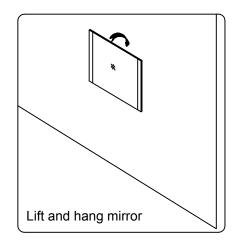

Top Installation (Integrated Basin)

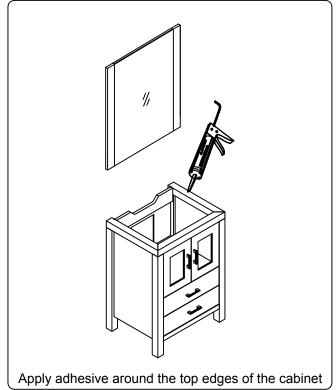

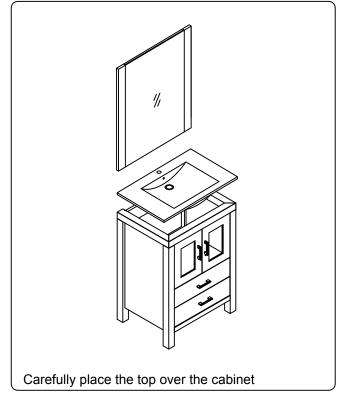

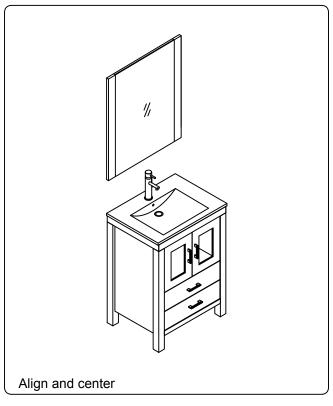



www.avant-styles.com

SKU: KS-70028

REV3.19.18

Top Installation (Vessel Basin)

