

**SKU:** MD-2660


Prior to installation, please check the items you have received against the packing list. Report any missing items to your local dealer immediately.


Protect all surfaces from sharp objects, high heat sources, direct prolonged sunlight and chemical hazards.


# Professional installation is recommended.

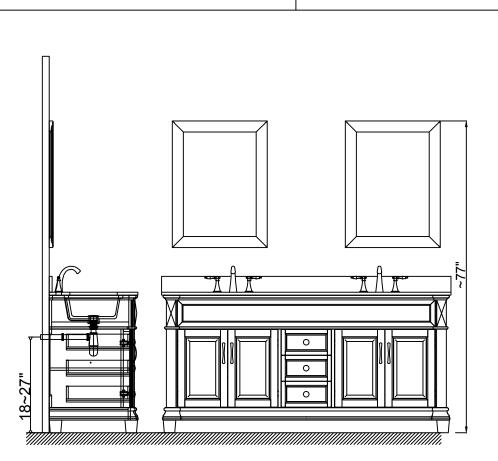

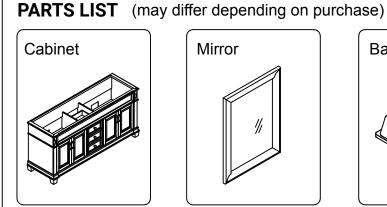



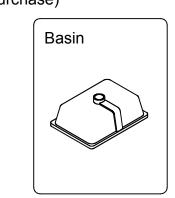

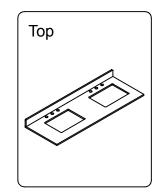

REV3.19.18




SKU: MD-2660


REV3.19.18


#### **REQUIRED TOOLS**



### **DRAWER REMOVAL**

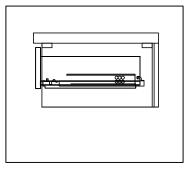

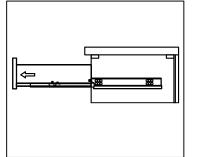

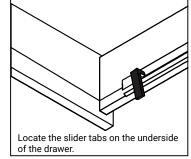


#### REMOVAL

- 1. Pull tabs toward center
- 2. Lift and pull drawer out


## **RE-INSTALL**

- 1. Align drawer hole with slider stud
- 2. Push tabs back in to secure


# DOOR ADJUSTMENT

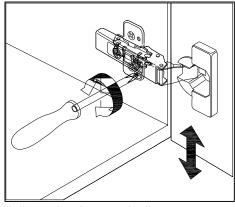

Adjusts the door vertically

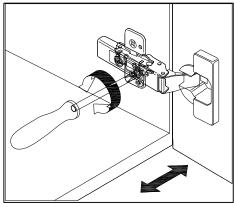

Adjusts the door horizontally

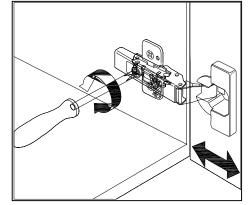

Adjusts the door forward and backwards



#### **INSTALLATION INSTRUCTIONS**

www.avant-styles.com

**SKU:** MD-2660

REV3.19.18

