

INSTALLATION INSTRUCTIONS

www.avant-styles.com


SKU: MS-565

REV3.19.18


Prior to installation, please check the items you have received against the packing list. Report any missing items to your local dealer immediately.


Protect all surfaces from sharp objects, high heat sources, direct prolonged sunlight and chemical hazards.


Professional installation is recommended.

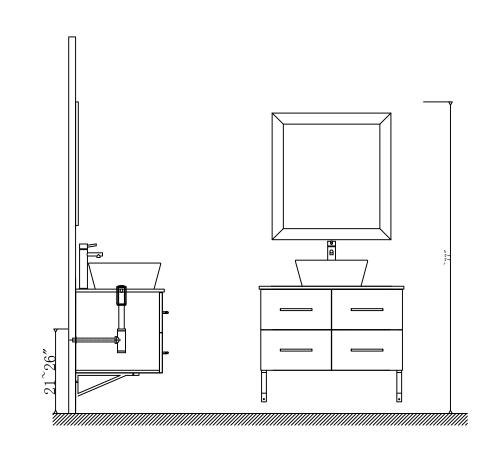


PARTS LIST (may differ depending on purchase)

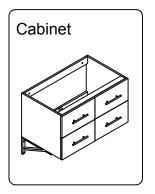

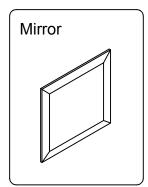

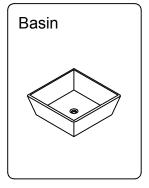

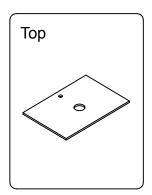



INSTALLATION INSTRUCTIONS

www.avant-styles.com

SKU: MS-565

REV3.19.18


REQUIRED TOOLS









DRAWER REMOVAL

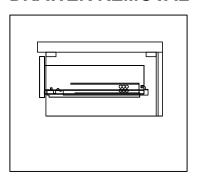

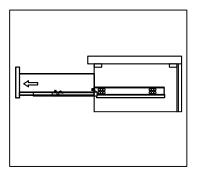

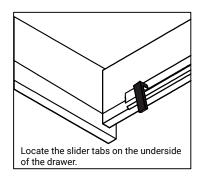

REMOVAL


- 1. Pull tabs toward center
- 2. Lift and pull drawer out


RE-INSTALL

- 1. Align drawer hole with slider stud
- 2. Push tabs back in to secure

MIRROR INSTALLATION



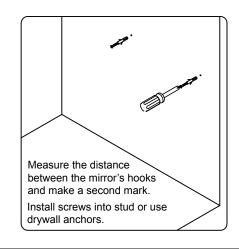

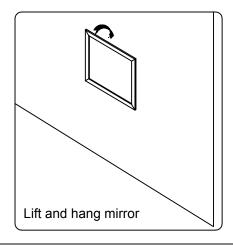




INSTALLATION INSTRUCTIONS


www.avant-styles.com


SKU: MS-565

REV3.19.18

Cabinet Installation

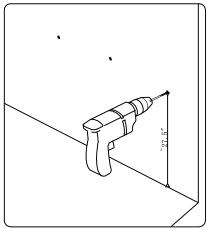

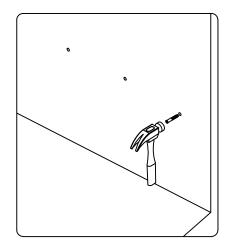

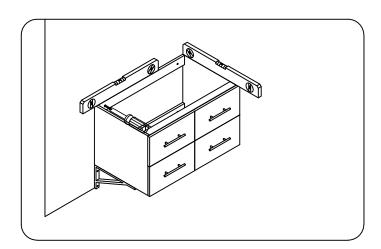

Top Installation

