Models: 7903, 7960, 7962,

7964, 7968, 7972

Pg. 1


INSTALLATION INSTRUCTIONS

Parts Included

• 1 Freestanding Filler • 1 Handshower with Hose • 1 Cover Plate • 2 Flexible Hoses


Tools Needed

Adjustable Wrench • Slip Joint Pliers • Teflon Pipe Tape • Philips Screwdriver

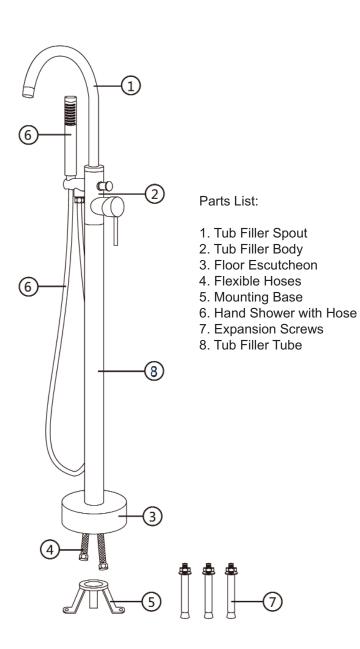



1. Thread floor escutcheon (3) on to Tub Filler Tube (8).



 Secure Mounting Base (5) to floor using Expansion Screws (7).
 Note: For wood floors heavy wood screws should be used in place of expansion screws.



Mounting Base for: 7960, 7962



Mounting Base for: 7903, 7964, 7968, 7972

Cleaning Instructions

Wipe this whole set off with warm water and a soft cloth. DO NOT use soaps, cleansers, or brass cleaners as they will disintegrate the protective lacquer coating and leave the brass exposed causing it to tarnish.

Models: 7903, 7960, 7962,

7964, 7968, 7972

Pg. 2


INSTALLATION INSTRUCTIONS

Parts Included


• 1 Freestanding Filler • 1 Handshower with Hose • 1 Cover Plate • 2 Flexible Hoses

Tools Needed


Adjustable Wrench • Slip Joint Pliers • Teflon Pipe Tape • Philips Screwdriver

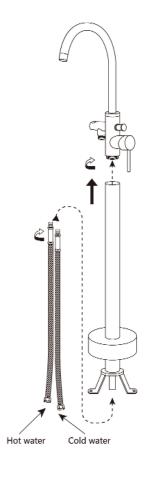

- 3 Feed Flexible Hoses (4) through Faucet Body Tube (8) and thread securely on to faucet connections.
- 4.Thread the Faucet Body Tube (8) on to the Faucet Body (2).

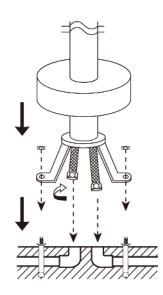

6.Connect the
Handshower Hose (6)
to both the Handshower
and Faucet Body (2).
Turn on water to test
connections.



Cleaning Instructions

Wipe this whole set off with warm water and a soft cloth. DO NOT use soaps, cleansers, or brass cleaners as they will disintegrate the protective lacquer coating and leave the brass exposed causing it to tarnish.