# Undermount Kitchen Sinks



## **INSTALLATION INSTRUCTIONS**


#### **Tools Needed**

• Pencil • Tube Cutter • Socket Wrench • Saw • Wrench • Hammer • Screwdriver • Drill & 3/8" Bit •

### **Materials Needed**

• Sink • Faucet • Drain Assembly • Supply Pipe & Fittings • Drain Pipe, Trap & Fittings • Silicone Sealant •

WARNING: We do not recommend cutting any countertops, especially granite, until you have the sink on the premises. Sizes vary slightly due to firing process.

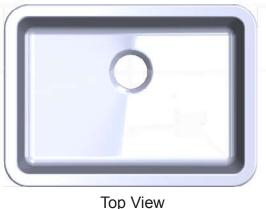



- 1. Using a template 1/2" narrower than the sink rim, mark the counter top cut out. Drill a starter hole 3/8" inside of circle and then use a saw to finish cutting the opening for the sink.
- 2. Attach the faucet, drain piece, flange, and pop up drain assembly to the sink. Place a bead of silicone caulk around the cut out opening. Set the sink into the opening. Press the rim down firmly. Hook up the drain and water supply fittings.
- **3.** Tighten all connections, being careful not to over tighten. Check for leaks. Small leaks can be corrected by tightening the nuts.

## NOTE:

DO NOT tighten too much or you may damage bowl.