

Model: WI7498




#### **Part List**

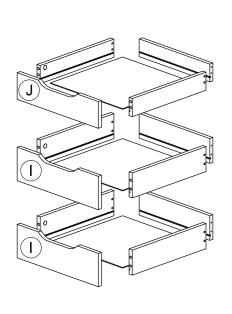

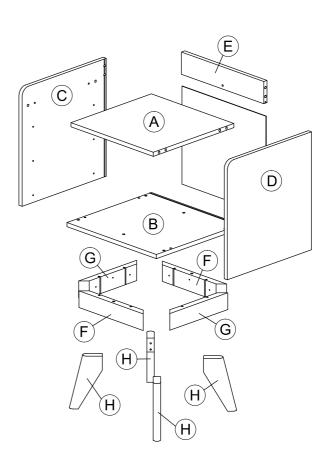



Hardware List				
No.	SHAPE	DESCRIPTION	Qty.	
1		8x25mm Wood Dowel	20Pcs	
2		15MM Myfix Minifix	10Sets	
3		M5x8mm Screw (Euro Screw)	12Pcs	
4	<b>√</b>	M3x16mm Screw	4Pcs	
5	<b>√</b> 0000€	M3.5x15mm Screw	44Pcs	
6	<b>←</b>	M4x38mm Screw	17Pcs	
7		Jcbc 'W' M6 x 40mm	8Pcs	
8	<b>6</b>	L Bracket	4 Pcs	

9	9	Nail Leg	4Pcs
10		Z Bracket (Big)	2Pcs
11		Metal Drawer Slide 14" ( 350mm)	3 Sets
12		Minifix Cap	6Pcs
13		Metal Corner Bracket	4Pcs
14		L Key	1Pc

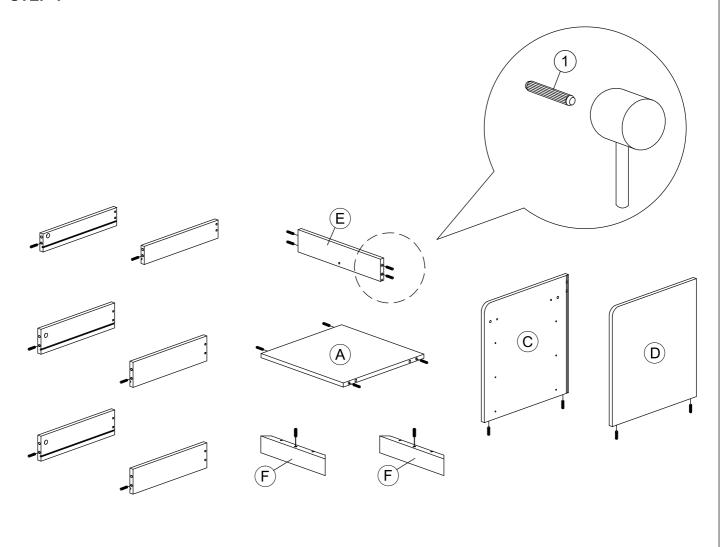



STEP 2

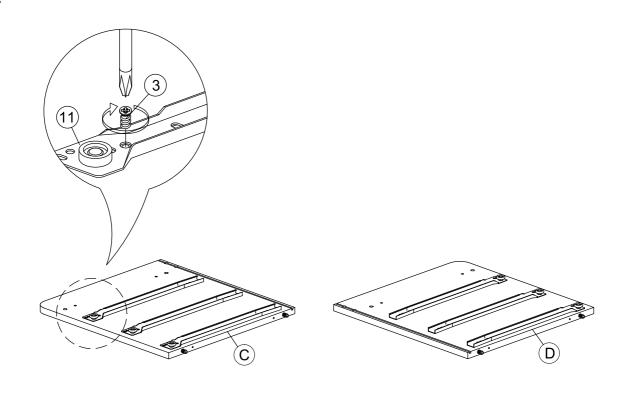

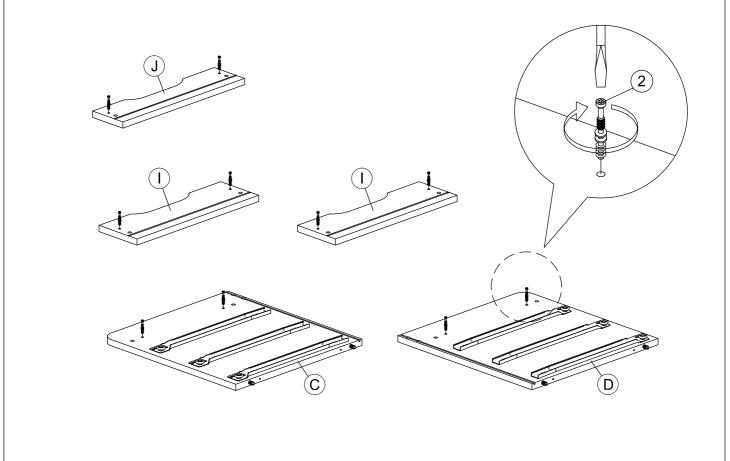



### STEP 4

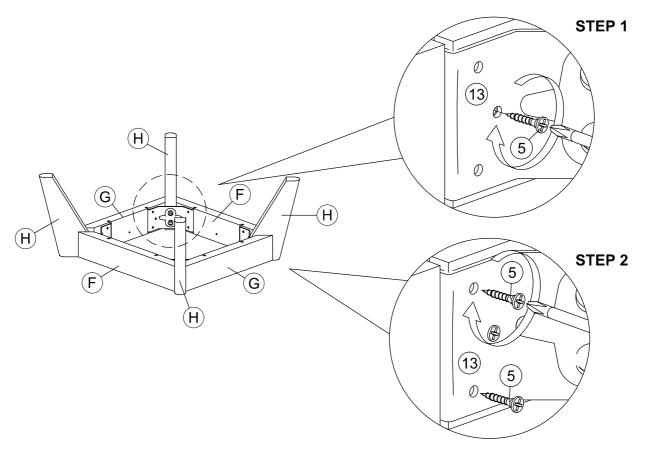

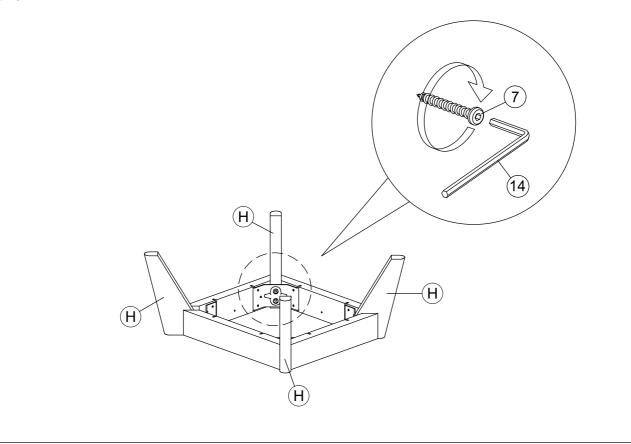



### STEP 6

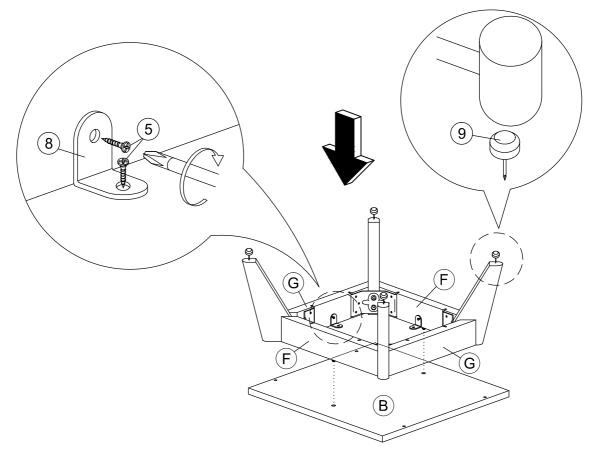


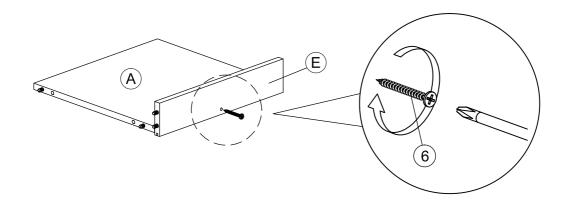


## STEP 8

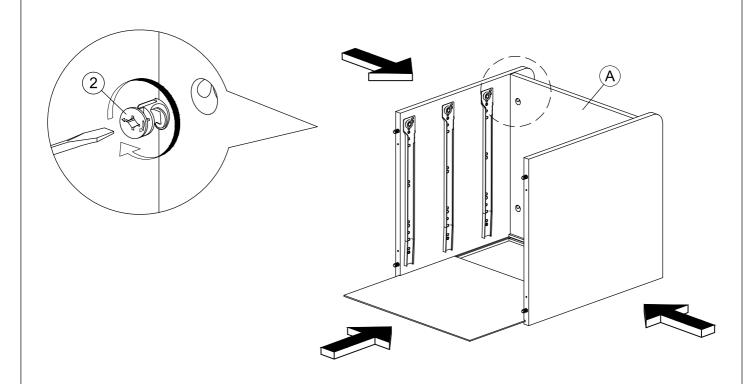


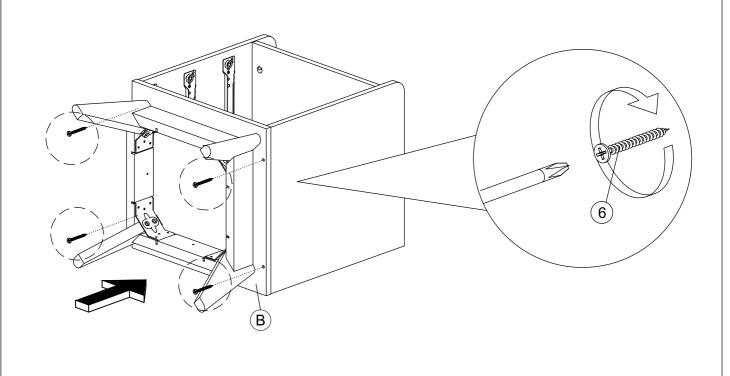

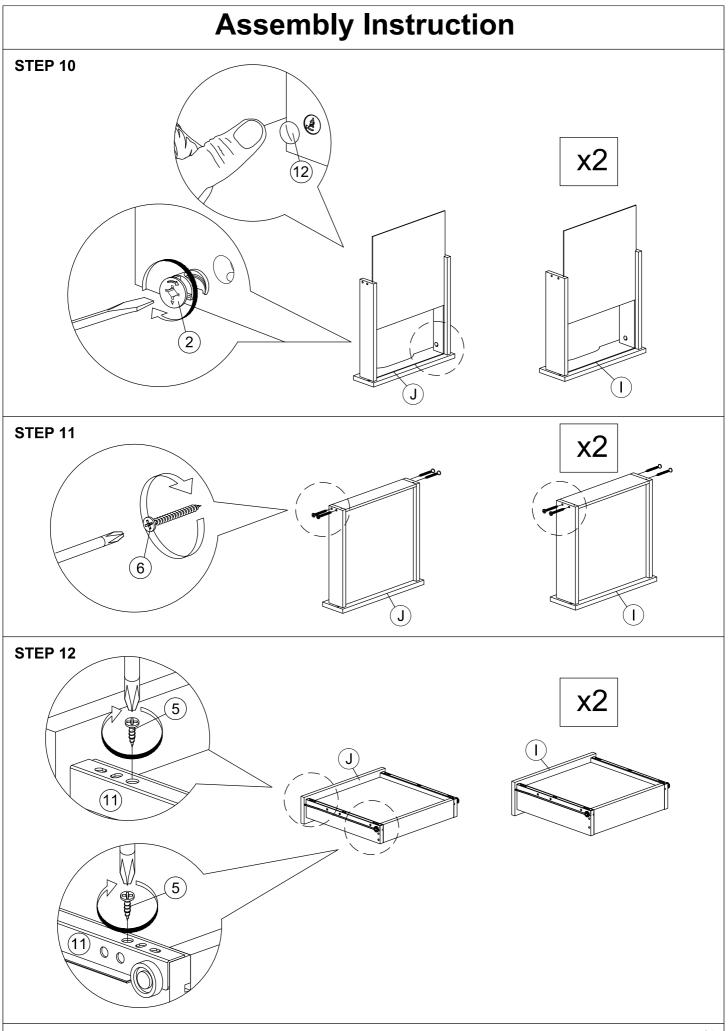


### STEP 13

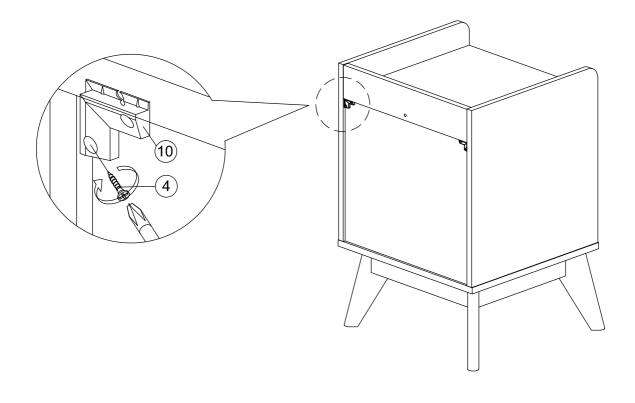


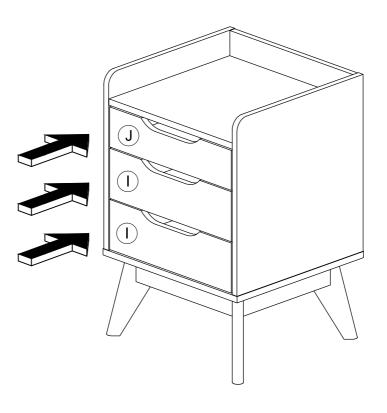

Model: WI7495

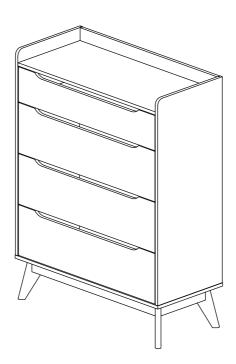

### PART LIST

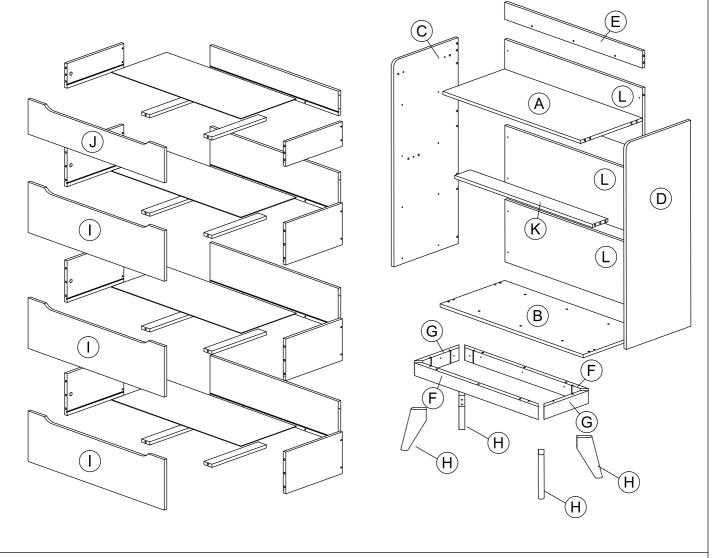



Hardware List				
No.	SHAPE	DESCRIPTION	Qty.	
1		8x25mm Wood Dowel	50Pcs	
2		15MM Myfix Minifix	22Sets	
3	(((()	M5x8mm Screw (Euro Screw)	16Pcs	
4	<b>~~~~</b>	M3.5x15mm Screw	88Pcs	
5	<b>←</b>	M4x38mm Screw	31Pcs	
6		Jcbc 'W' M6 x 40mm	8Pcs	
7	<b>©</b>	L Bracket	20Pcs	
8	9	Nail Leg	4Pcs	
9		Metal Drawer Slide 12" ( 300mm)	4Sets	


10	Minifix Cap	8Pcs
11	Metal Corner Bracket	4Pcs
12	L Key	1Pc

## Packing Tipping Restraint


13	<b>~~~~</b>	M3.5x15mm Screw	2Pcs
14	OE THE	Wall Plug	2Pcs
15	<b>4000000000</b>	M4x30mm Screw	2Pcs
16		Safety Strap	2Pcs
17	0	Flat Washer 6x19x2mm	4Pcs

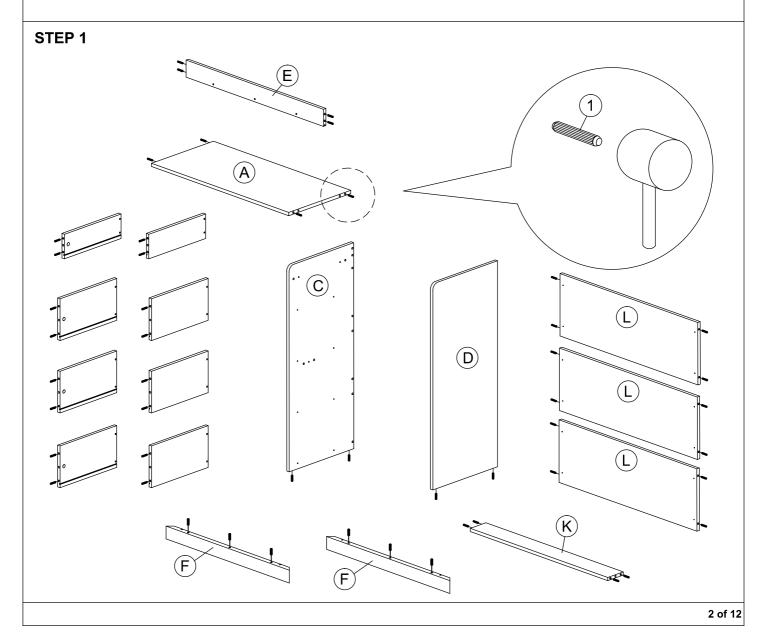


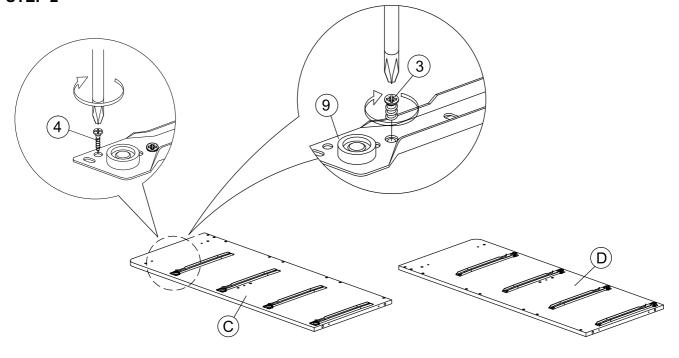

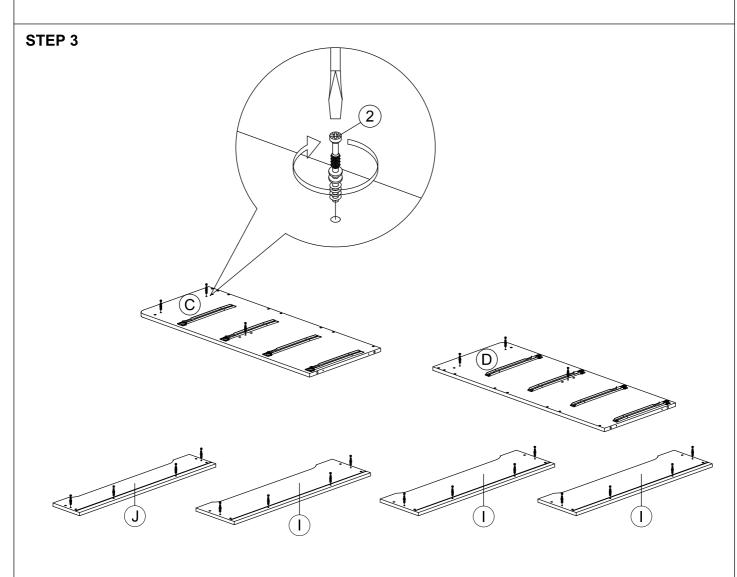



### STEP 4

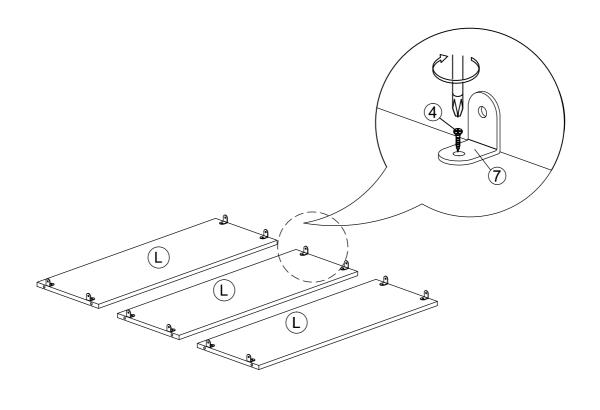


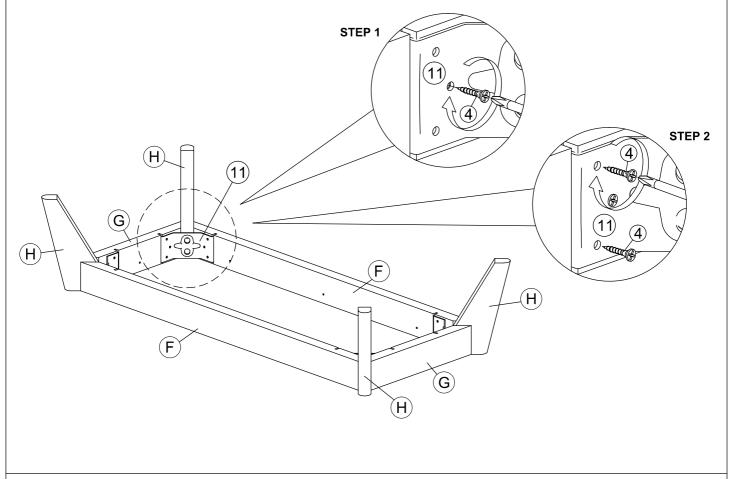


### STEP 6

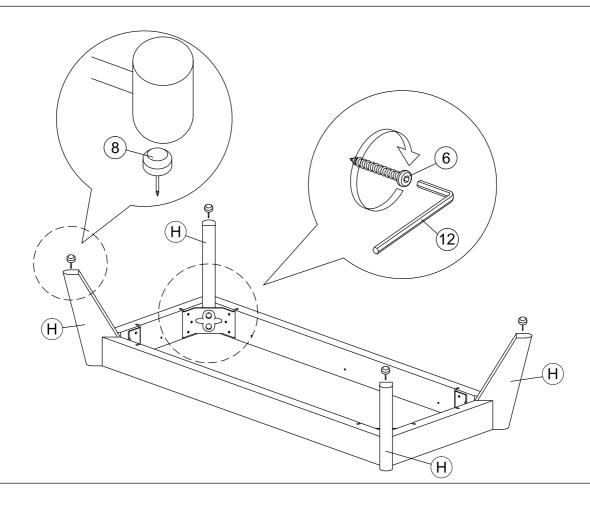


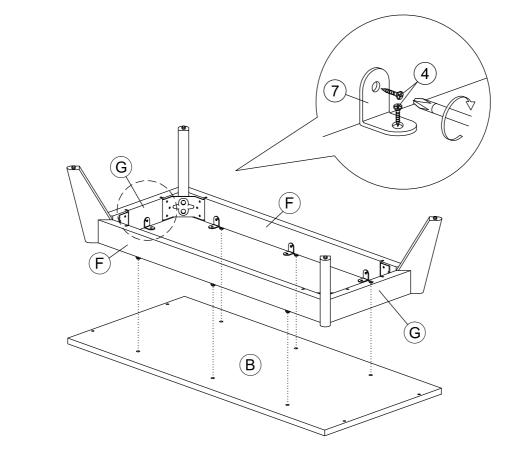


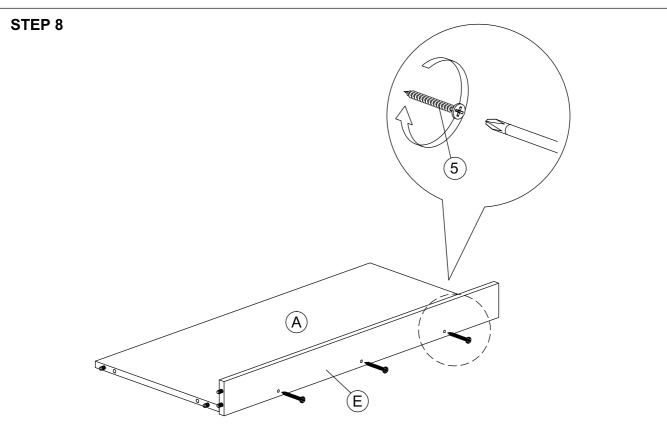

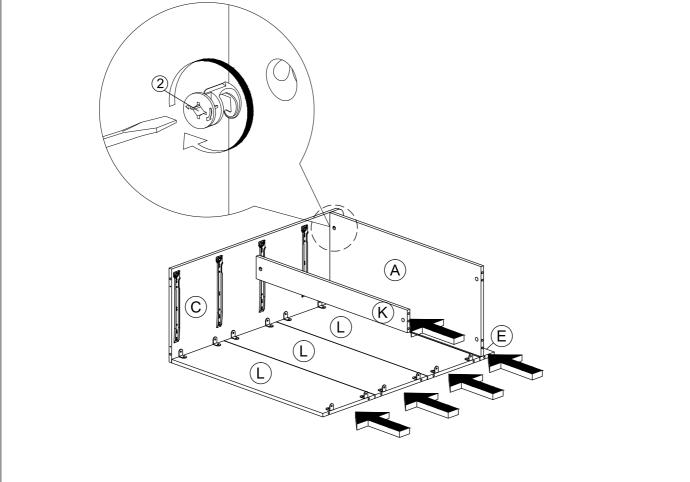


STEP 10

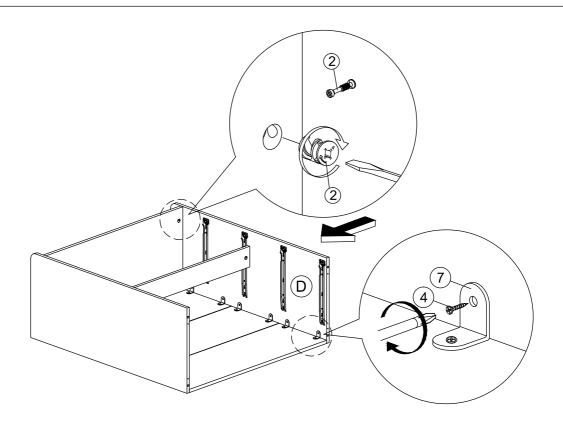


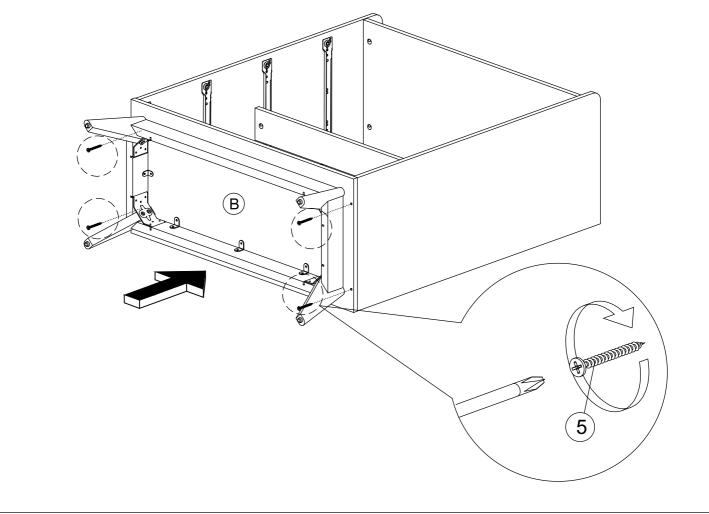


STEP 12

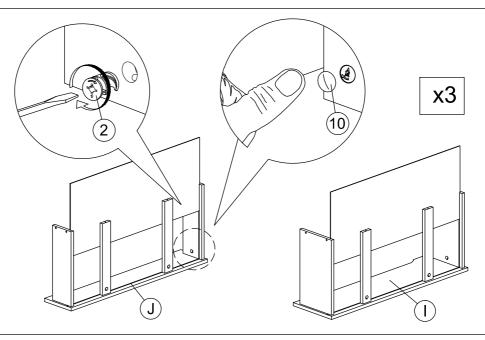


STEP 13

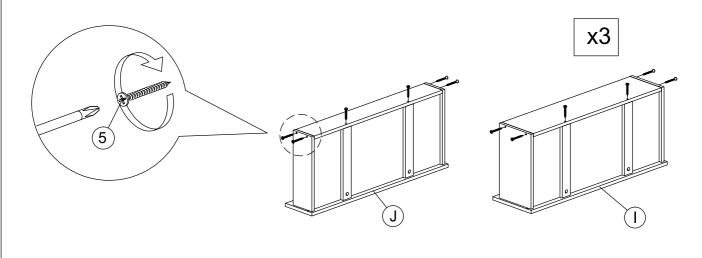

STEP 14

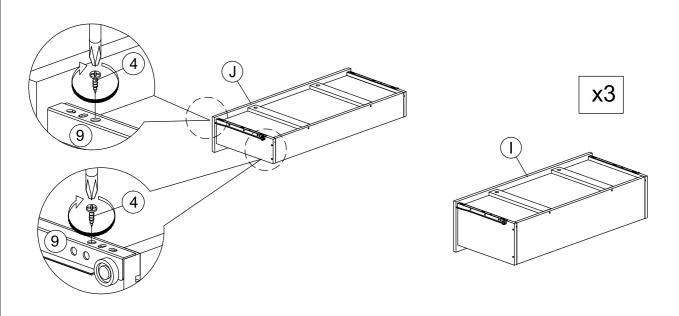


### STEP 15

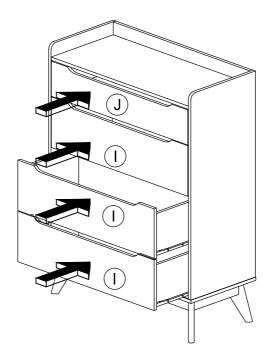





## **FURNITURE TIPPING RESTRAINT**

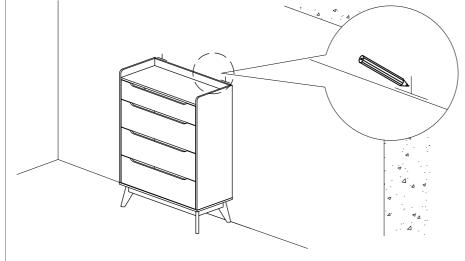

1.First mark the wall with pencil as in diagram.

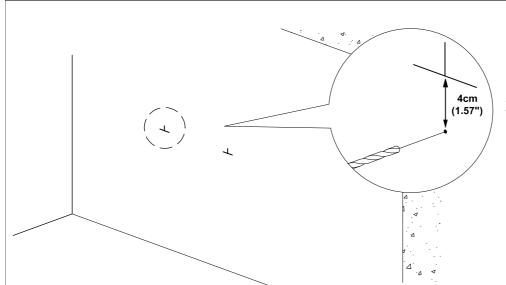


2. Drill small hole at the pencil mark.

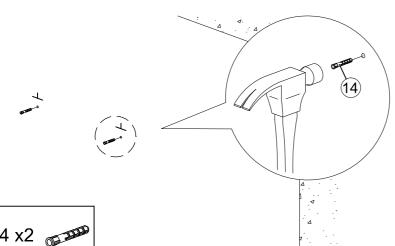

3. Insert plastic wall plug (14).

## **FURNITURE TIPPING RESTRAINT**

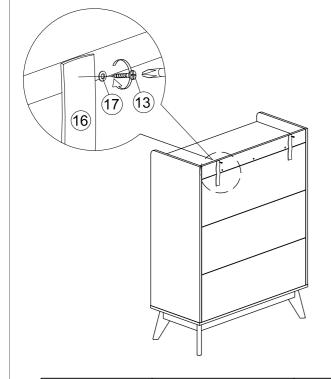


4. Add safety strap (16), washer (17) using 3.5x15mm screw (13) to back of cabinet.



16 x2

17 x2



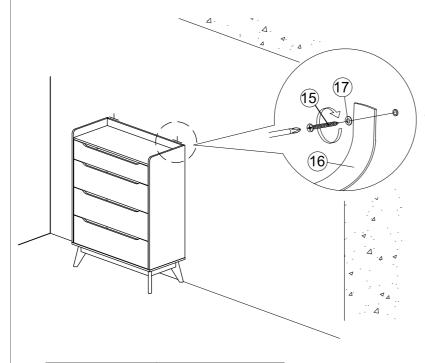

5. Finally, attach safety strap (16) and washer (17) using 4x30mm screw (15) to the wall.

17 x2







#### **A WARNING**

Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

- · Install tipover restraint provided.
- · Place heaviest items in the lowest drawers.
- Do not set TV's or other heavy objects on top of this product, unless the product is specifically designed to accommodate them.
- Never allow children to climb or hang on drawers, doors, or shelves.
- Never open more than one drawer at a time.
   (OR)
- Do not defeat or remove the drawer interlock system.

Use of tip-over restraints may only reduce, but not eliminate, the risk of tip-over.

This is a permanent label. Do not remove!




Anti-Topple hardware included for added safety and stability

Model: WI7496



#### **PART LIST**

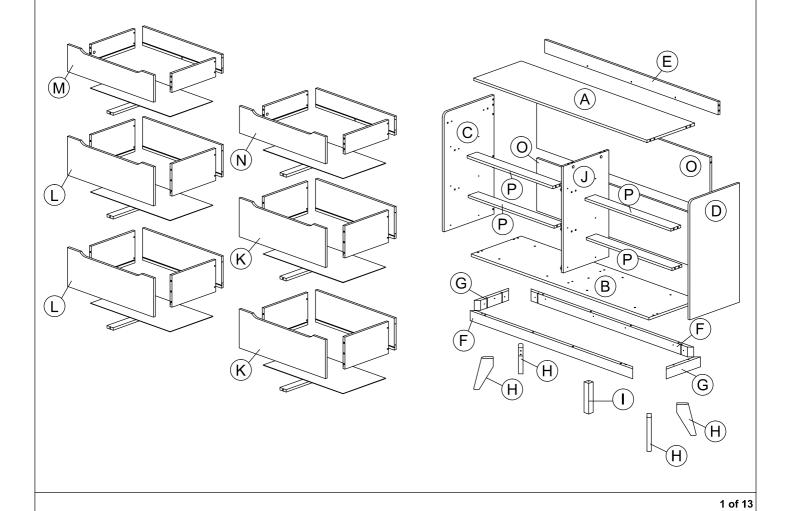



Hardware List				
No.	SHAPE	DESCRIPTION	Qty.	
1		8x25mm Wood Dowel	60Pcs	
2		15MM Myfix Minifix	28Sets	
3		M5x8mm Screw (Euro Screw)	24Pcs	
4	<b>~~~~</b>	M3.5x15mm Screw	96Pcs	
5	<b>⊕</b>	M4x38mm Screw	39Pcs	
6	<u></u>	Jcbc 'W' M6 x 40mm	9Pcs	
7	<b>@</b>	L Bracket	18Pcs	
8	9	Nail Leg	4Pcs	
9		Metal Drawer Slide 12" ( 300mm)	6 Sets	


10		Minifix Cap	12Pcs
11		Metal Corner Bracket	4Pcs
12		L Key	1Pc
13	0	Adjust Screw	1Pc
14		8x40mm Wood Dowel	2Pcs
15		15MM (DOUBLE) 63mm Myfix Minifix	2Sets

Packing Tipping Restraint


16	<b>~~~~</b>	M3.5x15mm Screw	2Pcs
17	OF THE	Wall Plug	2Pcs
18	<b>←</b>	M4x30mm Screw	2Pcs
19		Safety Strap	2Pcs
20	0	Flat Washer 6x19x2mm	4Pcs

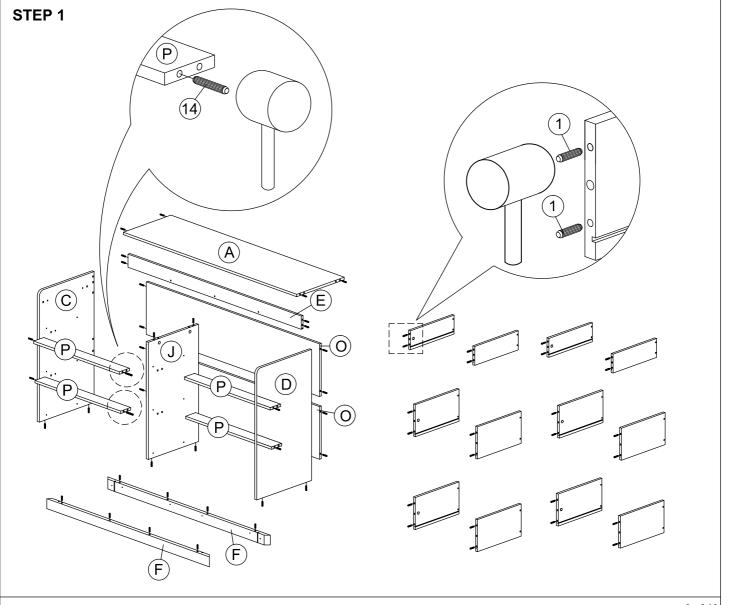


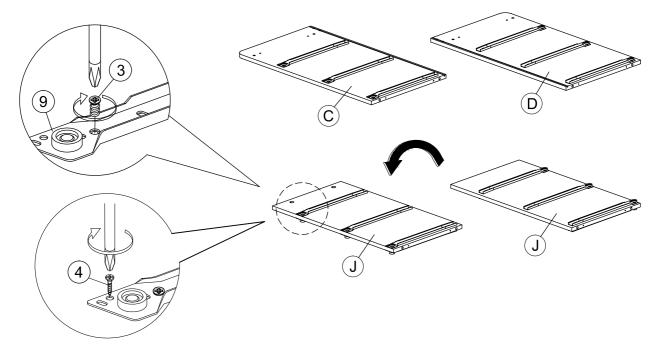


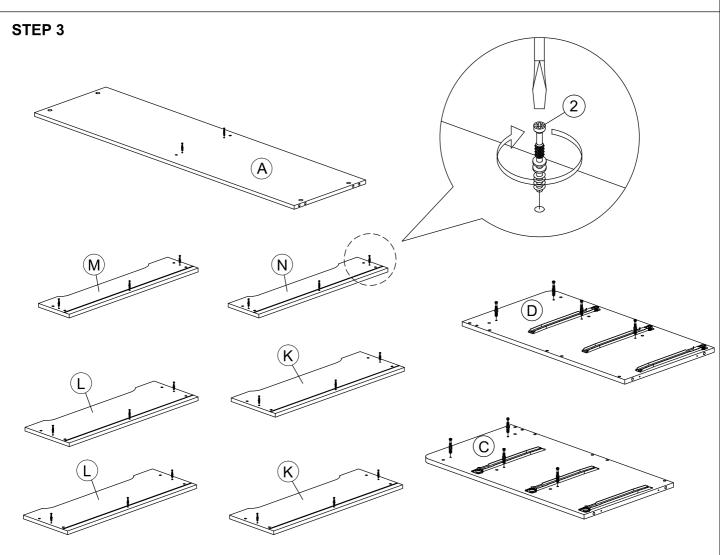


STEP 4

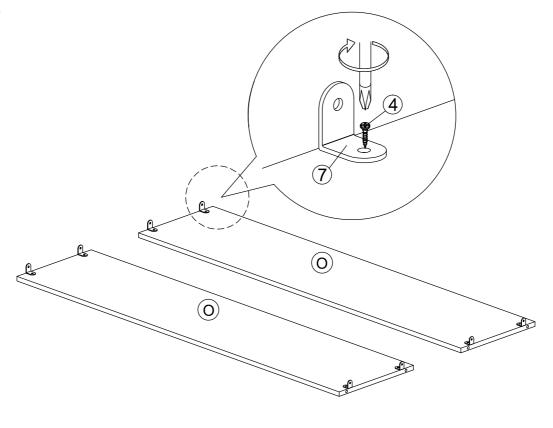


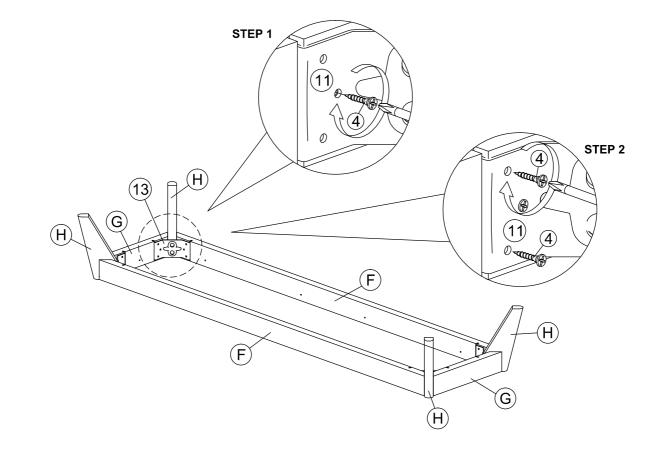


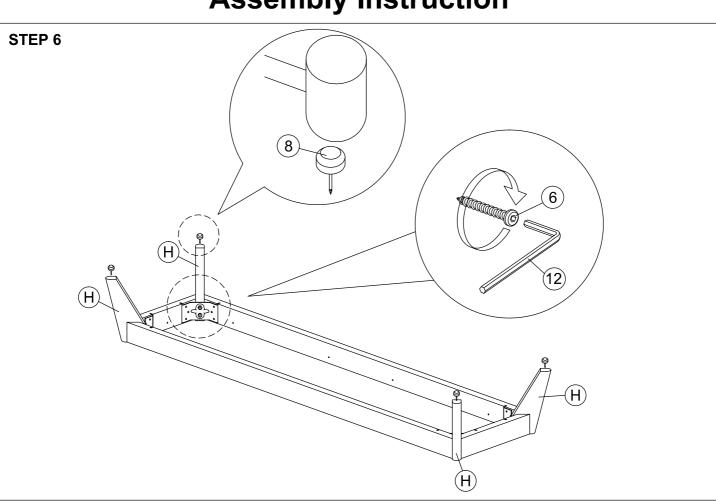


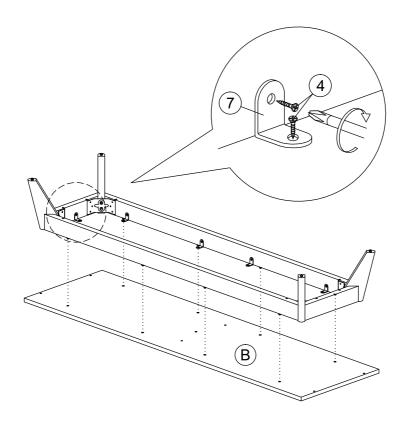


### STEP 8

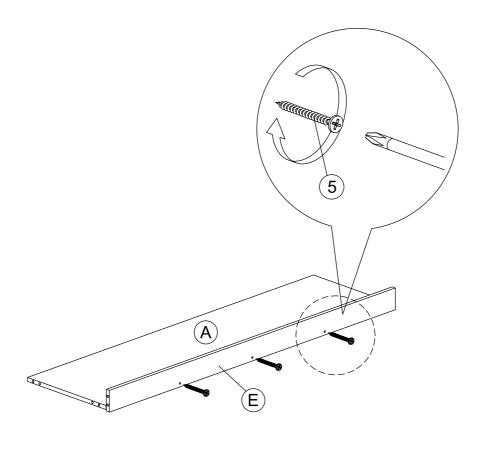


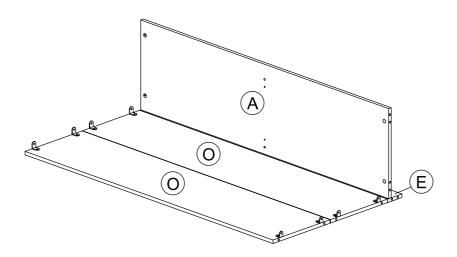

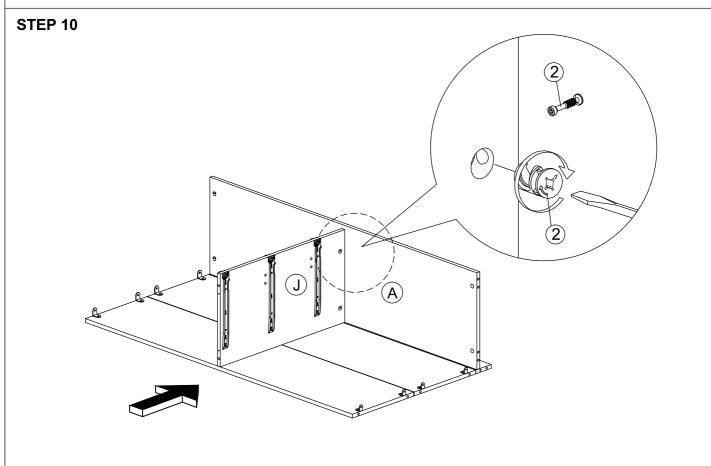


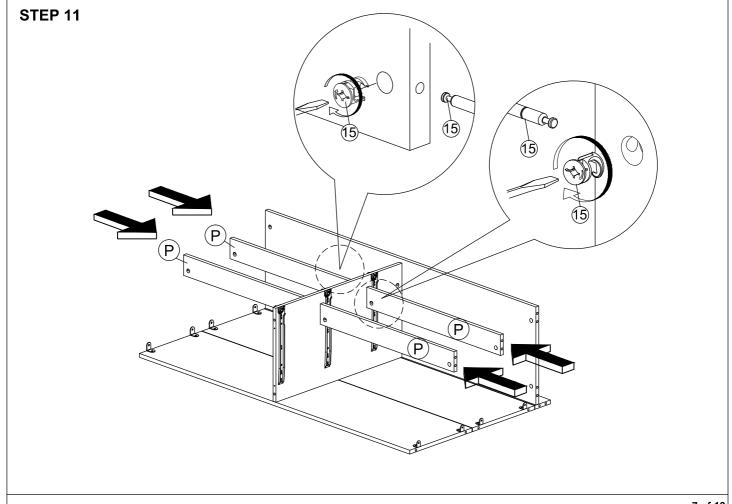


## **Assembly Instruction** STEP 12 2 (D) STEP 13

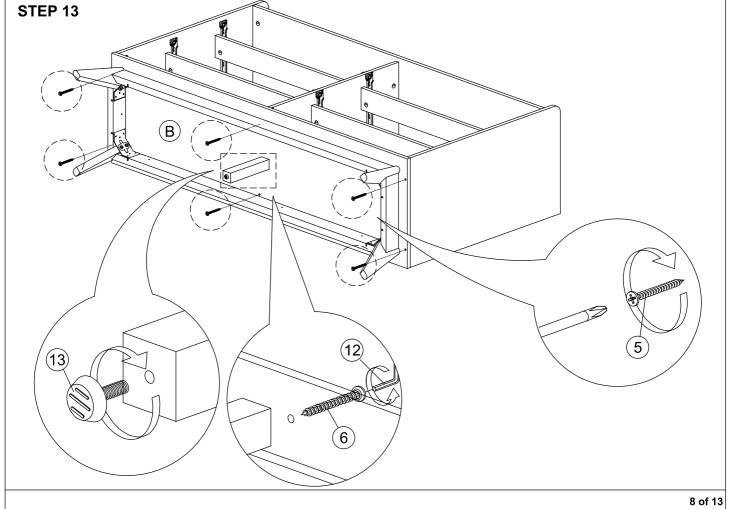


STEP 14

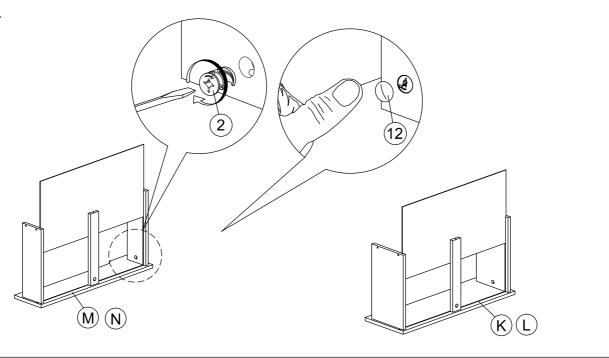


**STEP 15** 

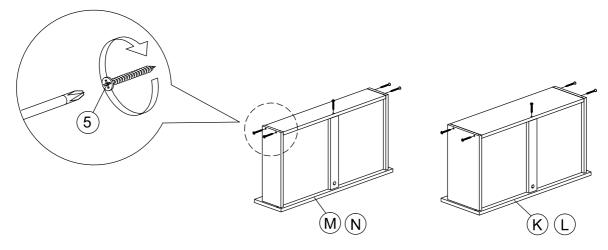

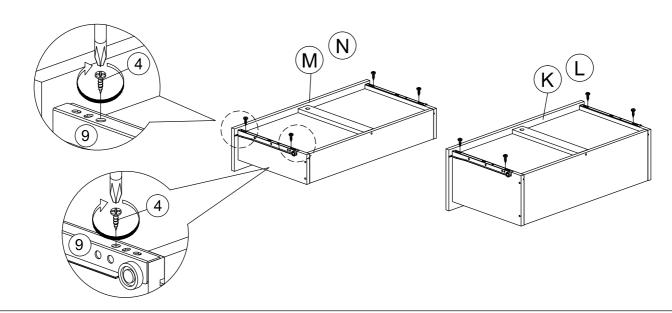

### STEP 17

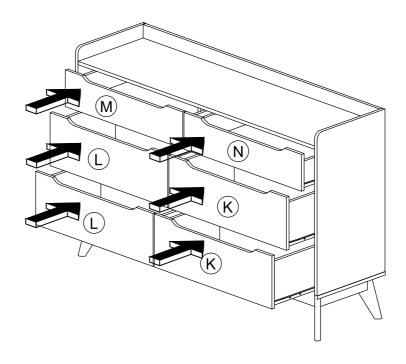


### Complete




# **FURNITURE TIPPING RESTRAINT** 1.First mark the wall with pencil as in diagram. 2. Drill small hole at the (1.57") pencil mark. 3. Insert plastic wall plug (17).


17 x2

## **FURNITURE TIPPING RESTRAINT**

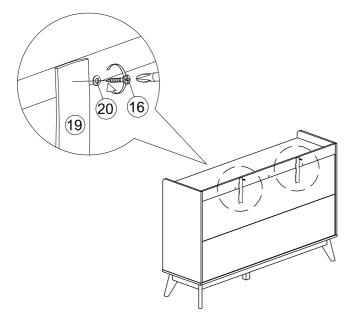


4. Add safety strap (19), washer (20) using 3.5x15mm screw (16) to back of cabinet.



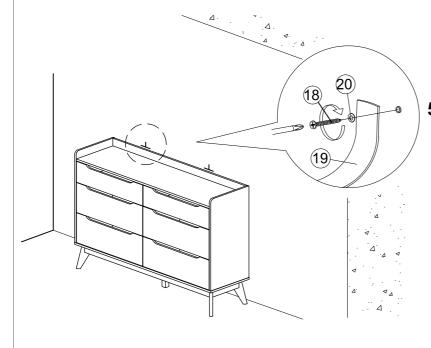



5. Finally, attach safety strap (19) and washer (20) using 4x30mm screw (18) to the wall.



20 x2



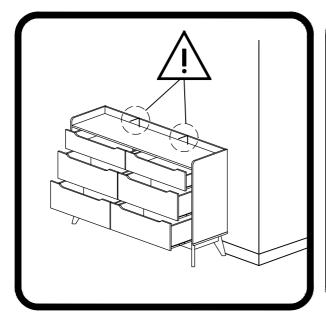

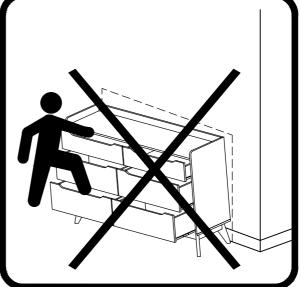

## **A WARNING**

Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

- · Install tipover restraint provided.
- · Place heaviest items in the lowest drawers.
- Do not set TV's or other heavy objects on top of this product, unless the product is specifically designed to accommodate them.
- Never allow children to climb or hang on drawers, doors, or shelves.
- Never open more than one drawer at a time. (OR)
- Do not defeat or remove the drawer interlock system.

Use of tip-over restraints may only reduce, but not eliminate, the risk of tip-over.

This is a permanent label. Do not remove!



Anti-Topple hardware included for added safety and stability