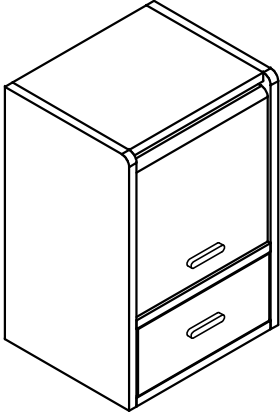
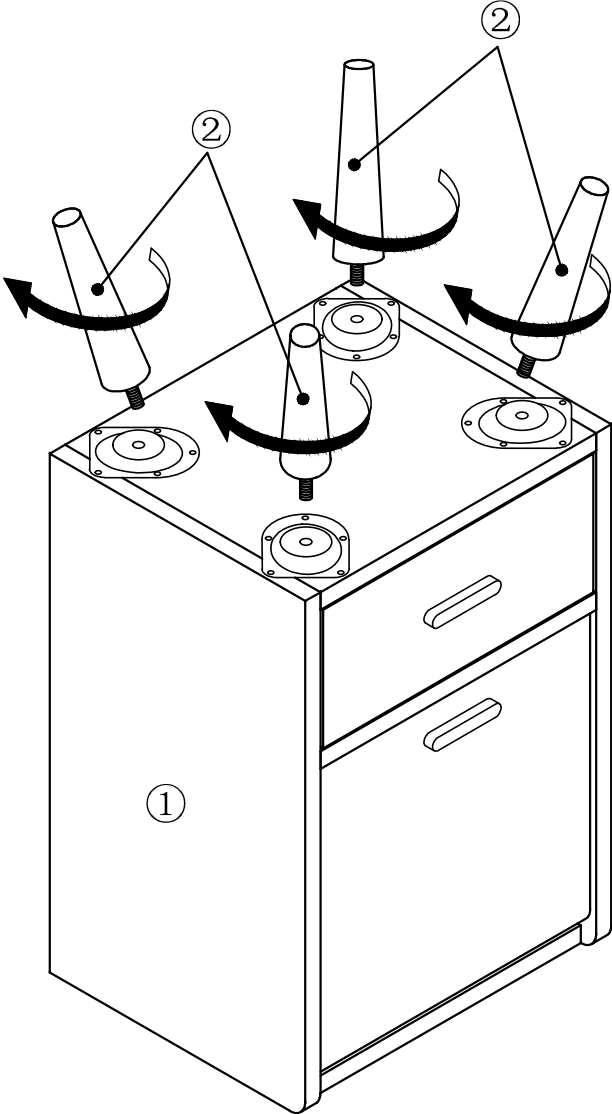
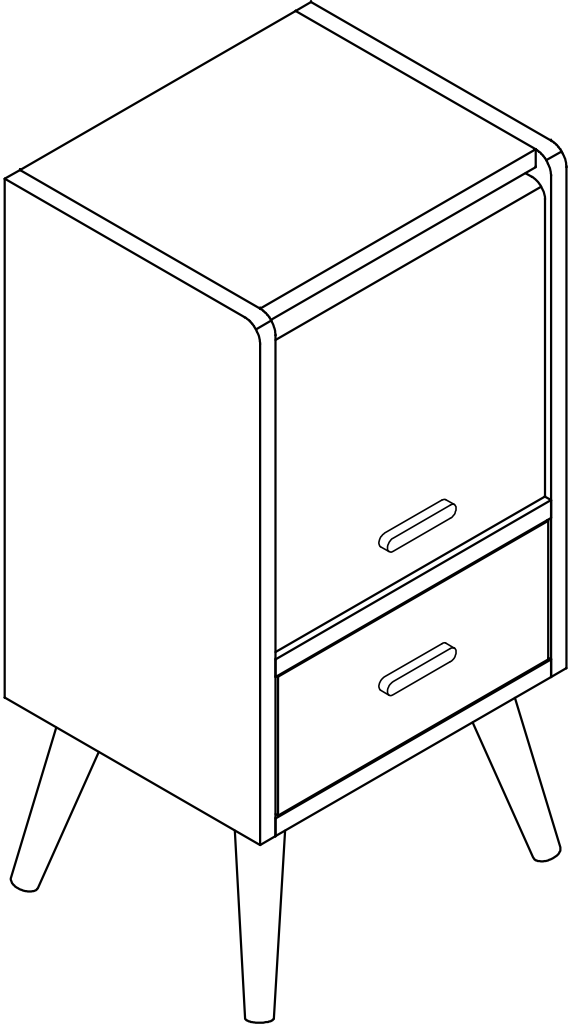



ASSEMBLY INSTRUCTION

ITEM: Pine/Bamboo-NS

NO	PART LIST	QTY	STEP 1 Begin assembly by screwing wooden legs (2) to the bottom side of Cabinet(1).	STEP 2 Assembly Complete.
①	 <p data-bbox="152 807 495 866">ONE DRAWER ONE DOOR CABINET</p>	1PC		
②	 <p data-bbox="197 1461 454 1520">WOODEN LEG WITH SCREW</p>	4PCS		