



Attach piece 2 & 3 to piece 4 using wooden dowels (F), screws (C).

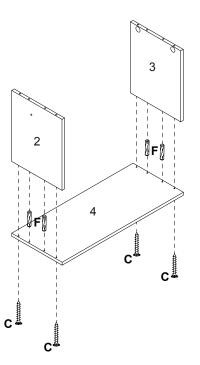

×3

Α	*	12 PCS
В	<b>®</b>	12 PCS
С	<b>⊕</b> 11111111>	14 PCS
D	<b>S</b>	16 PCS
Е	condico	2 PCS
F		24PCS
G		12PCS

Then attach piece 1 using wooden dowels (F), cam dowels (A) and cam locks (B), tighten the cross dowels then attach screw covers (G).

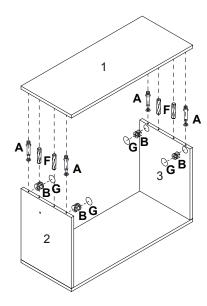

×3

