
Desk

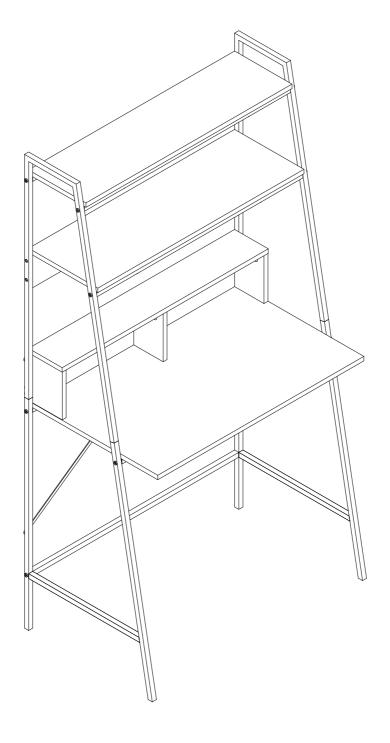

ASSEMBLY INSTRUCTION

Date last updated: 7-22-2021

HA	RDWARE L	IST					
Α		В		С		D	
11 pcs	M6×35mm	11 pcs	Ø15×12mm	12 pcs	M7×38mm	6 pcs	Ø7.8×30mm
Е		F		G	@ IIII	Н	
12 pcs	M6×35mm	10 pcs	M6×25mm	12 pcs	M6×12mm	1 pc	4mm
I	ST. 17	J	Q	K	(A)	L	
1 pc	Jan.	1 pc	<a hr<="" td=""><td>1 pc</td><td>~0000({})</td><td>1 pc</td><td></td>	1 pc	~0000({})	1 pc	
М							
4 pcs							

PARTS LIST





2 - 2pcs




3 - 5pcs




4 - 1pc



5 - 2pcs



6 - 1pc



7 - 1pc



8 - 1pc



9 - 1pc




10 - 2pcs



11 - 1pc




12 - 1pc




ASSEMBLY STEPS

Fix part 1 to part 2 using screw (G), as shown.


Adjust foot (M) lock to sole of foot as shown.

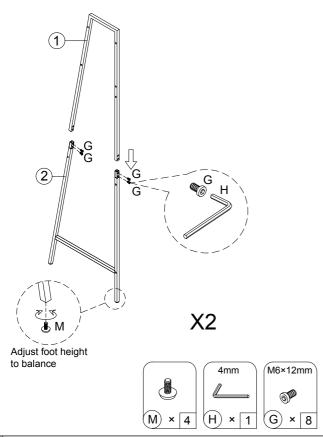


Fix part 3 and 4 to assembled part 1 and 2 using screw (E), as shown.

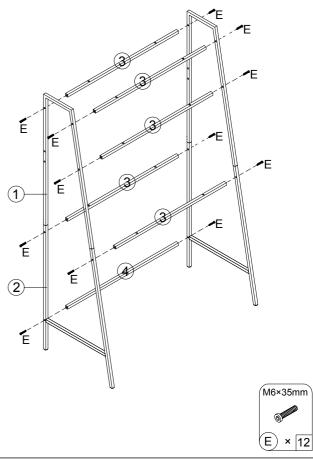

Fix parts 5 to assembled unit using screw (G), as shown.

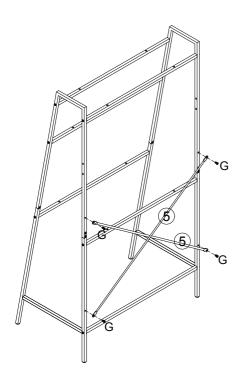

M6×12mm (G) × (4) Insert quickfit screws (A) to part 7.
Insert cam locks (B) and wooden dowels (D) to part 8.
Fit part 7 to part 8.
Turn cam locks clockwise to tighten.

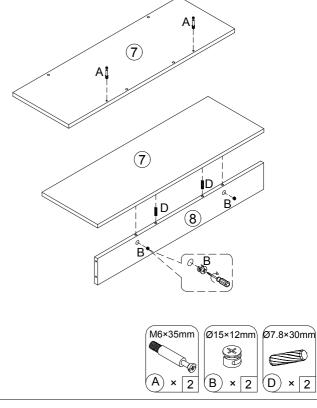


ASSEMBLY STEPS

Insert quickfit screws (A) and wooden dowels (D) to part 9.

Insert cam locks (B) to parts 10 and 12.

Fit parts 10 and 12 to part 9.

Turn cam locks clockwise to tighten.

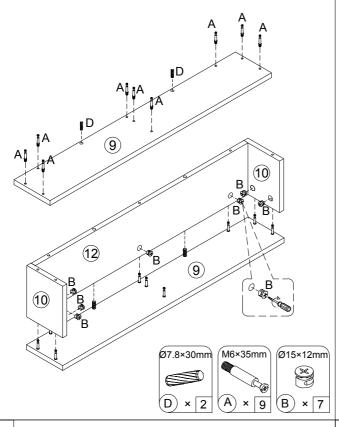


6 Insert wooden dowels (D) to part 12.

Insert cam locks (B) to parts 11.

Fit part 11 to part 9. Turn cam locks clockwise to tighten. Fit part 13 to assembled parts.


Secure part 13 to assembled parts using screw (C),

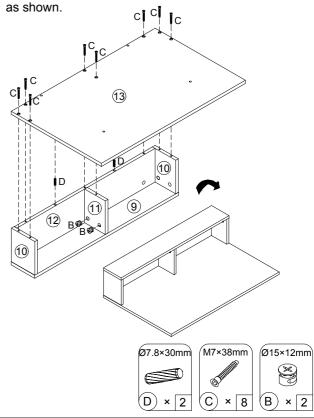

Fix part 13 to assembled unit using screw (F), as shown.

Fix part 7 and 8 to assembled unit using screw (C) and (F), as shown.

Fix part 6 to assembled unit using screw (F), as shown.

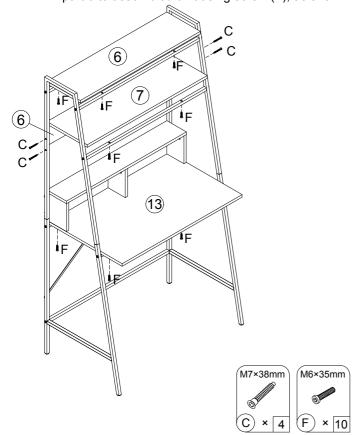

Fix wall strap (L) to assembled unit using screw (K), as shown.

For extra stability, it is recommended that you fix your desk to the wall using the screw (J), as shown.

Should you choose not to affix the product to the wall, serious injury may be caused if the product tips over.

