



Assembly Instructions

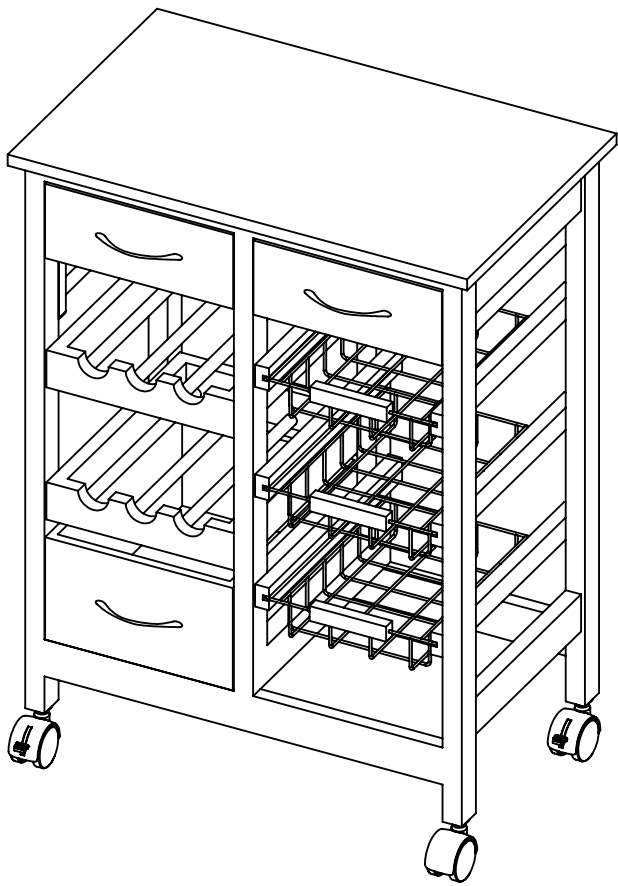

Ax2 (with brake)



Bx2 (without brake)




Cx3



Dx6



Push the side handle up

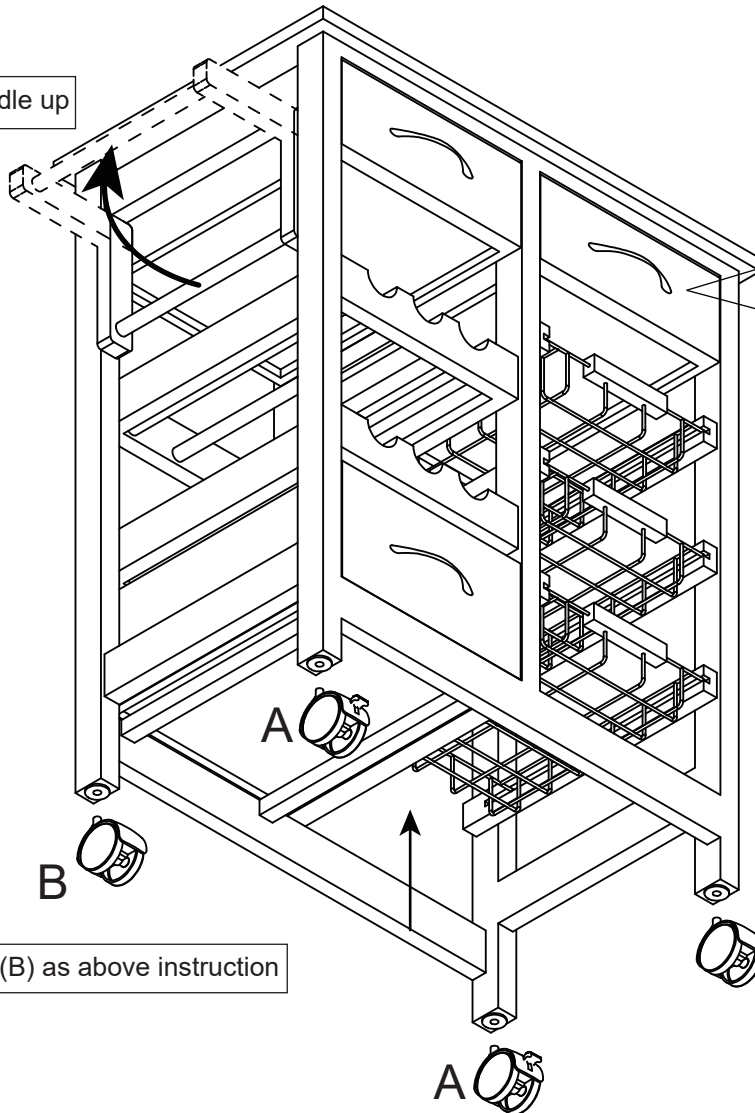

Attach handle (C) to wooden drawer by securing with screw (D)

Attach (A) and (B) as above instruction