
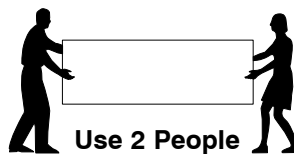


9005 Nightstand











Assembly Instructions

WI-0222

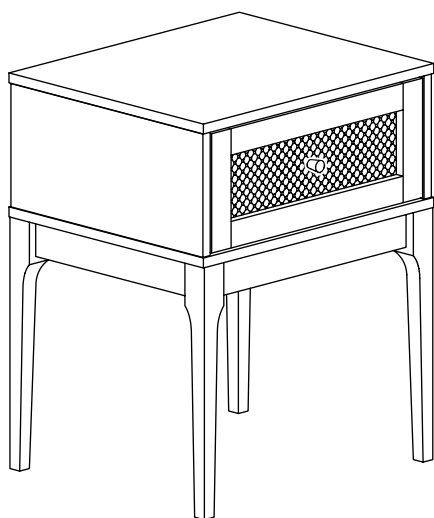

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

1 Parts List

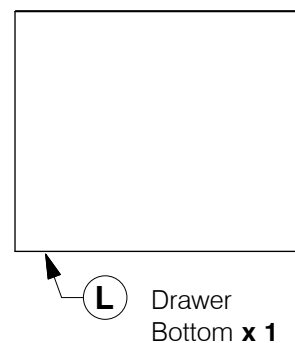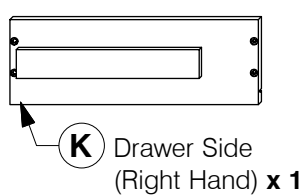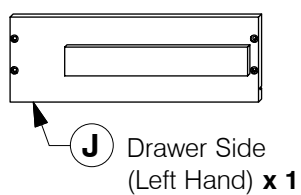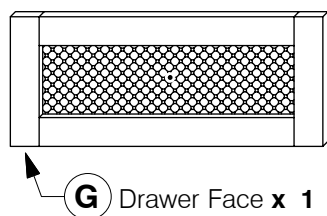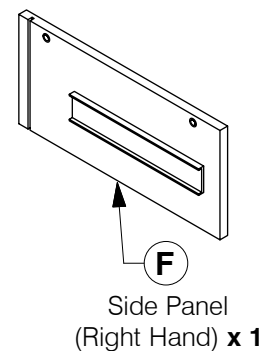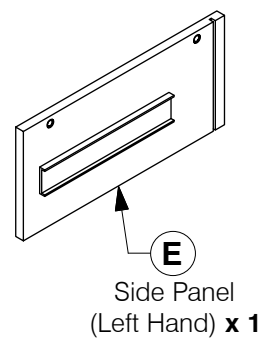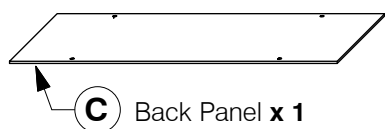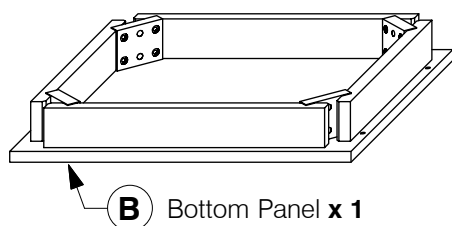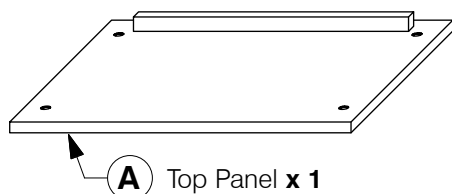













9005 Nightstand


Assembly Instructions

WI-0222


2 Hardware List

- | | | | | | |
|---|---|---|---|---|---|
|  |  |  |  |  |  |
| 1 M6 x 15mm JCB
x 8 | 2 M6 x 60mm JCB
x 8 | 3 M4 x 25mm Wood Screw
x 8 | 4 M4 x 20mm Wood Screw
x 2 | 5 M4 x 16mm Wood Screw
x 4 | 6 CSK Cap Wood Screw
(M6 x 50mm) x 4 |
|  |  |  |  |  |  |
| 7 Spring Washer
x 8 | 8 Flat Washer
x 8 | 9 'L' Bracket (5005-3)
x 4 | 10 M4 x 16mm Wood Screw
x 1 | 11 Handle (1005)
x 1 | 12 Allen Key
x 1 |


3 Assemble the Drawer Sides (J & K) to the Drawer Face (G).

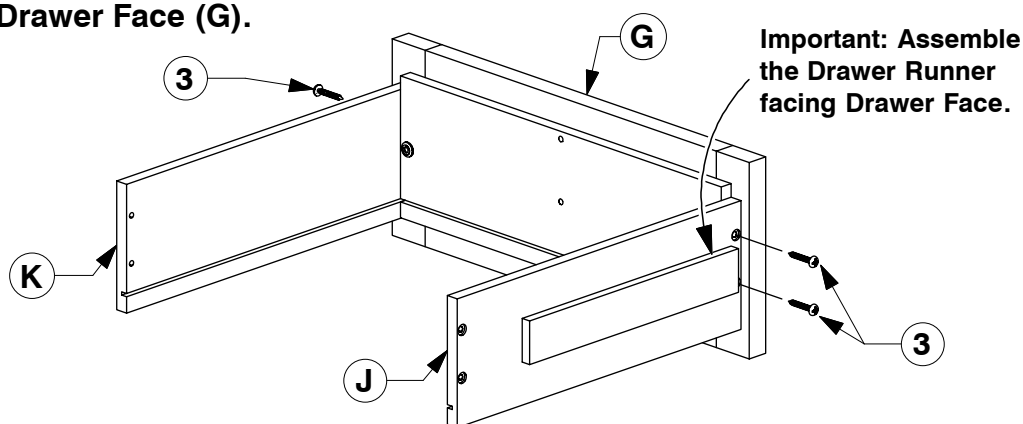

4 Slide the Drawer Bottom (L) into the groove on the Drawer Sides (J & K).

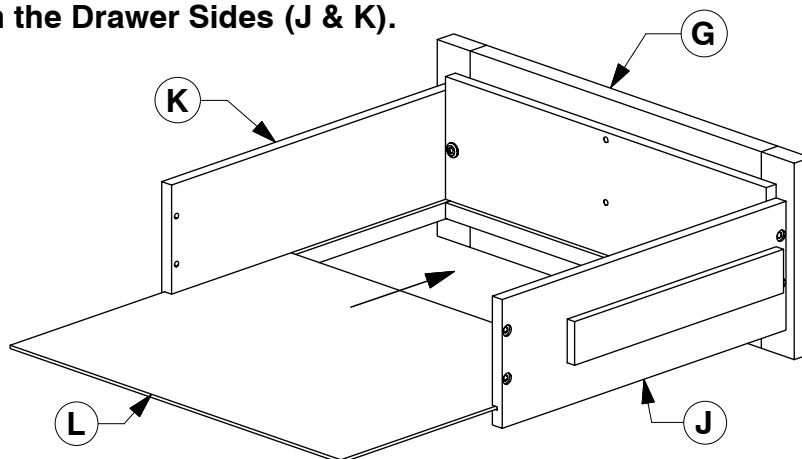

5 Assemble the Drawer Back (H) to the Drawer Sides (J & K).

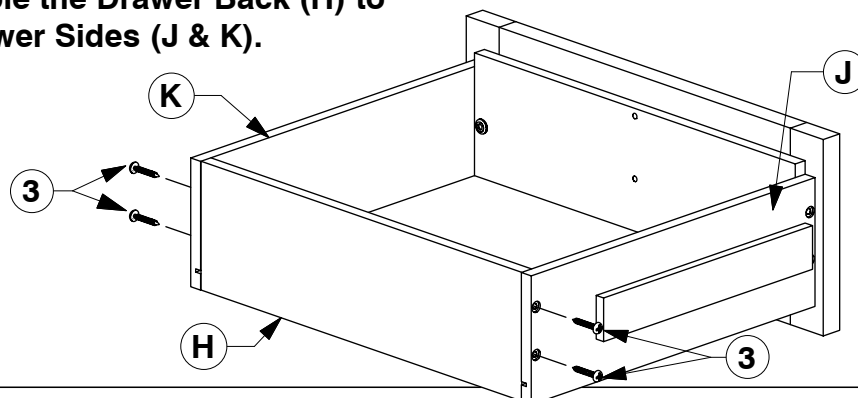


9005 Nightstand


Assembly Instructions

WI-0222

6 Fit the 'L' Bracket to the Side Panel (E & F).

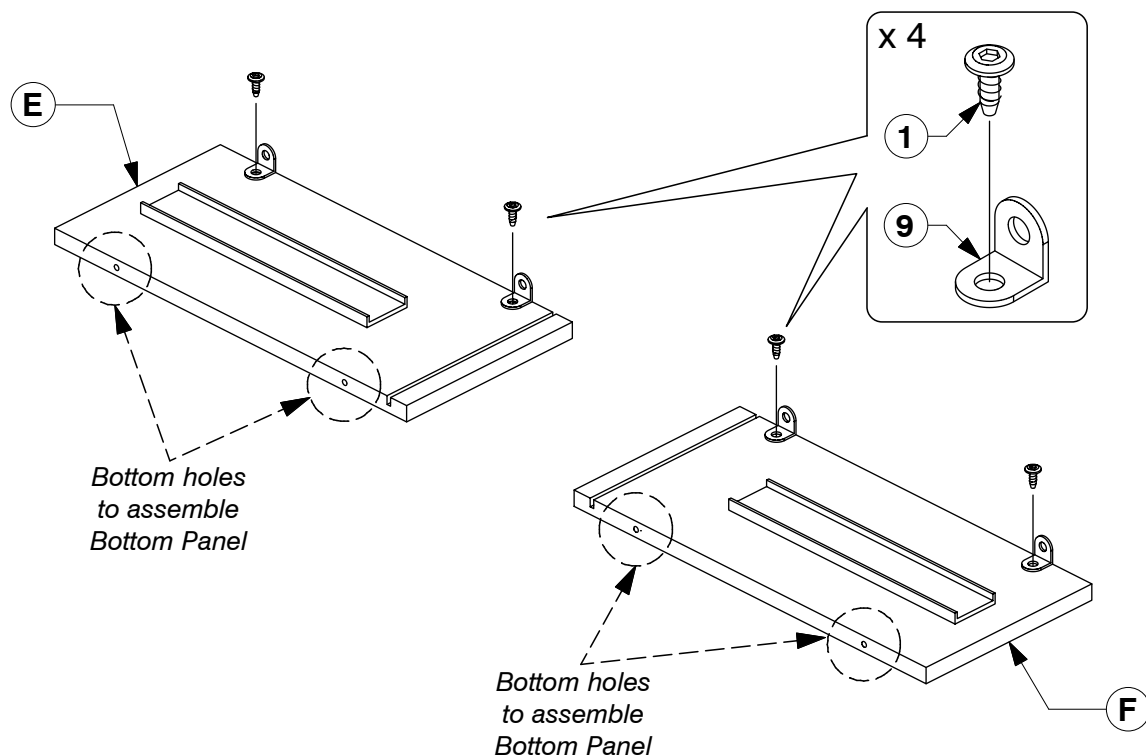

7 Assembled the Side Panel (E & F) to the Top Panel (A).

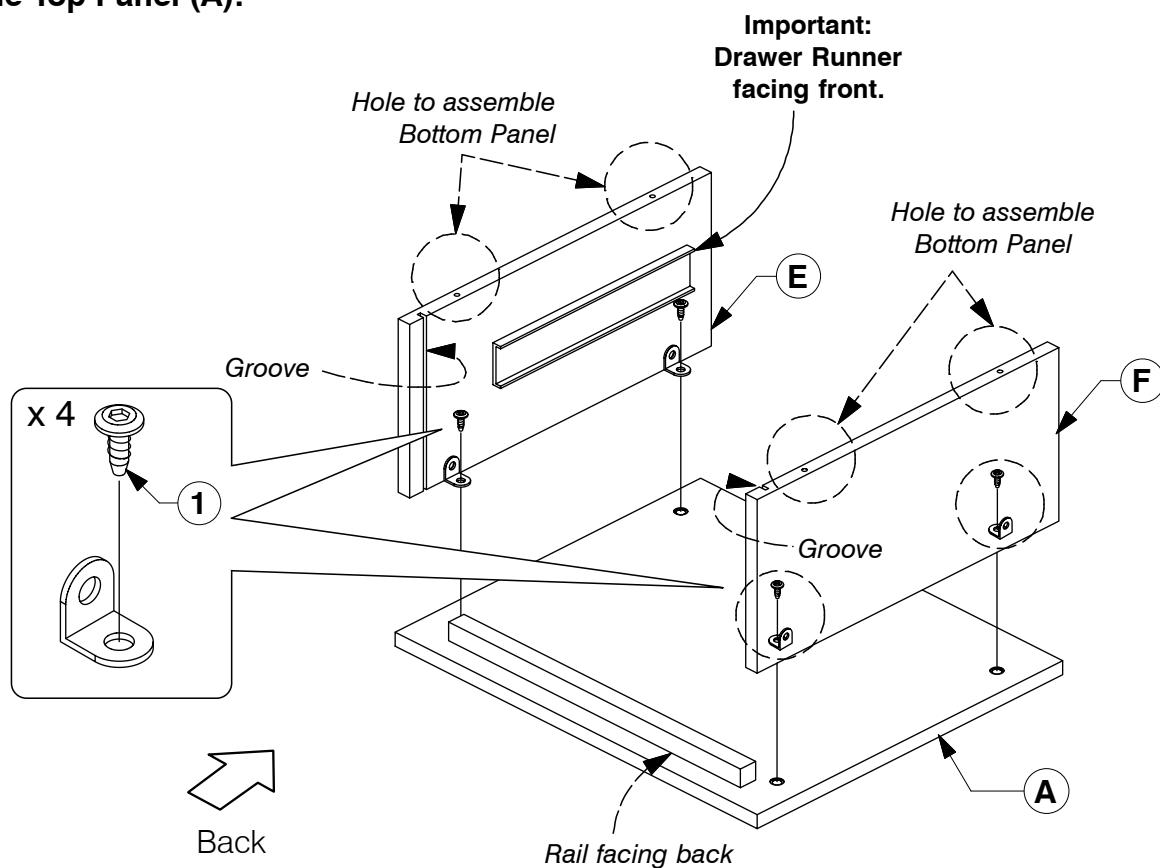


9005 Nightstand


Assembly Instructions

WI-0222

- 8** Slide the Back Panel (C) into the groove on the back of the Side Panel (E & F).

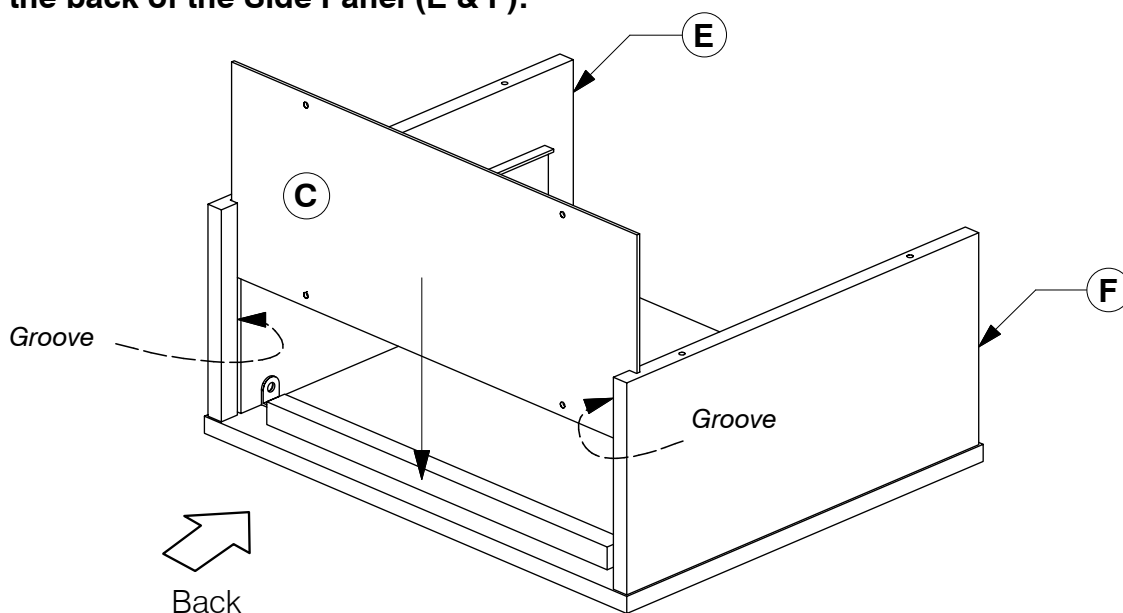

- 9** Fit the Bottom Panel (B) to the Bottom of the Side Panel (E & F).

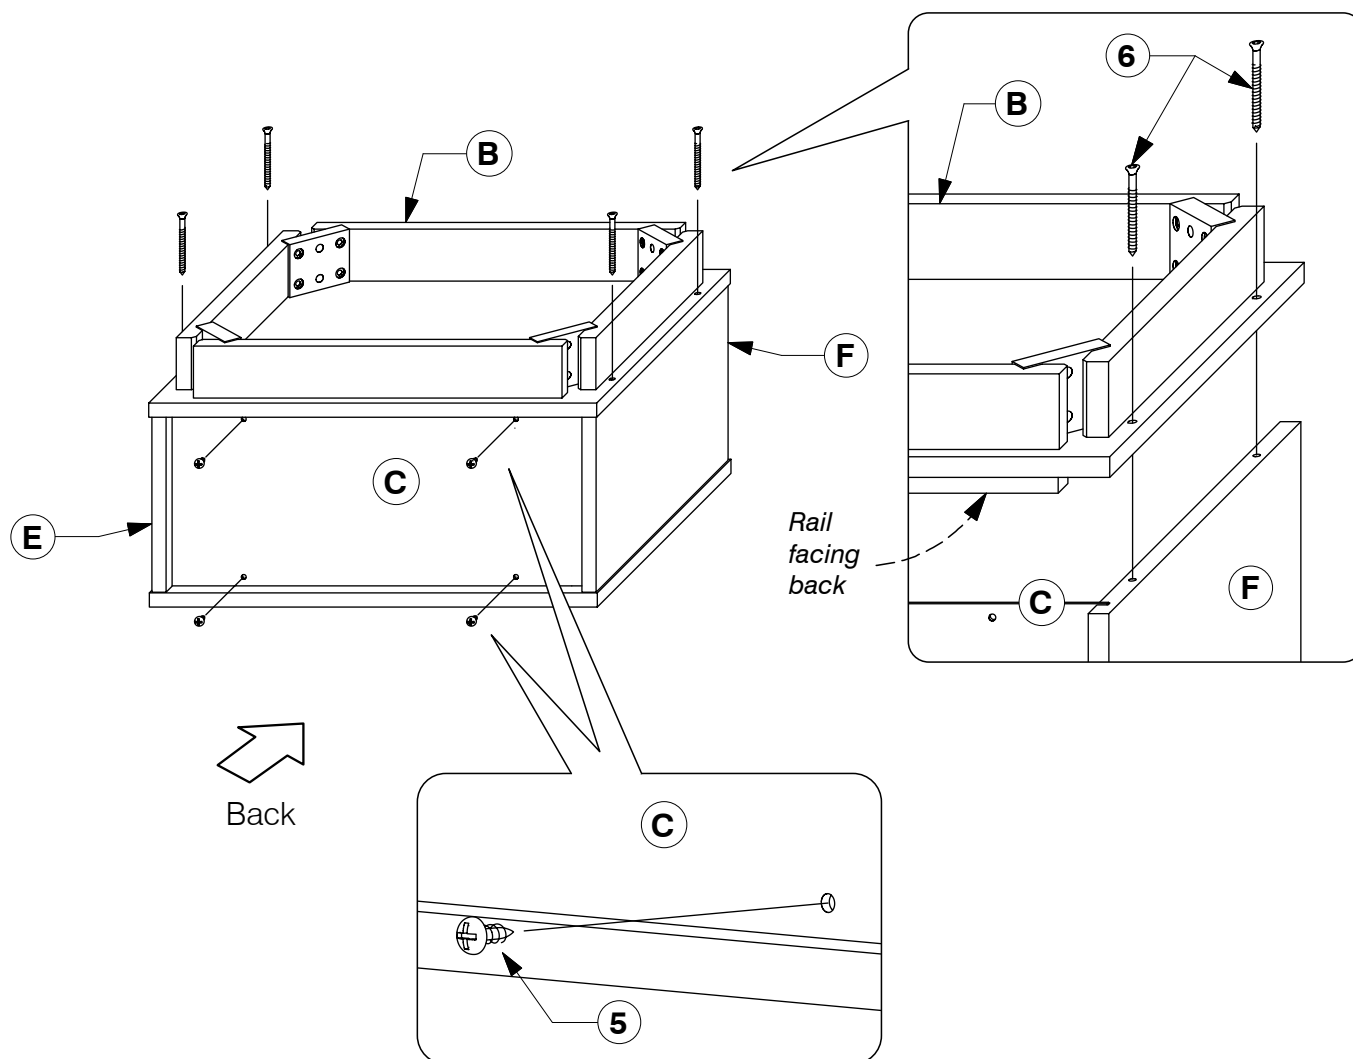


9005 Nightstand

Assembly Instructions


WI-0222

10 Fit the Post (D) to the Bottom Panel (B).

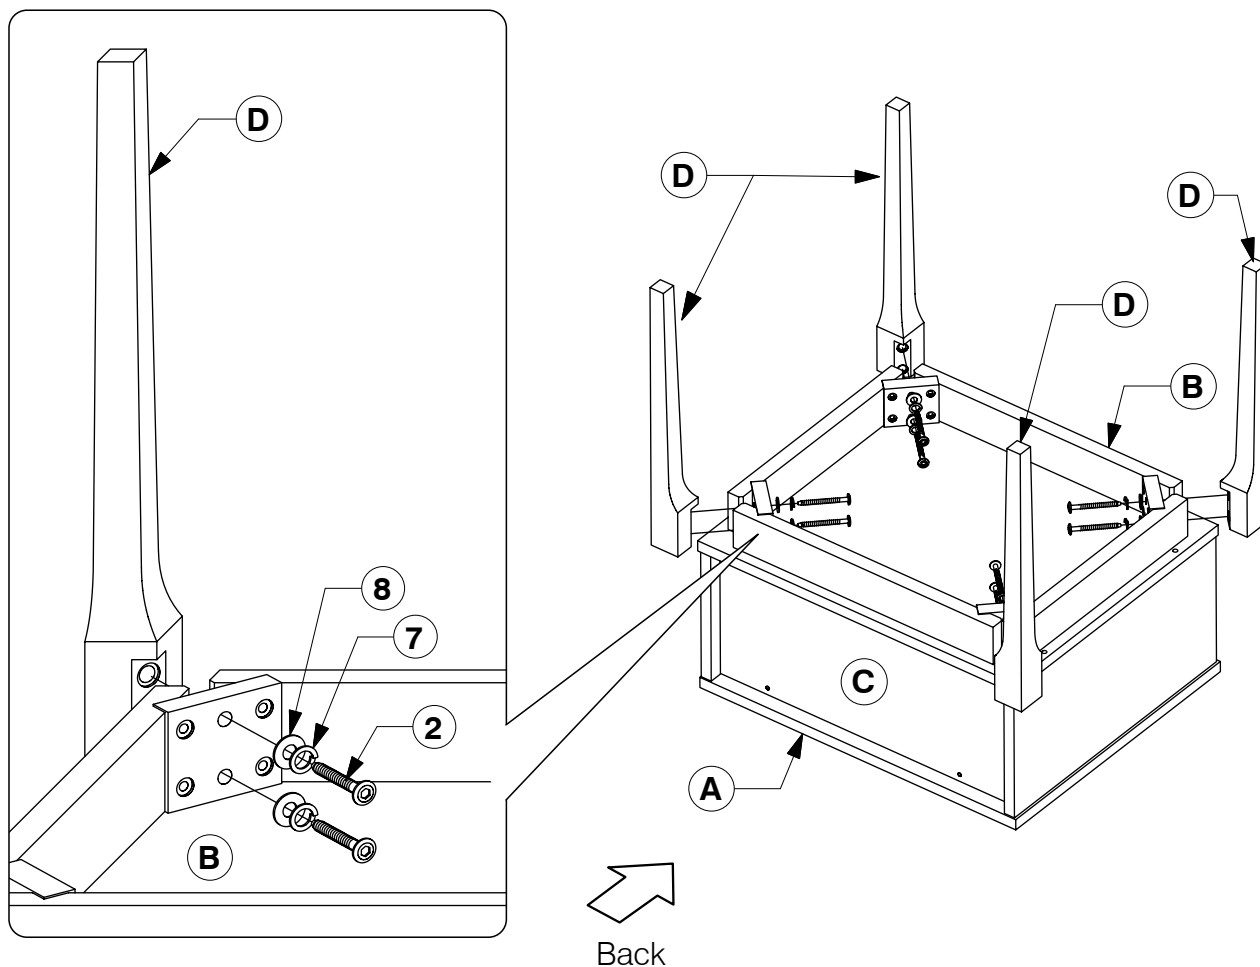

11 Fit and adjust the Drawer Face (G).

* NOTE: Before fitting the Wood Screws.
Loosen the JCBs on the Drawer Face if
the face needs alignment.

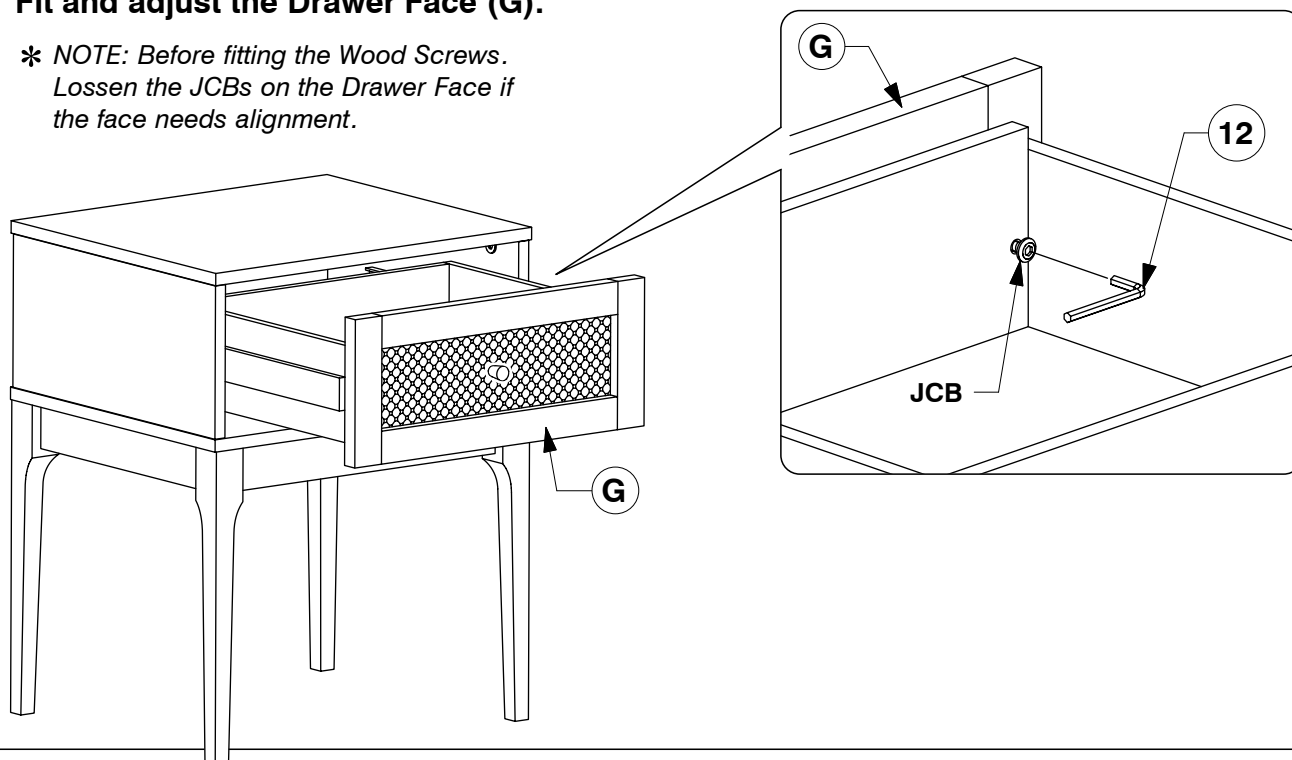


9005 Nightstand

Assembly Instructions

WI-0222

- 12** After the Drawer Faces (G) are aligned, secure with wood screws.

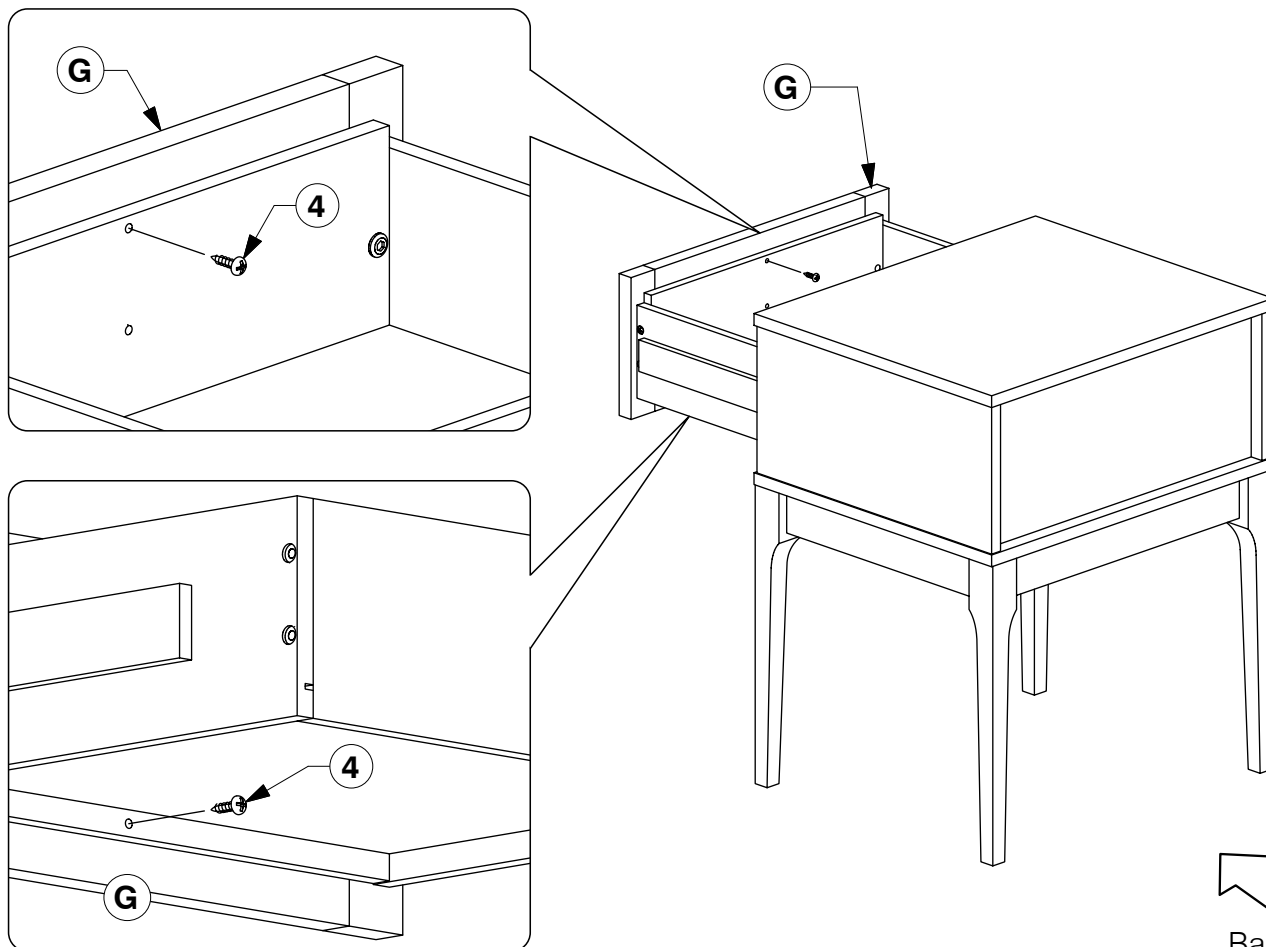

- 13** Finally, fit the Handle to the Drawer Face (G).

