
BELLATERRALHEME

Model: 203045



Remove the vanity and hardware from box and place vanity on soft or protective surface to avoid damage to the vanity.

Please check to see that all hardware and parts are present prior to assembly.

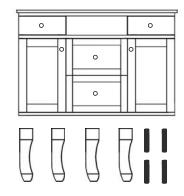


Step 1

Step 3


Twist on the leg to each of the rods, hand tightens each of the legs until it is tight and in line with the cabinet.

DO NOT USE ANY TOOLS, ONLY HAND TIGHTENING IS NEEDED.

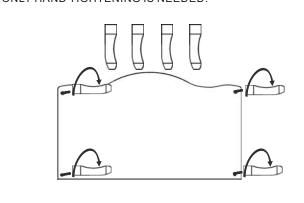

Flip the vanity with the back side down on a soft surface. Align and fasten the 4 thread rods to the pre-drilled holes on the bottom of the cabinet

DO NOT USE ANY TOOL TO TIGHTEN THE RODS, IT WILL DAMAGE THE THREAD.

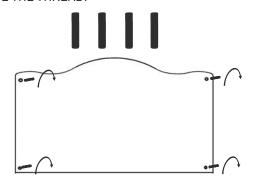

Step 2

Gently lift the vanity back up in the upright position and assembly is complete. The unit is now ready to be installed at the desired location.


***** This is a fragile and heavy cabinet. We recommend two people to lift and flip this cabinet****



Step 4

REMARKS: TO AVOID DAMAGE ON THE COUNTER TOP AND VANITY, PLEASE BE CAREFUL WHEN LIE DOWN AND LIFT UP THE VANITY SINCE THE COUNTER TOP IS A FRAGILE UNIT.

INSTRUCTIONAL PURPOSE ONLY.



NOTE: SINK STYLE, SHAPE, FAUCET HOLES, CUTOUT ON TOP, VANITY MAY VARY FROM THE PICTURE ABOVE. INSTRUCTIONAL PURPOSE ONLY.