


804300-BL Installation Guide


RIGHT HAND AND LEFT HAND CONFIGURATIONS

RIGHT HAND HINGED (FROM FACTORY)

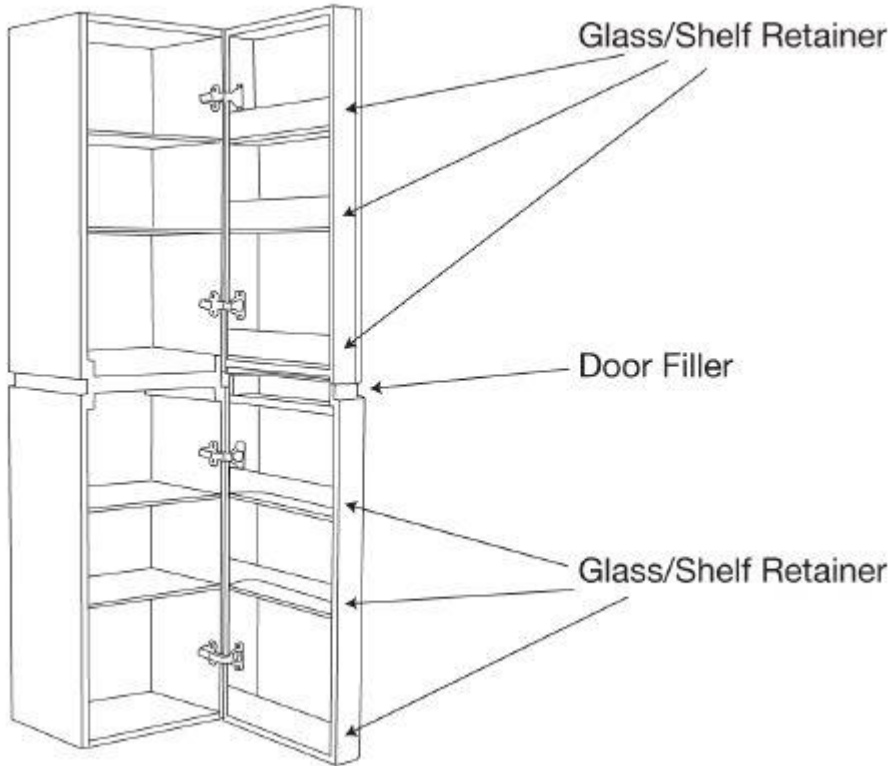

LEFT HAND HINGED

- Move Door Filler from TOP Door to BOTTOM Door
- Flip all shelves

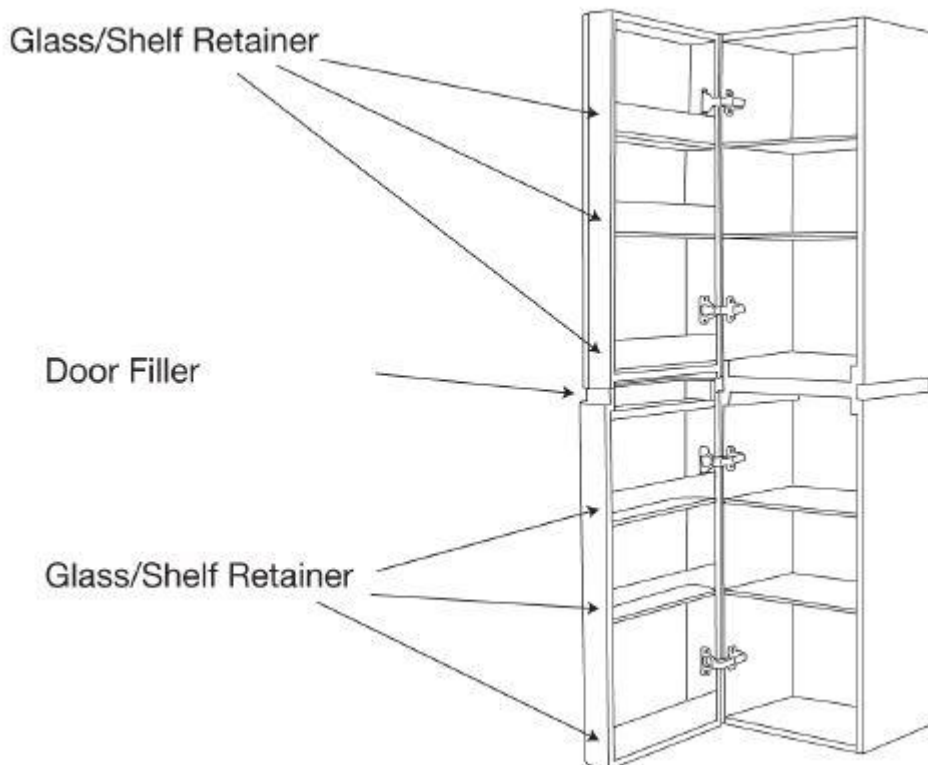

TYPICAL INSTALLATION

Typical installation height usually matches adjacent medicine cabinet or mirror height: 78" (1981mm). If different height is desired, adjust the height of the wood backing and of the French Cleat.

