

# ASSEMBLY & INSTALLATION INSTRUCTIONS

808175-M-26

## INTRODUCTION

To ensure that your installation proceeds smoothly, read these instructions carefully before you begin. Also, review the recommended tools and materials section. Carefully unpack and examine your new plumbing fixture.

**ALL INSTALLATION PROCEDURES MUST COMPLY IN STRICT ACCORDANCE WITH APPLICABLE LOCAL PLUMBING AND BUILDING CODES**

### Tools and materials Required


Most of the procedures require the use of available hand tools and plumbing supplies. It is essential that the tools and materials be on hand before work is begun.




Adjustable wrench



Saber Saw

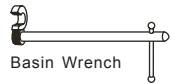

Basin Wrench

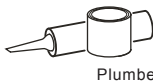

Plumbers' Putty or Caulking



Pipe Wrench



Putty Knife




Tape Measure



Tubing Cutter



Hacksaw



Regular Screwdriver




Hammer




Level


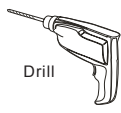


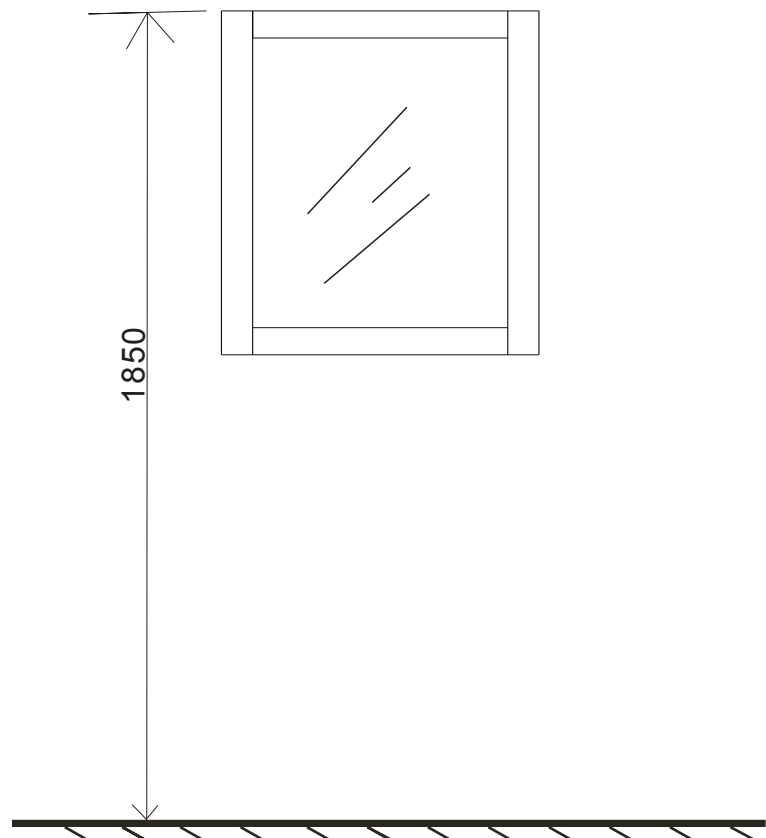



### Roughing-in Dimensions

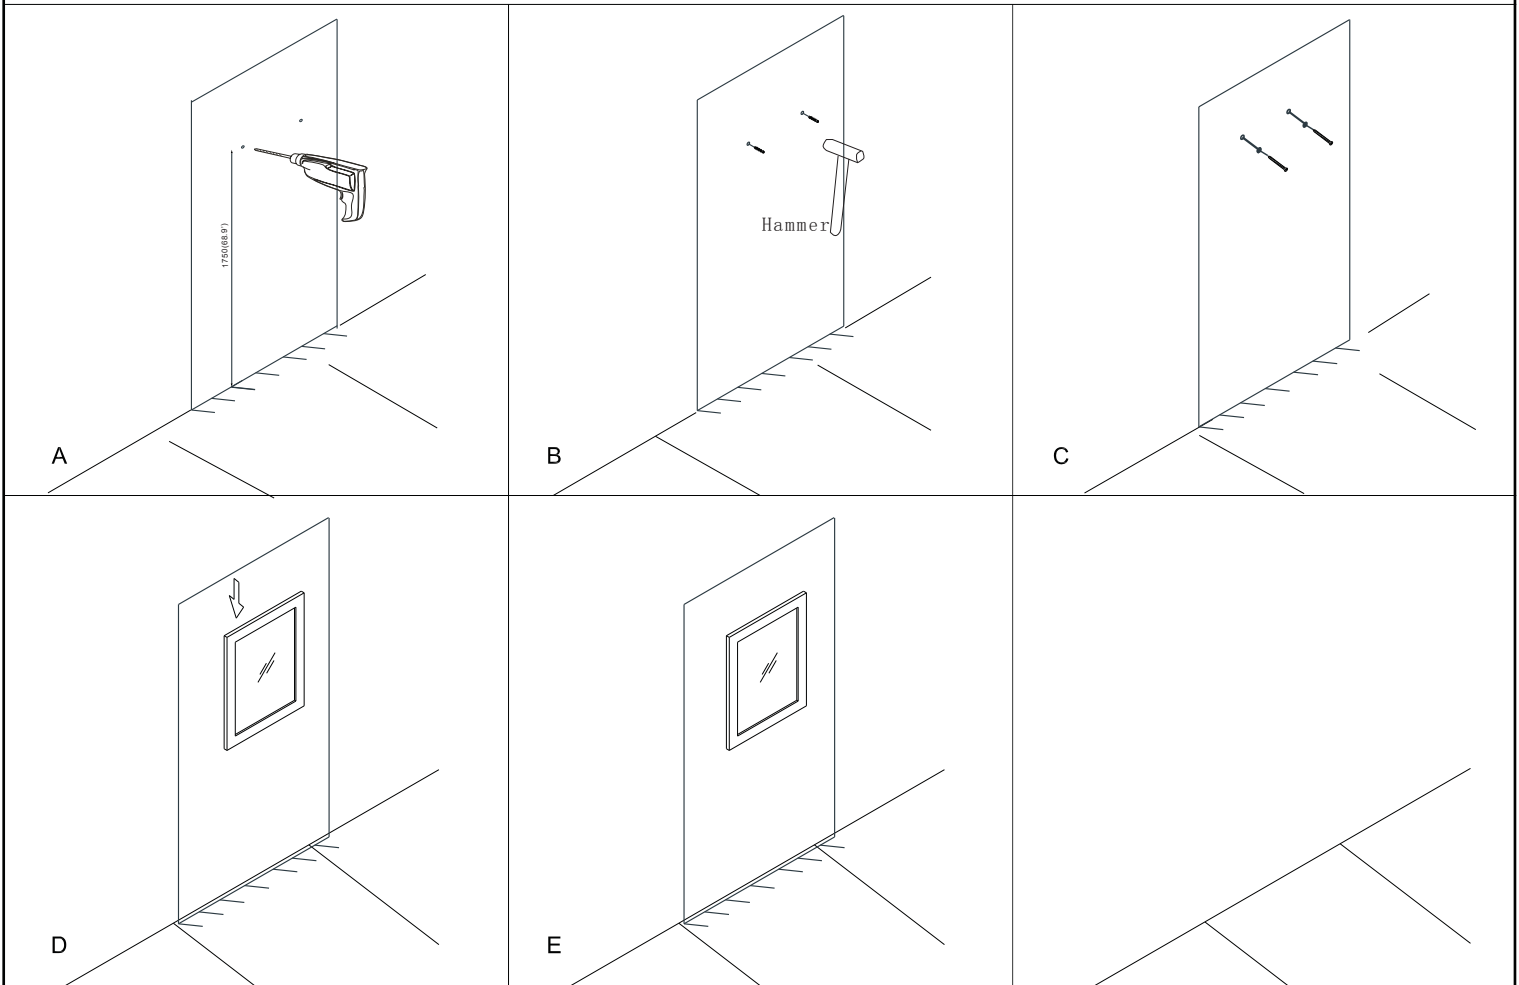

\*Dimensions shown for location of supplies and "P" trap are suggested.

1. Use the track level bar, tape measure and pencil to mark the installation holes in the place of installation.
2. Use the percussion drill which installed drill to bore a hole in which you marked before.
3. Use the hammer put the "1" (screw cover) into the drilled holes inside.
4. Let the "2" corresponding hole to the "1" (screw cover).
5. Let the Well assembled Mirror put ong the wall .



 Tape Measure  Drill  Phillips Screwdriver  Level  Pencil  Hammer	<b>Accessory list</b>  -2-	Code	①	②
		Component		
		Name	Expended partides	Hexagon screw
		QTY	2	2