







Features

Furniture grade water resistance plywood, protected with several Coats of polyurethane.

POSITANO

- Drawers front with fluted design.
- 45 degree integrated door pull with UNIHOPPER full extension soft-close hardware.

Package Dimension

20" 21-1/4" X 19-5/8" X 19-5/8"

24" 25-1/4" X 19-5/8" X 19-5/8"

30" 31-1/2" X 19-5/8" X 19-5/8"

36" 37" X 19-5/8" X 19-5/8"

48" 48-7/8" X 19-5/8" X 19-5/8"

60" 62-1/4" X 24" X 19-5/8"

Colors / Finishes

Matte White - 01

Light Grey - 15

Night Blue - 26

Aventurine Green - 27

Gross Weight

20" 35.94LBS

24" 39.02LBS

30" 43.87LBS

36" 49.16LBS

48"S 83.78LBS


48"D 67.68LBS


60" 86.6LBS


Sink Top Options

Vanities	Ceramic basin	Artificial stone basin
20" V8028 20	C04 2018	A10 2018 25
24" V8028 24	C04 2418	A10 2418 25
30" V8028 30	C04 3018	A10 3018 25
36" V8028 36	C04 3618	A10 3618 25
48" V8028 48 Single	C04 4818S	A10 481825S
48" V8028 48 Double	C04 4818D	A10 481825D
60" V8028 60	C04 6018	A10 6022 25

19-1/2" X 18" X 17-7/8"

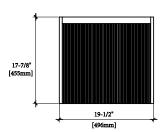


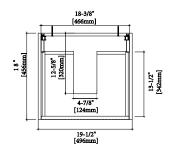


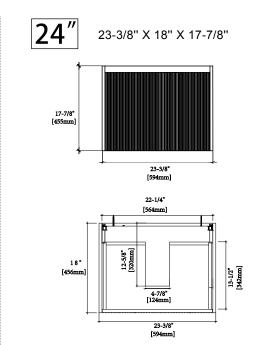



30"


29-1/4" X 18" X 17-7/8"

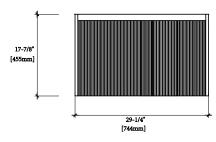

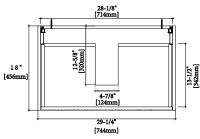




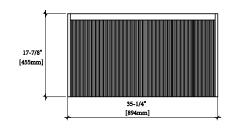


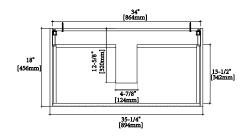


Side View

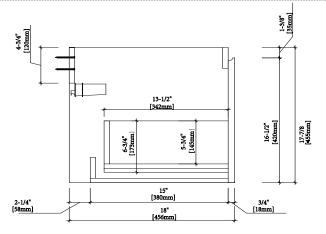



POSITANO

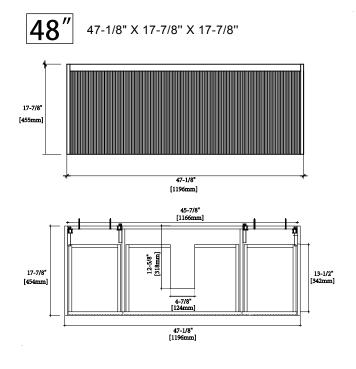

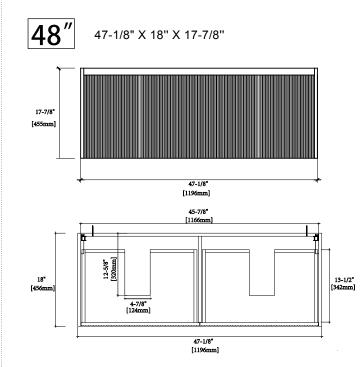

Side View

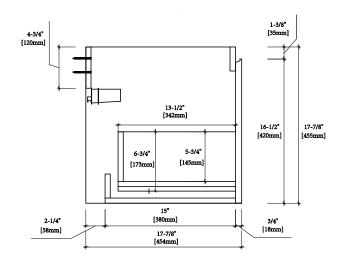


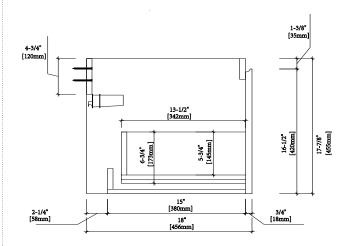


Specifcation & Installation Guide



60-1/8" X 21-7/8" X 17-7/8"

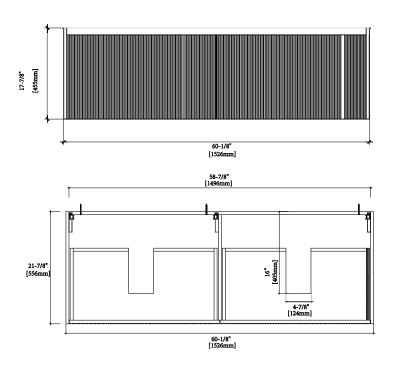

Side View

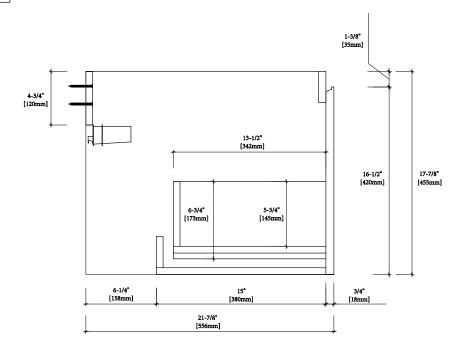


POSITANO

Specification & Installation Guide

Hardware			Tools (not includes)	
No.		Draw	Qty	
А	Anchors	O THIND	6 pcs	
В	Lag Bolt (5CM)	Managamann)	6 pcs	
С	Lag Bolt (8CM)	<u> </u>	5 pcs	
D	Leveling Bracket	11 P	2pcs	

Wall Preparation


The suggested heights without the sink are 30-5/8" for Blossom Resin Basin, or 32-5/8" for Blossom Ceramic Basin. Depending on the sinks selected, the total height will vary from 33-1/2" (850mm) to 35-1/4" (895mm). If an alternate height desired, adjust the rough-in and backing material heights using the dimensions provided.

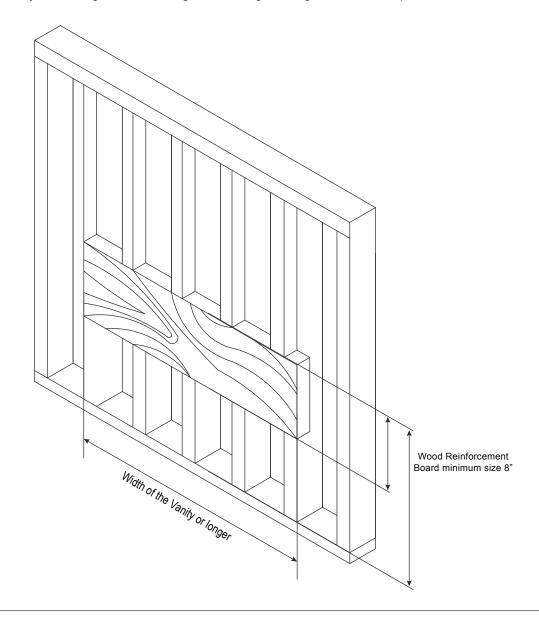



Cabinet positioning and installation


- The suggestion height of vanity installation is 30-5/8" (780mm) for Resin Basin or 32-5/8" (830mm) for Ceramic Basin - not including the basin.
- The height of Leveling Bracket Installation is 26" (660mm) for Resin Basin or 28-1/8" (715mm) for Ceramic Basin.

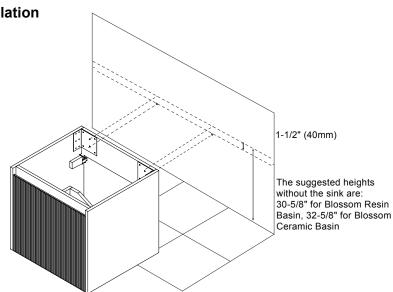

STEP 2.

Leveling bracket installation


Install leveling bracket after determining the height of vanity.

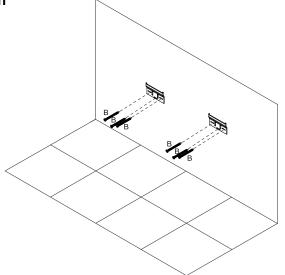

STEP 3.

Hang the cabinet on the leveling bracket and adjust it horizontally

Place vanity on leveling bracket, Leveling brackets are only to level the vanity. They are not designed for permanent support. Vanity needs to be secured into the wood reinforcement board through the corner metal L - bracket.

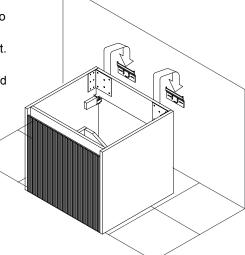

Specification & Installation Guide


POSITANO

STEP 4.

Fixed Cabinet


Install Lag Bolt after determined the height, left

& right position then fix the Vanity.

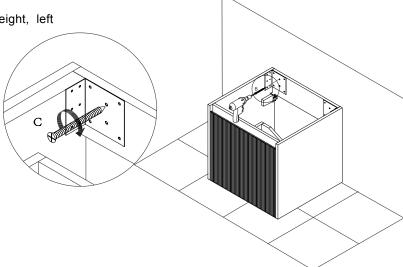


STEP 5.

Install sink top with Silicone

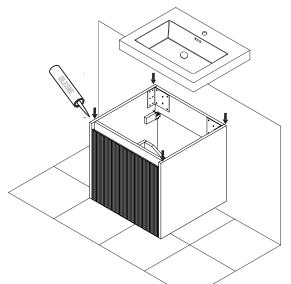

STEP 6.

Fill the side against the wall with Silicone and finish

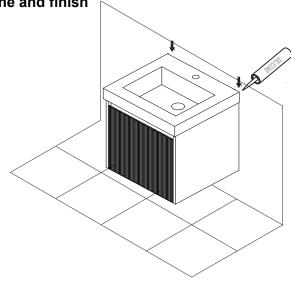


POSITANO


Unihopper DRAWER/HINGE ADJUSTMENT AND REMOVAL

Unihopper general drawer/hinge adjustment and removal


Installation

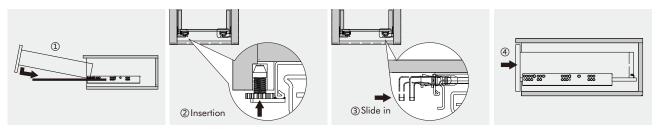

Adjustment

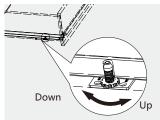


Removal




Unihopper Quick Assembly Drawer Slide


Installation

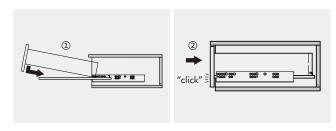

Adjustment

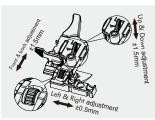

Removal





Blossom Kitchen & Bath Supply Corporation (718)-366-0088 | sales@BlossomUS.com | www.BlossomUS.com

For clarification, please contact us at (718)-366-0088 or sales@BlossomUS.com All dimensions are approximate and subject to standard tolerance. Specifications subject to change without prior notice.