




20" VANITY

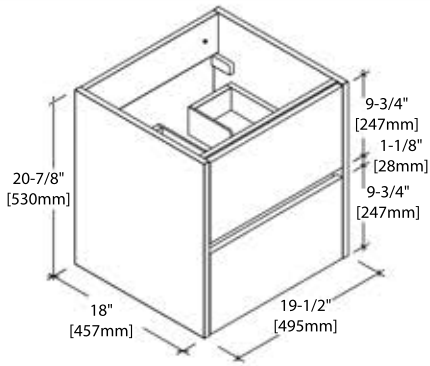

V8016 20

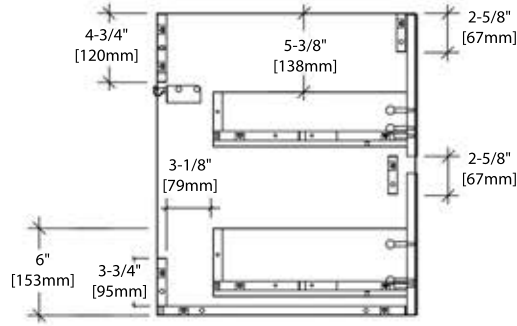


SIDE VIEW

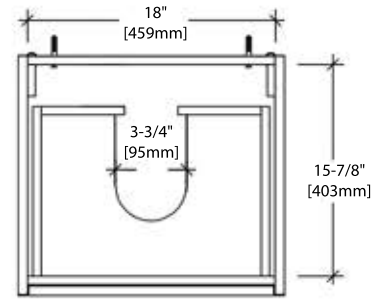


TOP VIEW


24" VANITY

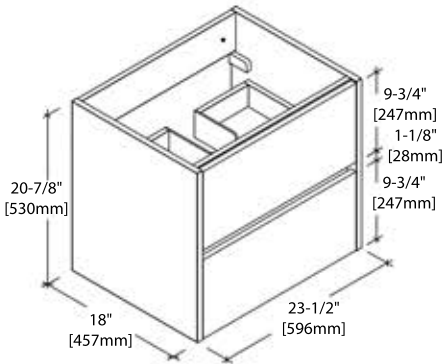

V8016 24

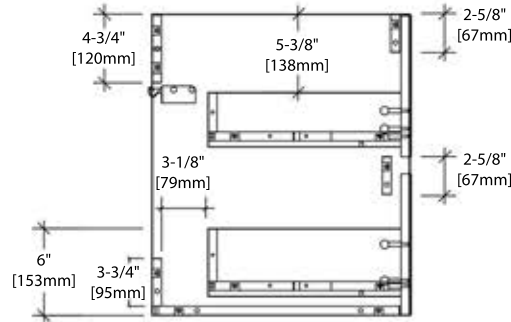


SIDE VIEW

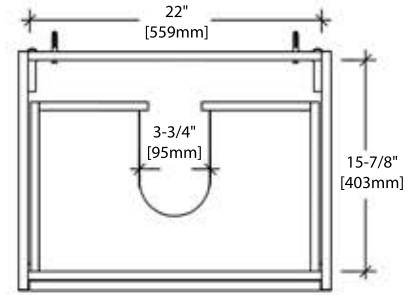


TOP VIEW


30" VANITY

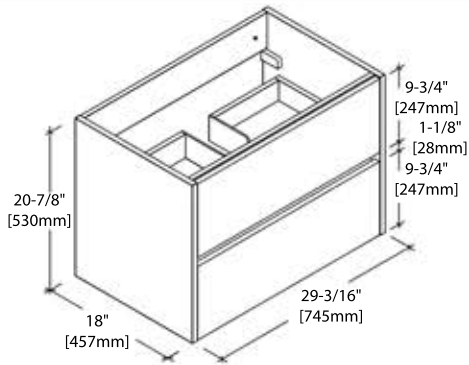

V8016 30

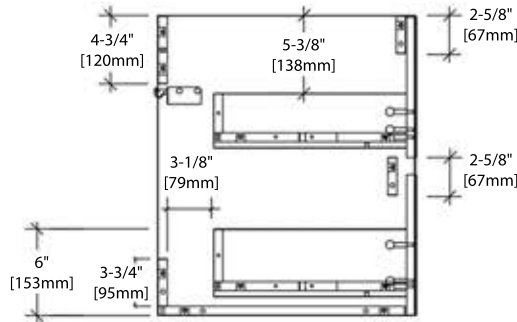


SIDE VIEW

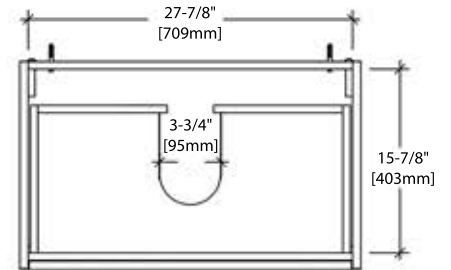


TOP VIEW


36" VANITY

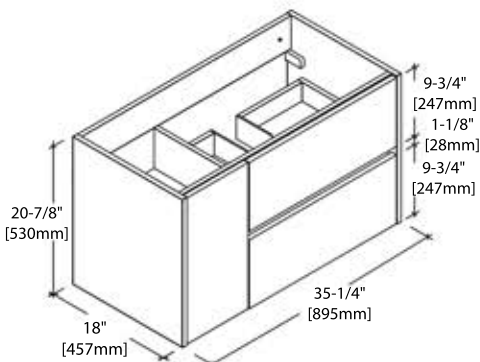

V8016 36

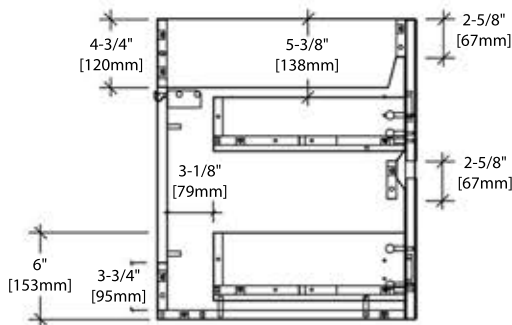


SIDE VIEW

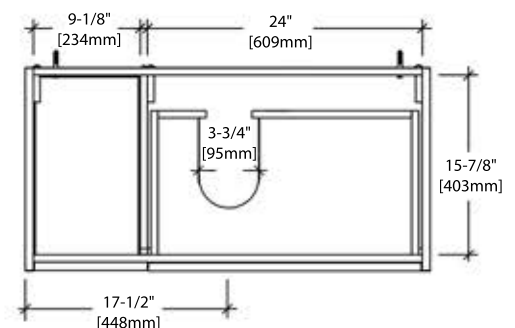


TOP VIEW

20" TOP-MOUNT BASIN

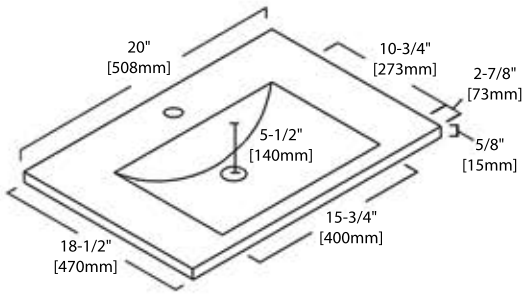


C04 2018 (SINGLE HOLE)

24" TOP-MOUNT BASIN

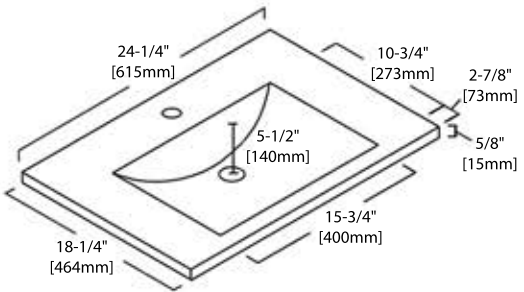


C04 2418 (SINGLE HOLE)

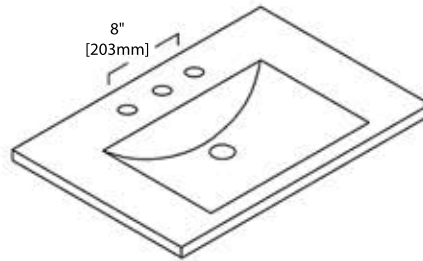


C04 2418 TH (8" WIDESPREAD)

30" TOP-MOUNT BASIN

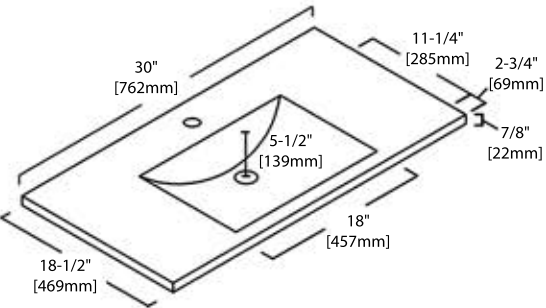


C04 3018 (SINGLE HOLE)

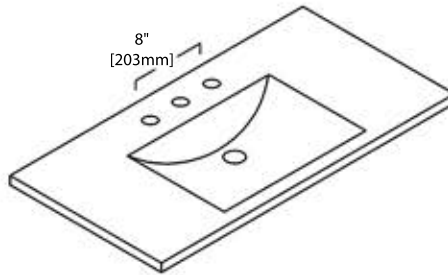


C04 3018 TH (8" WIDESPREAD)

36" TOP-MOUNT BASIN

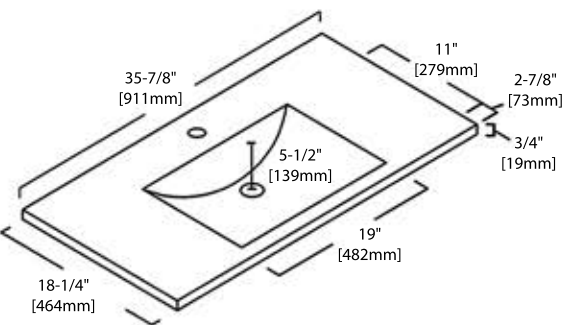


C04 3618 (SINGLE HOLE)

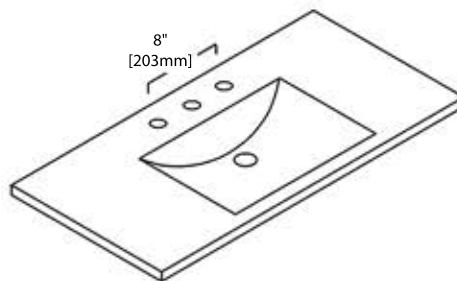


C04 3618 TH (8" WIDESPREAD)


48" SINGLE VANITY

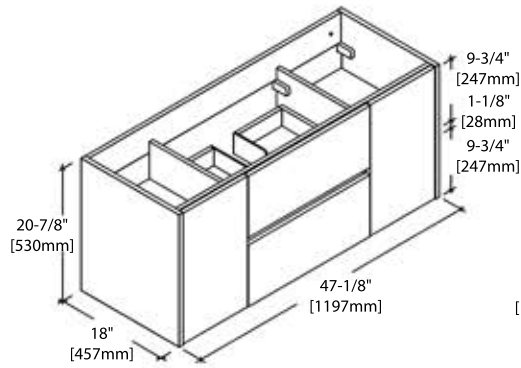

V8016 48 S

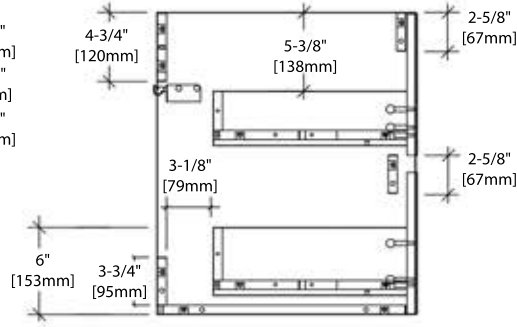


SIDE VIEW

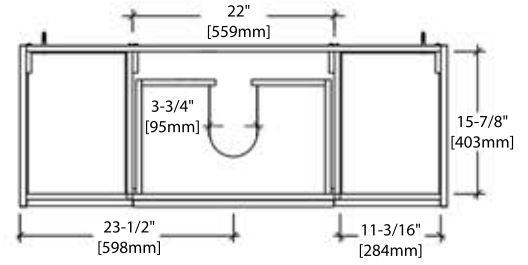


TOP VIEW


48" DOUBLE VANITY

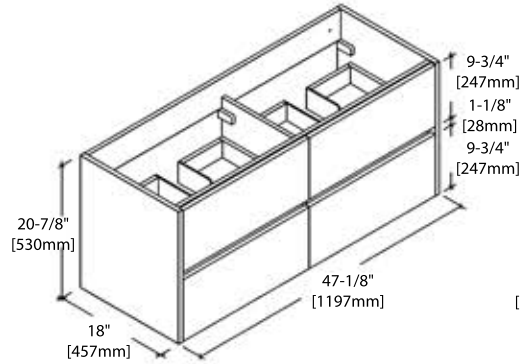

V8016 48 D

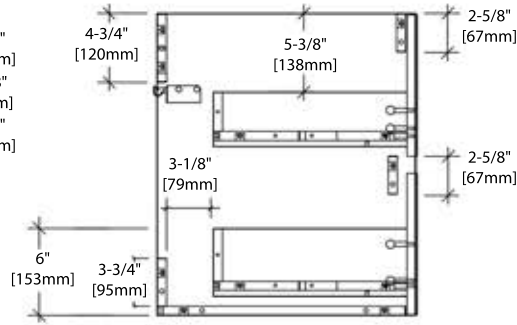


SIDE VIEW

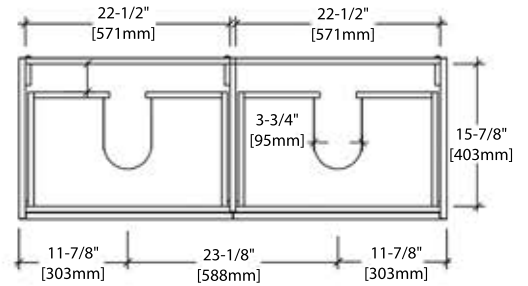


TOP VIEW

48" SINGLE TOP-MOUNT BASIN

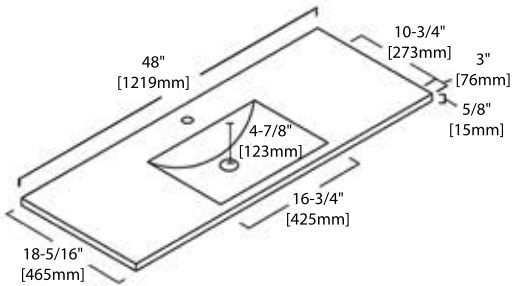


C04 4818 S (SINGLE HOLE)

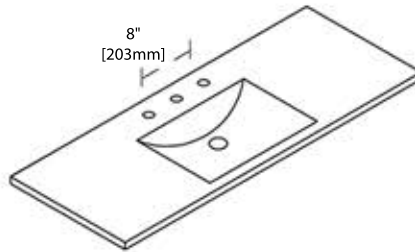


C04 4818 STH (8" WIDESPREAD)

48" DOUBLE TOP-MOUNT BASIN

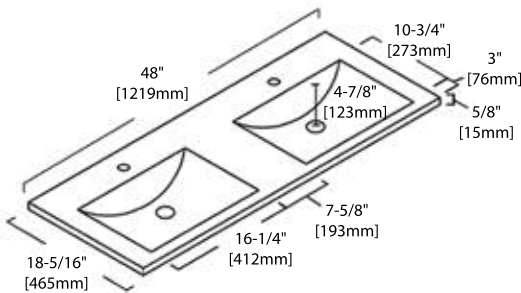


C04 4818 D (SINGLE HOLE)

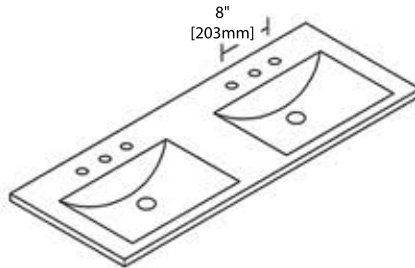


C04 4818 DTH (8" WIDESPREAD)

20" MIRROR / MEDICINE CABINET

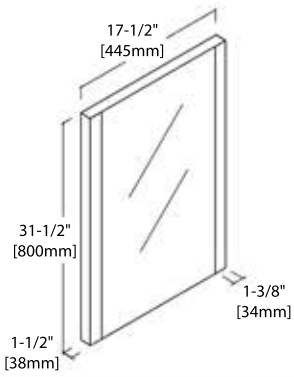


M6014 20

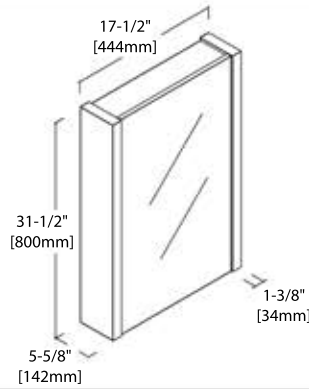


MC7014 20

24" MIRROR / MEDICINE CABINET

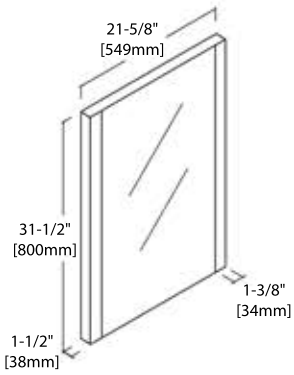


M6014 24

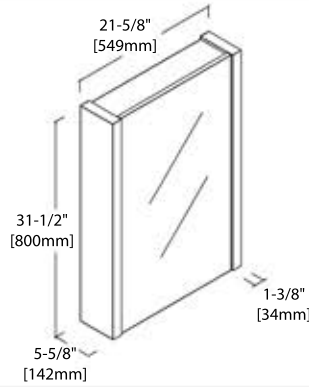


MC7014 24

30" MIRROR / MEDICINE CABINET

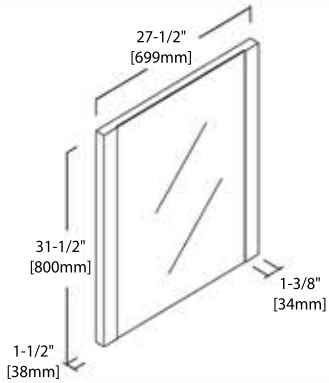


M6014 30

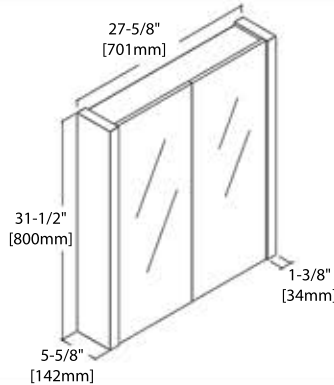


MC7014 30

36" MIRROR

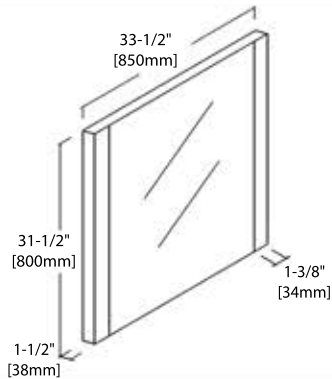

M6014 36

48" MIRROR

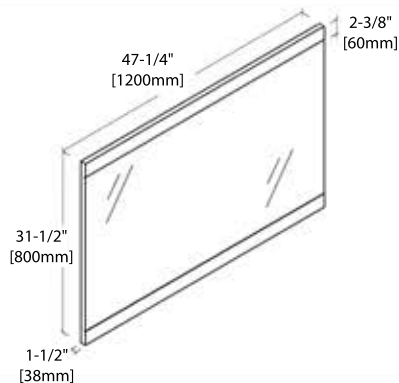

M6014 48

REQUIRED TOOLS



Tape Measure



Pencil



Electric Drill



Drill Bit (6mm)



Silicone



Screwdriver



Spirit Lever

PARTS INCLUDED



A



B



C



D

