CRAFTMADE[™]

BOLDEN #50501-BNK /#50501-BNK-WG /#50501-FB/#50501-FB-WG

PLEASE READ AND SAVE FOR FUTURE REFERENCE. CAUTION


- 1. Turn off the main power at the circuit breaker before installing the fixture in order to prevent possible shock.
- 2. All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections, obtain the services of a qualified electrician.

GENERAL

Remove all parts and hardware from the box and make sure that none are missing by referencing the illustrations provided.

Bulb Required (not included): 1 -Medium Base 100 Watt Max. (for 1-Light Vanity)

1-LIGHT VANITY

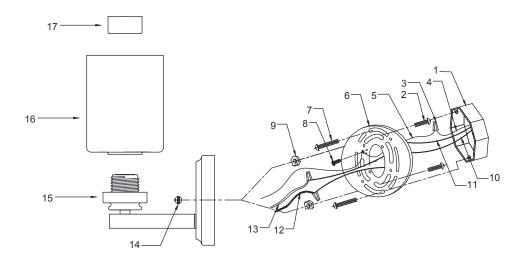

1. OUTLET BOX (NOT INCLUDED)

- 2. FIXTURE SCREWS
- **3.WIRE CONNECTOR**
- 4. SUPPLY GROUND WIRE(not included)
- 5. FIXTURE GROUND WIRE
- 6. BACK PLATE
- 7. MOUNTING SCREW
- 8. GROUND SCREW
- 9. HEX NUT
- **10.WHITE SUPPLY WIRE**

- 11. BLACK SUPPLY WIRE
- 12. RIBBED(or WHITE) FIXTURE LEAD WIRE
- 13. SMOOTH(or BLACK)FIXTURE LEAD WIRE
- 14. DECORATIVE NUT
- 15. FIXTURE
- 16.SHADE
- 17. SOCKET RING(pre-attached)