

















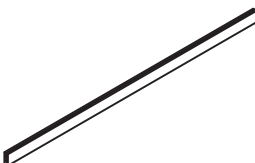
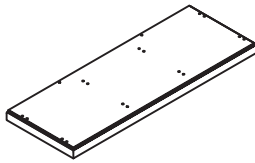


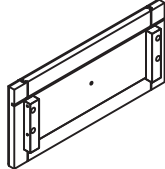
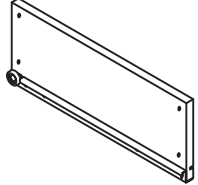
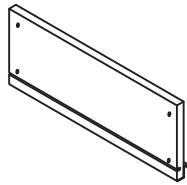
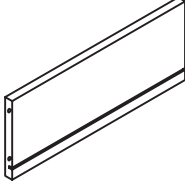


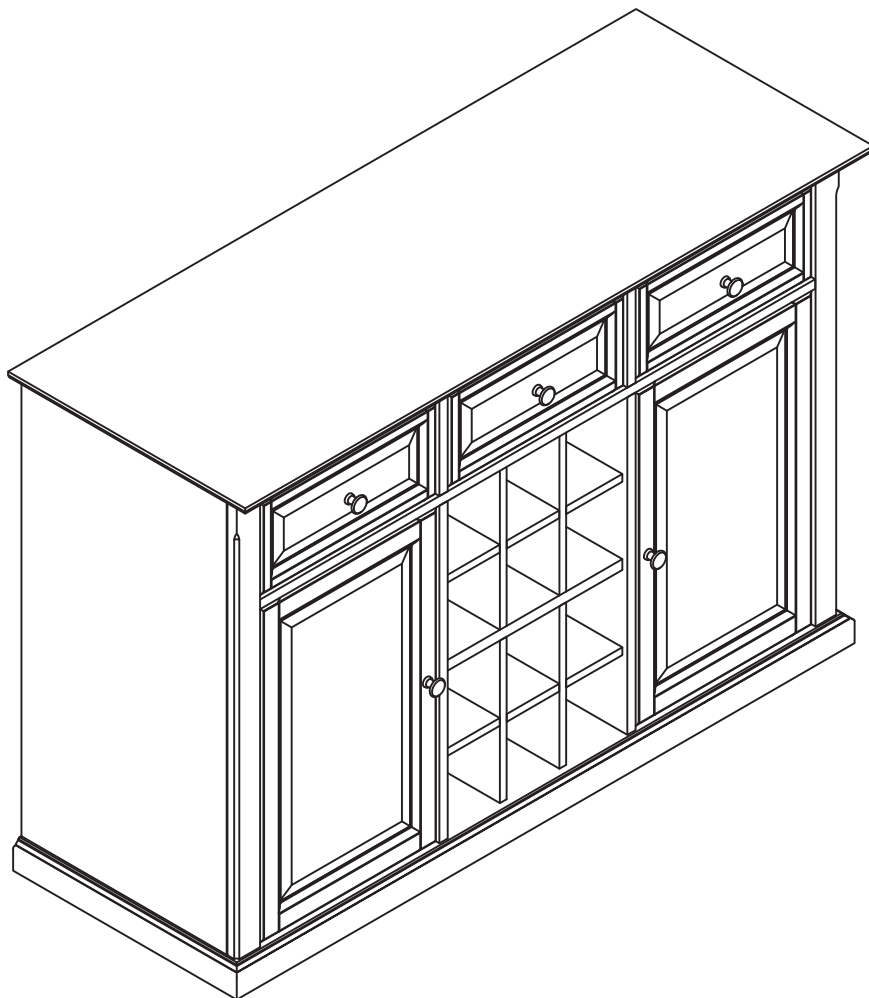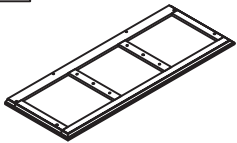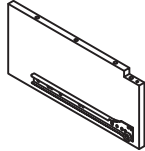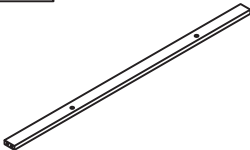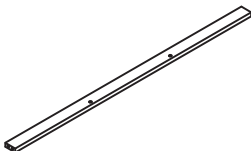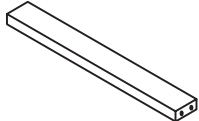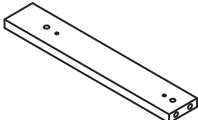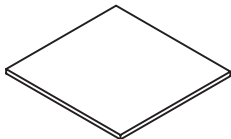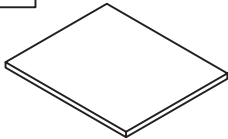





Wine Buffet Server Cabinet CF4201





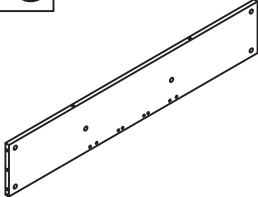







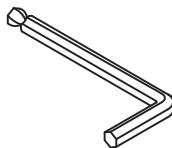




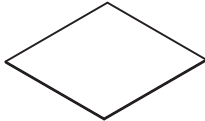
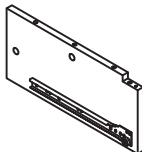
PART LIST

A		B		C		D		E	
TOP PANEL 1 PC		RIGHT SIDE PANEL 1 PC		LEFT SIDE PANEL 1 PC		DRAWER LEFT VERTICAL PANEL 1 PC		DRAWER RAIL 1 PC	
F		G		H		I		J	
FRONT TOP RAIL 1 PC		MIDDLE LOWER RAIL OF DRAWER 2 PCS		SIDE LOWER RAIL OF DRAWER 2 PCS		SIDE ADJUSTABLE SHELF 2 PCS		MIDDLE ADJUSTABLE SHELF 1 PC	
K		L		M		N		O	
LEFT VERTICAL PANEL 1 PC		RIGHT VERTICAL PANEL 1 PC		LEFT DOOR 1 PC		RIGHT DOOR 1 PC		UPPER BACK PANEL 1 PC	
P		Q		R		S		T	
BACK PARTITION RAIL 2 PCS		BACK PANEL 3 PCS		LOWER BACK RAIL 1 PC		BASE 1 PC		WINE HOLDER SHELF 2 PCS	
U		V		W		X		Y	
WINE HOLDER WOOD STAND 4 PCS		DRAWER FRONT OF DRAWER 3 PCS		LEFT SIDE PANEL OF DRAWER 3 PCS		RIGHT SIDE PANEL OF DRAWER 3 PCS		BACK PANEL OF DRAWER 3 PCS	


PART LIST

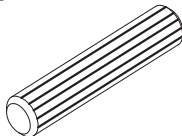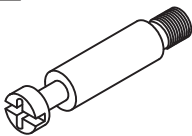Z	ZA	ZB	ZC
			 For use only with Bun Foot
DRAWER BOTTOM PANEL 3 PCS	DRAWER RIGHT VERTICAL PANEL 1 PC	SUPPORT LEG 2 PCS	SUPPORT LEG 2 PCS



HARDWARE LIST

1	2	3	4	5
				
WOOD DOWEL 50 PCS	LONG WOOD DOWEL 8*50mm 4 PCS	CAM BOLT 20 PCS	CAM LOCK 20 PCS(Extra 2)	SCREW 24 PCS(Extra 1)
6	7	8	9	10
				
KNOB 5 PCS	ROUND HEAD BOLT 5 PCS	HEX SOCKET HEAD BOLT 8 PCS	BARREL NUT 8 PCS	SHELF HOLDER 12 PCS
11	12	13	14	15
			 1-1/4"*ø4*D8	
ALLEN KEY 1 PC	DOOR CATCH 2 PCS	ROUND HEAD SCREW 4 PCS(Extra 1)	LONG SCREW 8 PCS(Extra 1)	SAFETY STRAP KIT 1 PC
 Replacement	<p>ADDITIONAL TOOLS (Not Provided) Note:It is not recommended to use power tools during assembly. However a screw gun can assist with mounting.</p>  <p>Phillips Head Screw Driver</p>			
Door Pivot (Extra 2)				


Step 1. Insert Cam Bolts(Part#3)into pre-drilled holes of Parts A,B,C,H(x2) & Part O with a Phillips Head screw driver as shown.

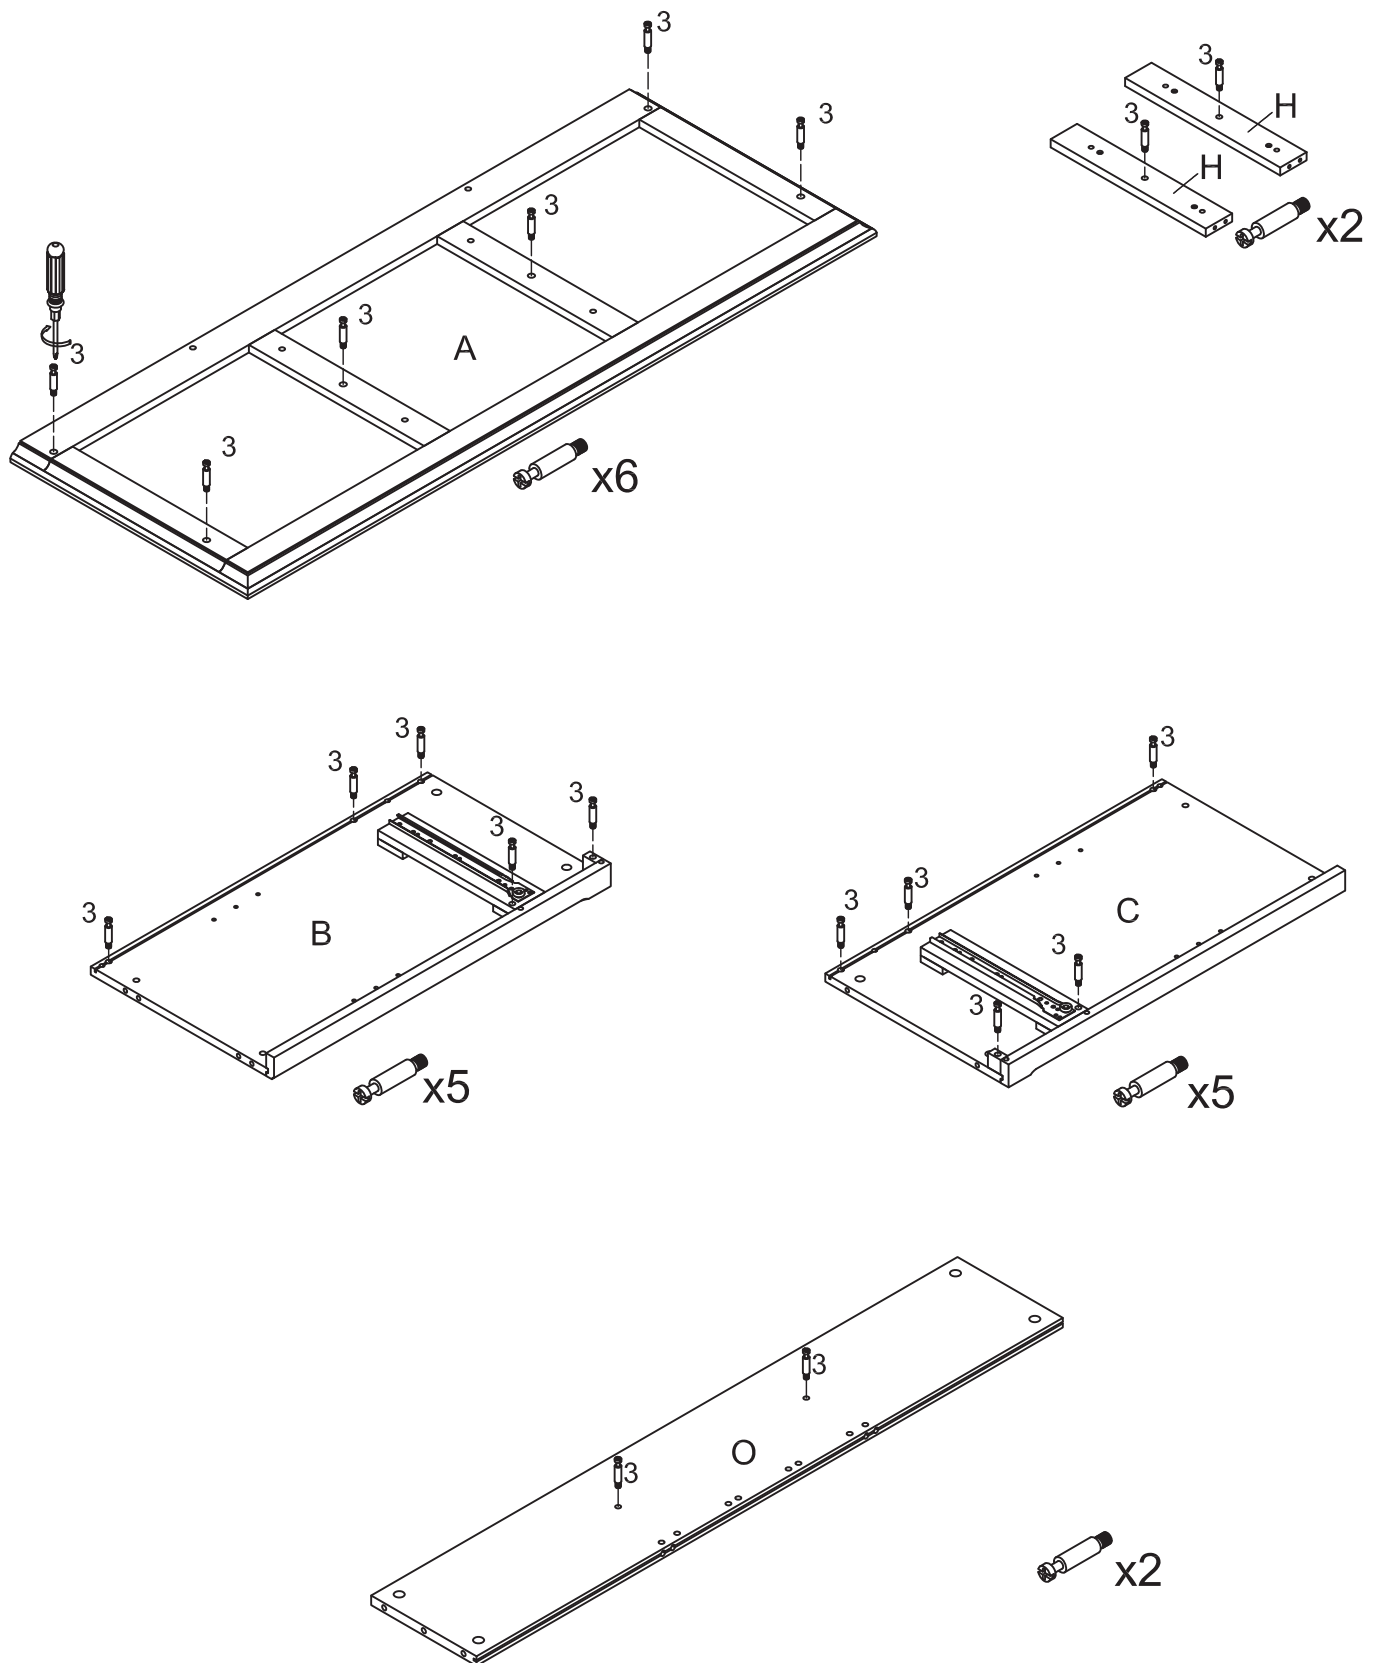

Step 2. Insert Long Wood Dowels (Part#2) into Parts D & ZA as shown. Attach Parts H to to Part D & **Part ZA** with Screws (Part#14) as shown.
 Note: Long Wood Dowel (Part#2) will pass completely through Part H.

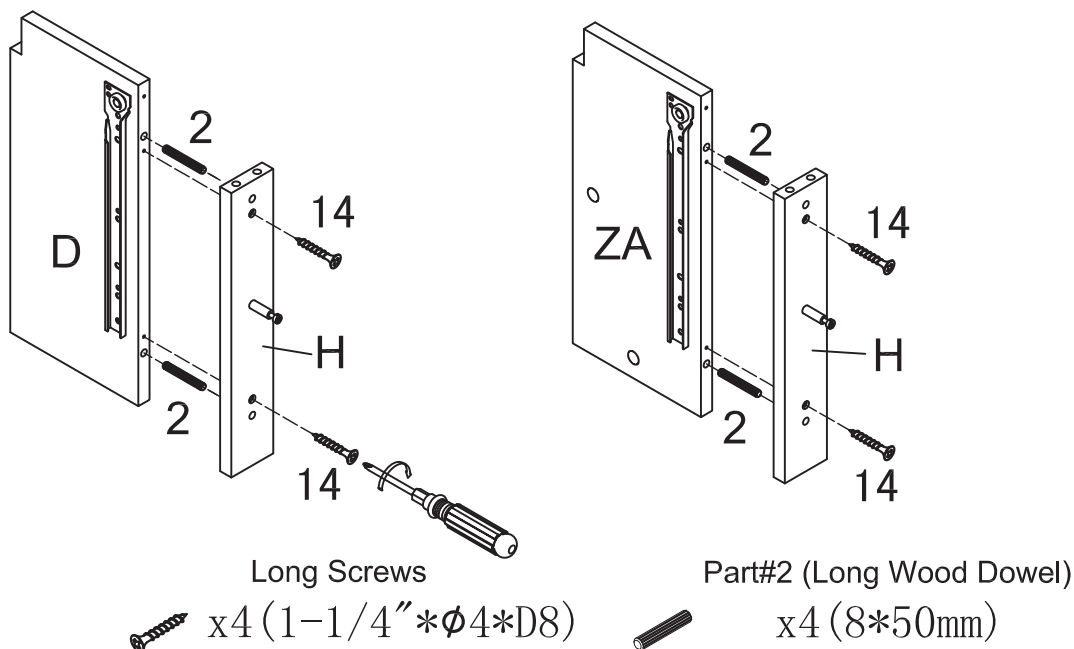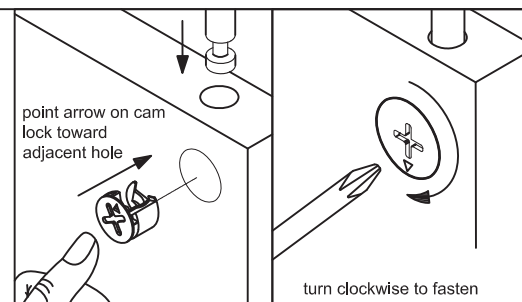


Step 3. Lay Part O flat on floor as shown. Insert Wood Dowels (Part#1) into Part O. Attach Part D & ZA to Part O. Attach Part D & ZA to Part O with Cam Locks (Part #4) as shown. Insert Parts G.

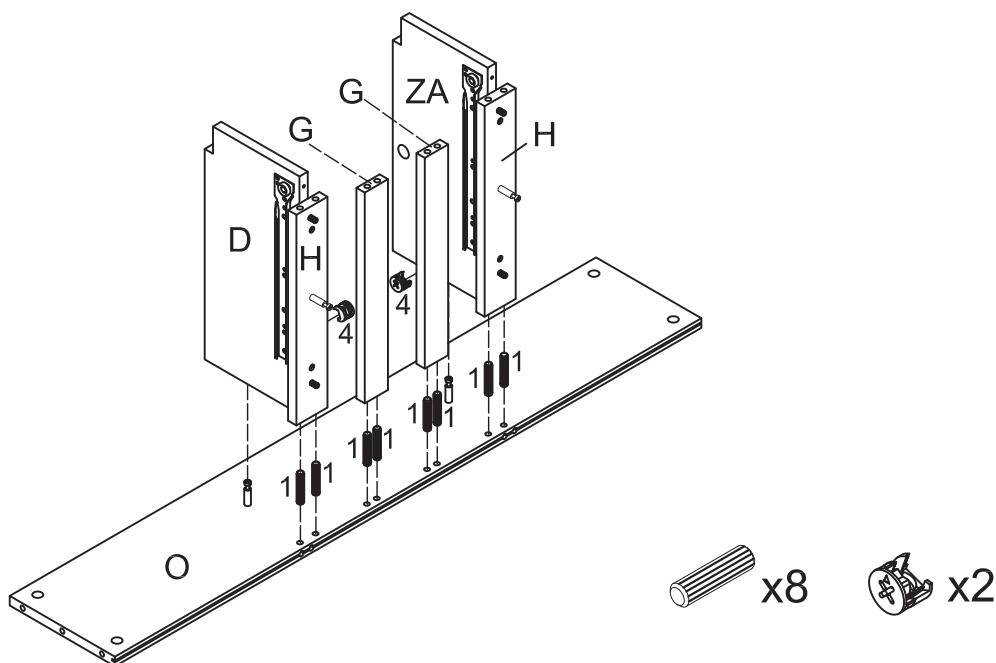



Step 4. Attach Door Catches (Part #12) to Rail E with Round Head Screws (Part #13) as shown. Insert Wood Dowels (Part# 1) into Parts H,G,D & ZA as shown. Set Rails E into place on Rails G & H with Wood Dowels (Part #1) as shown. Secure Rail E to Parts ZA & D using Screws(Part #14) as shown. Attach Rail F to Parts ZA & D using Wood Dowels (Part #1) & Screw (Part #14) as shown.

NOTE: BE SURE THAT SCREWS ARE ALIGNED PROPERLY WITH PRE-DRILLED HOLES IN PARTS D & ZA BEFORE THGHTENNING.

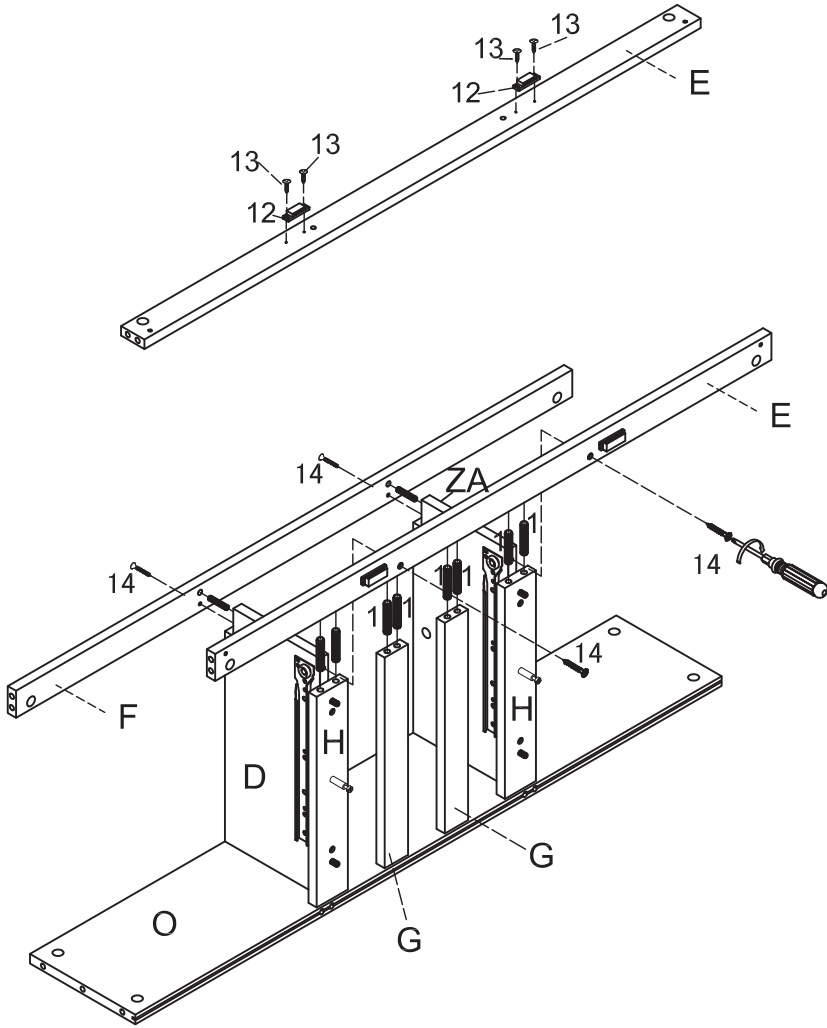


-  x4  x2  x10  x4 Long Screws (1-1/4")





Step 5. Attach Panels L&K to Rails H using Cam Locks (Part #4) as shown.

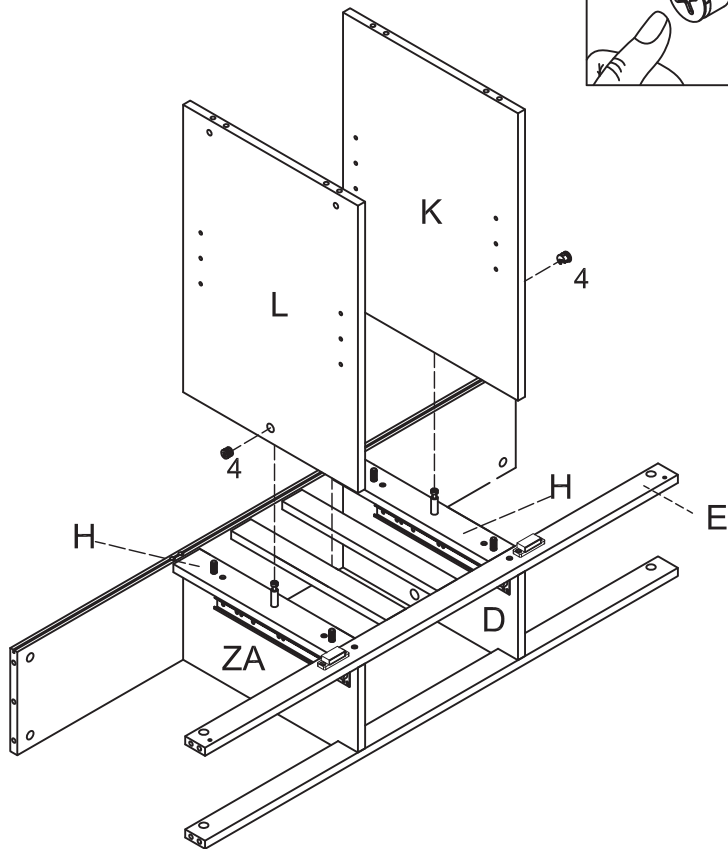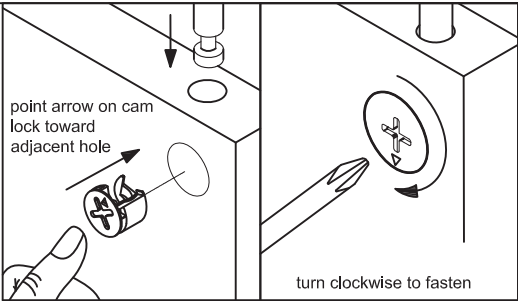



Step 6. Set Rails P into place on Part O using Wood Dowels (Part #1) as shown. Insert Panels Q into the grooves of Parts O & P. Set Rail R onto Rails P & Panels Q with Wood Dowels (Part #1) as shown.

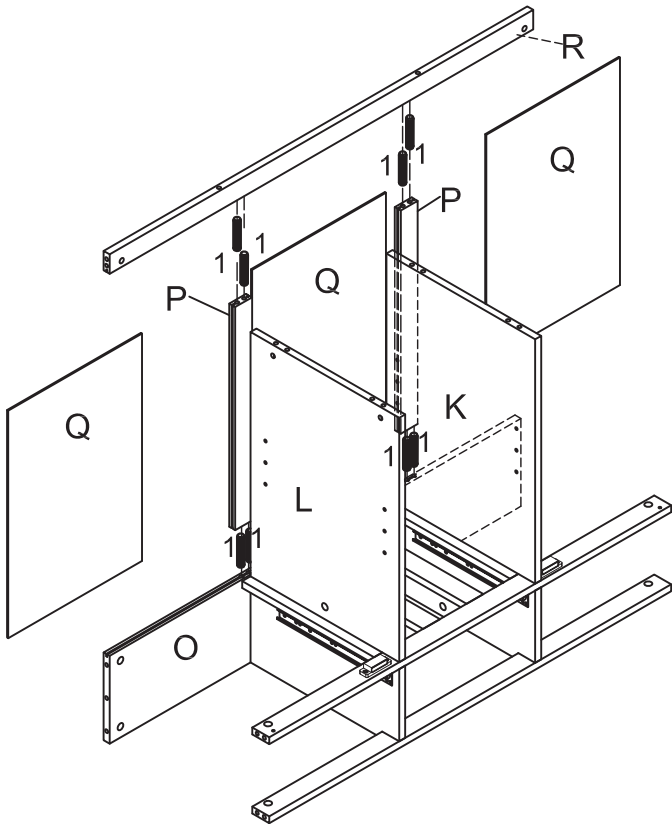


Step 7. Attach Side Panel C to Parts E, F, O & R with Wood Dowels (Part #1) & Cam Locks as shown. Repeat this step to attach Side Panel B.

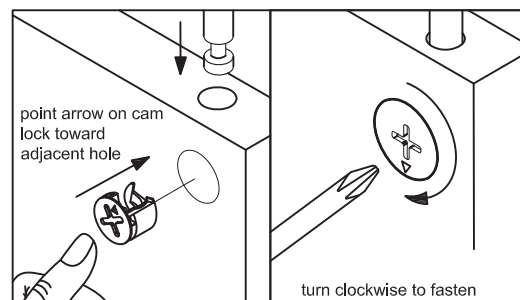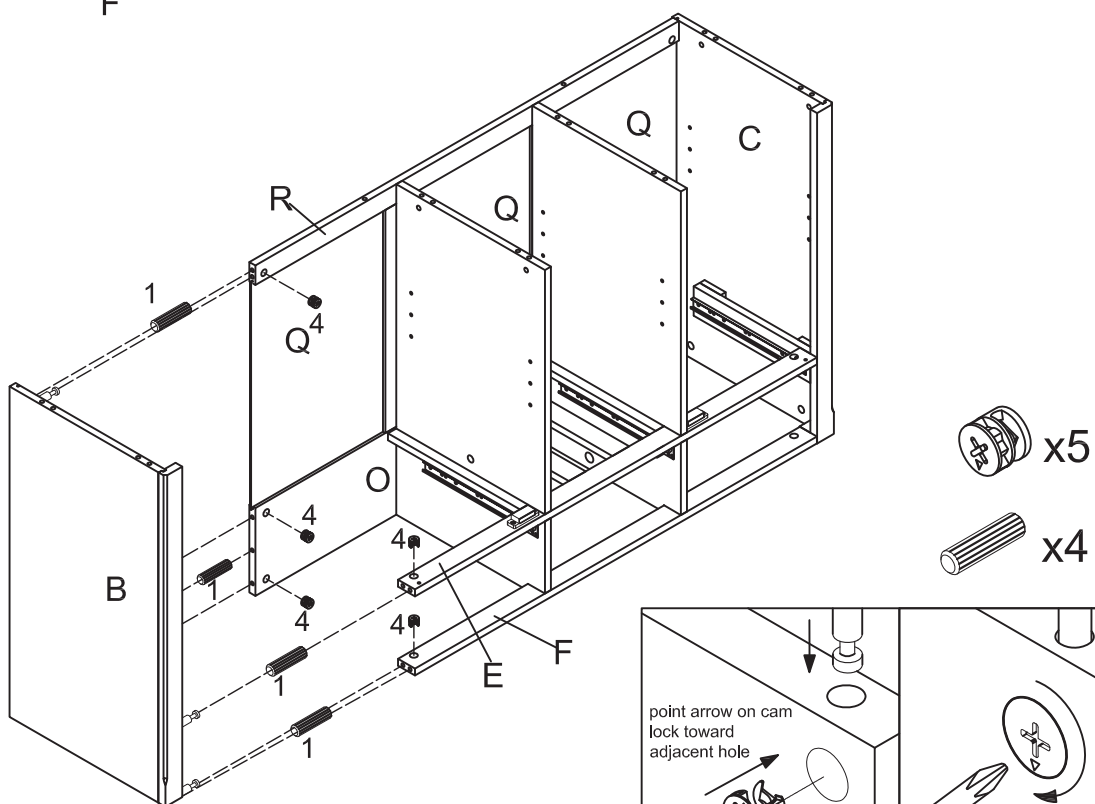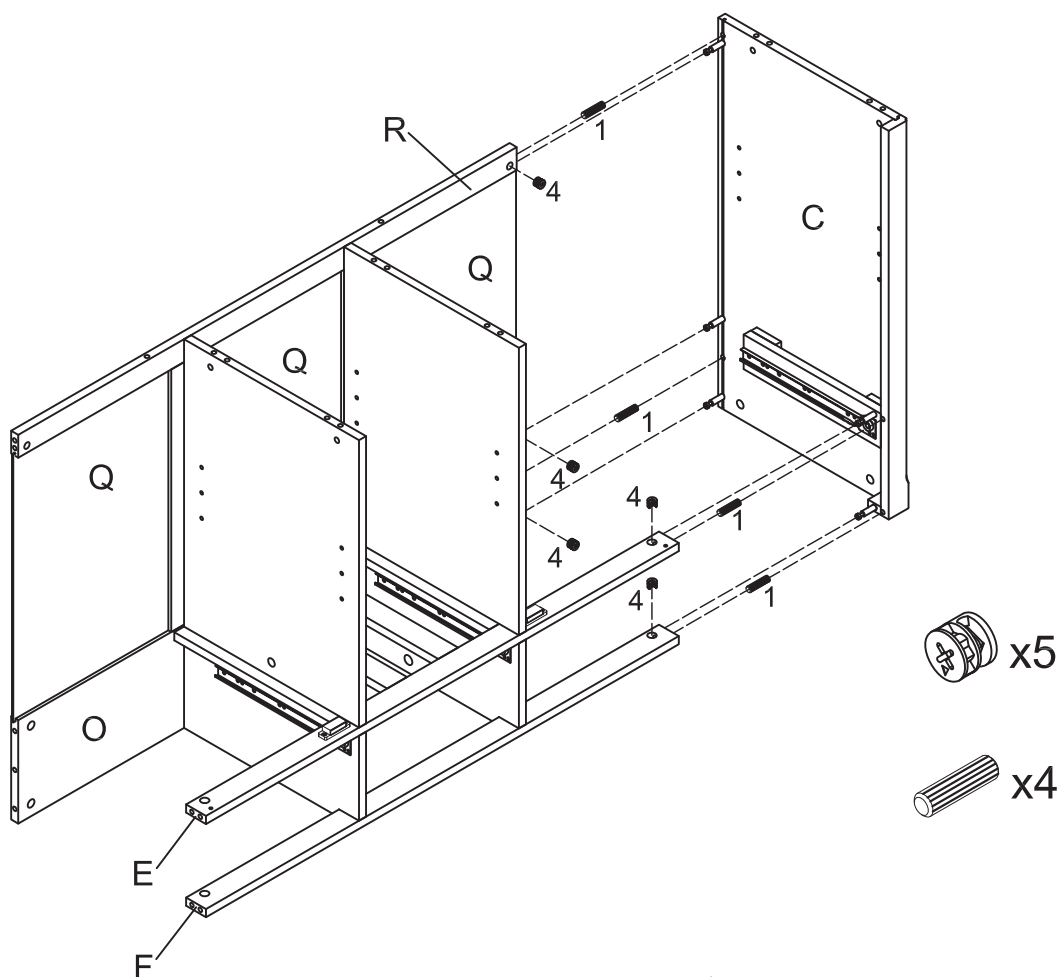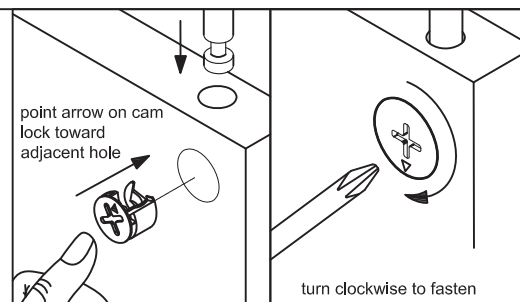

Step 9. Attach Top A to cabinet using Wood Dowels & Cam Locks as shown.

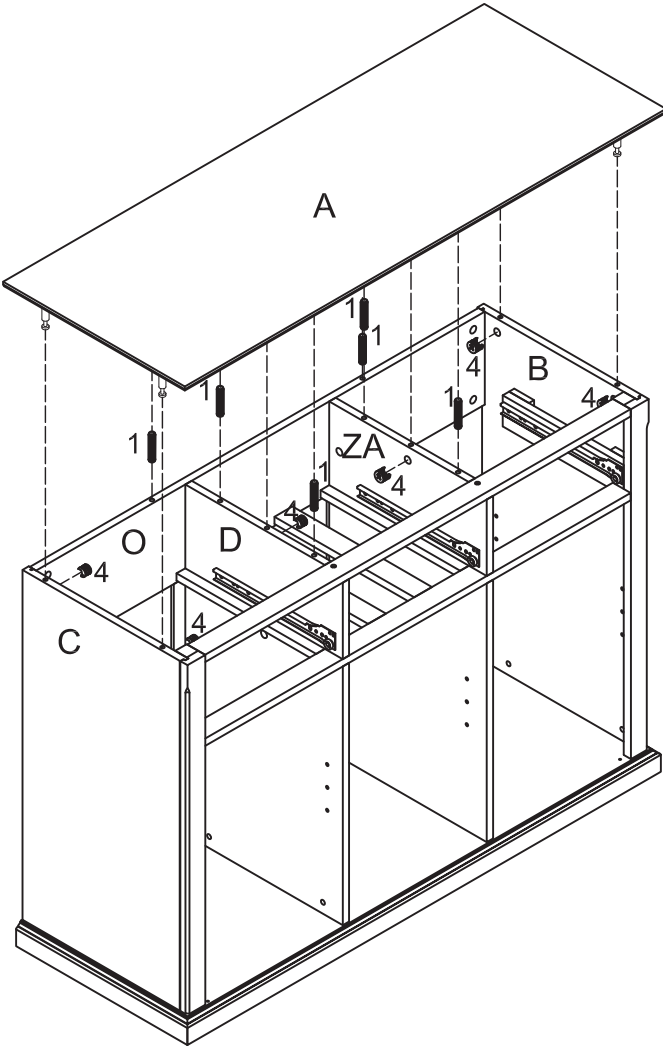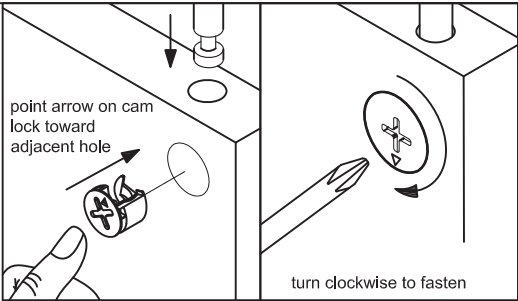


Step 10. Attach Drawer Front V to Drawer Sides W & X with Screws (Part #5) using Phillips Head screwdriver as shown. **NOTE: BE SURE THAT WHEELS ON DRAWER GLIDES ARE FACING OUTWARD, AND ARE AT THE OPPOSITE SIDE OF THE DRAWER FRONT.** Slide Bottom Panel Z into grooves of Parts W & X as shown. Attach Back Panel Y to Side Panels W & X with Screws (Part #5) using Phillips Head screwdriver as shown. Repeat this step for the other two drawers. Attach Hardware Knobs (Part #6) to Drawer Fronts V with Round Head Bolt (Part #7) as shown. Insert drawers into their appropriate positions.

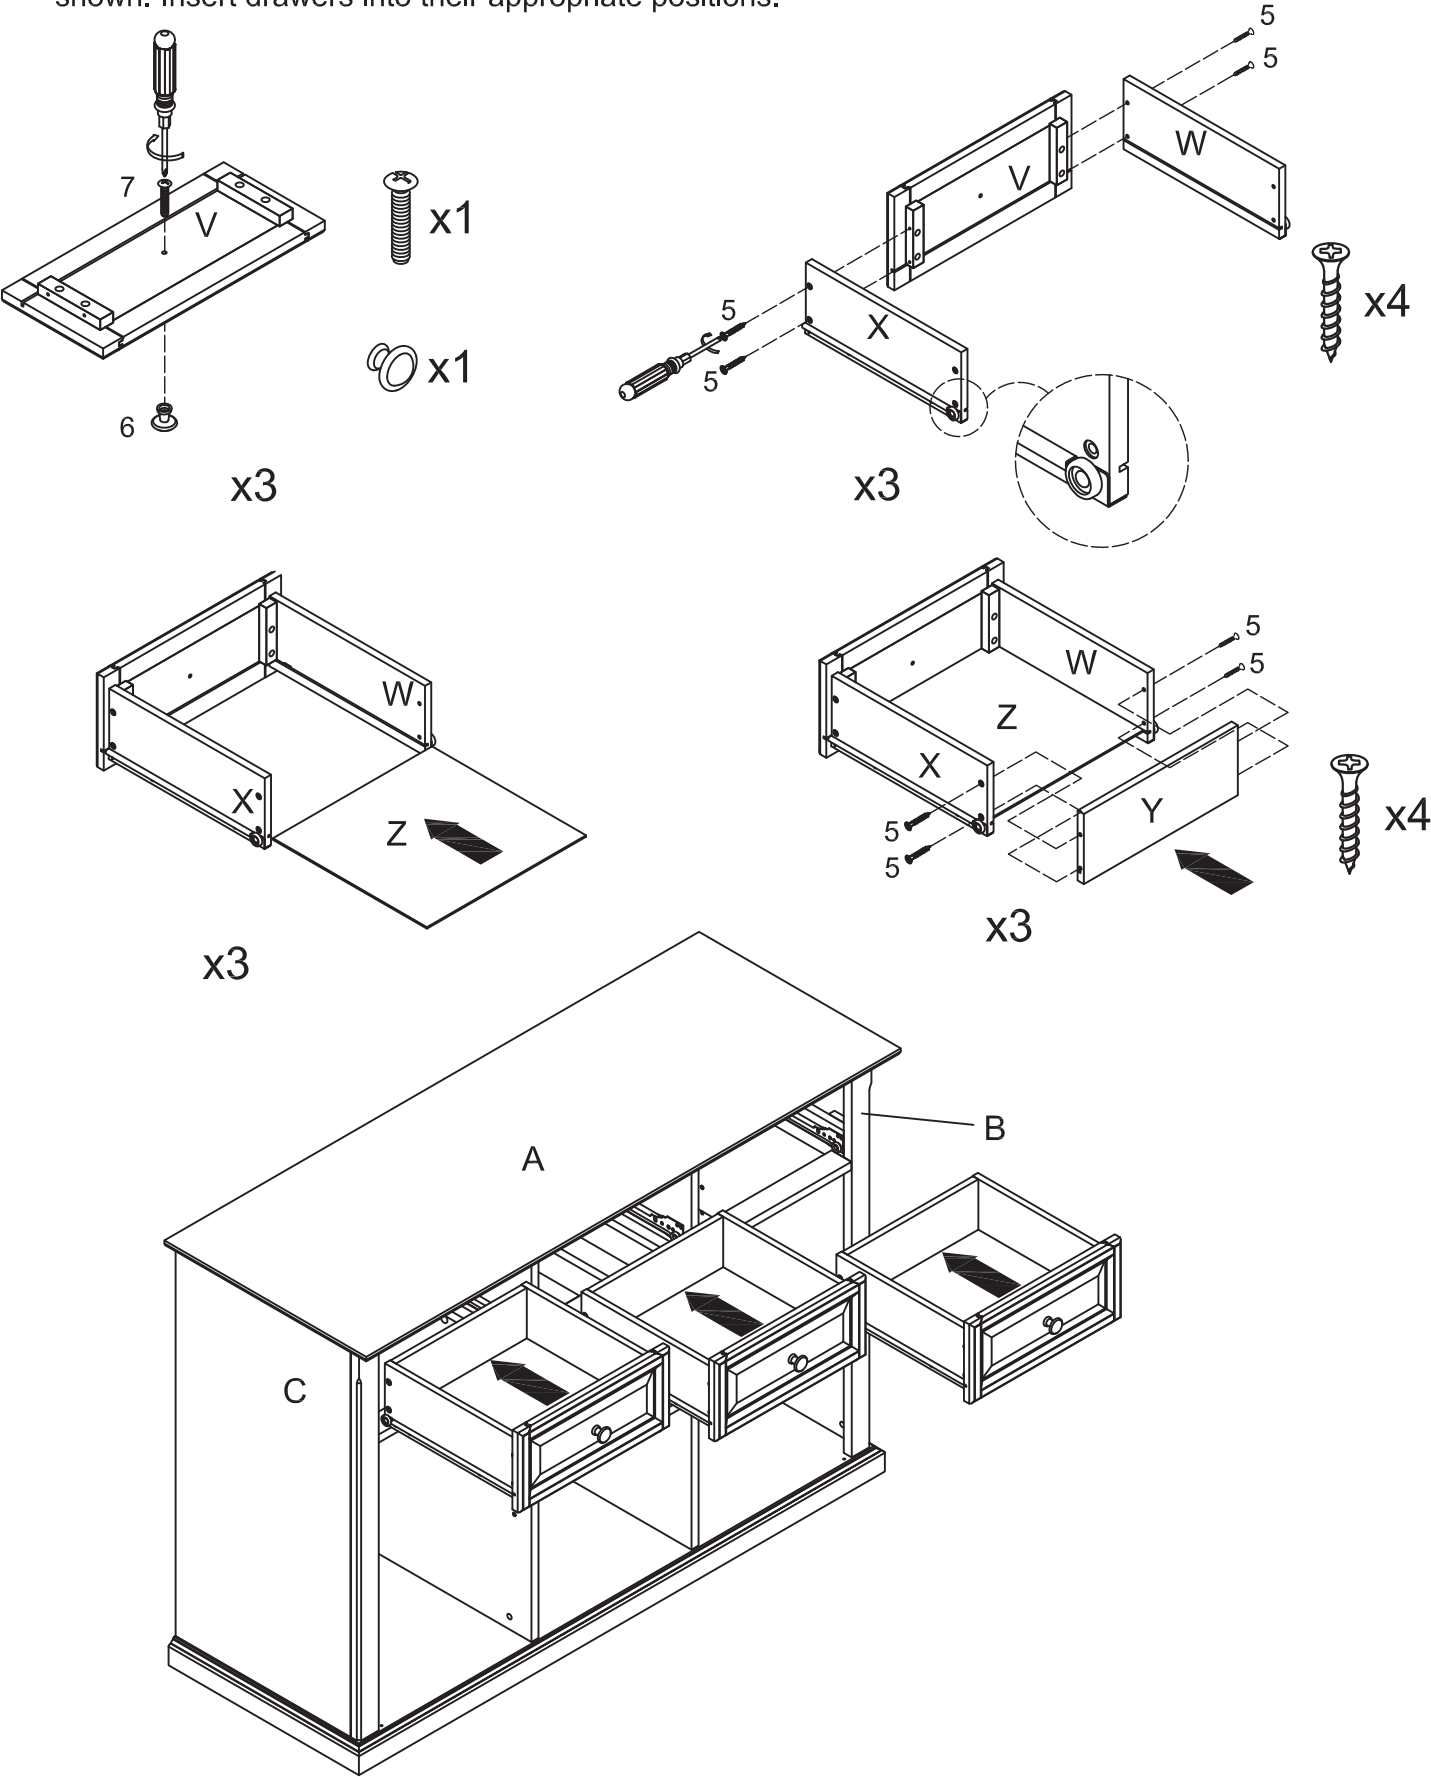


Step 11. Insert Shelf Holders (Part #10) into desired positions. Insert Shelves I & Shelf J into desired position.

NOTE: IF YOU INTEND TO USE THE WINE STORAGE GRIDS, SHELF J MUST BE PLACED IN THE CENTER HOLE POSITIONS TO FIT CORRECTLY.


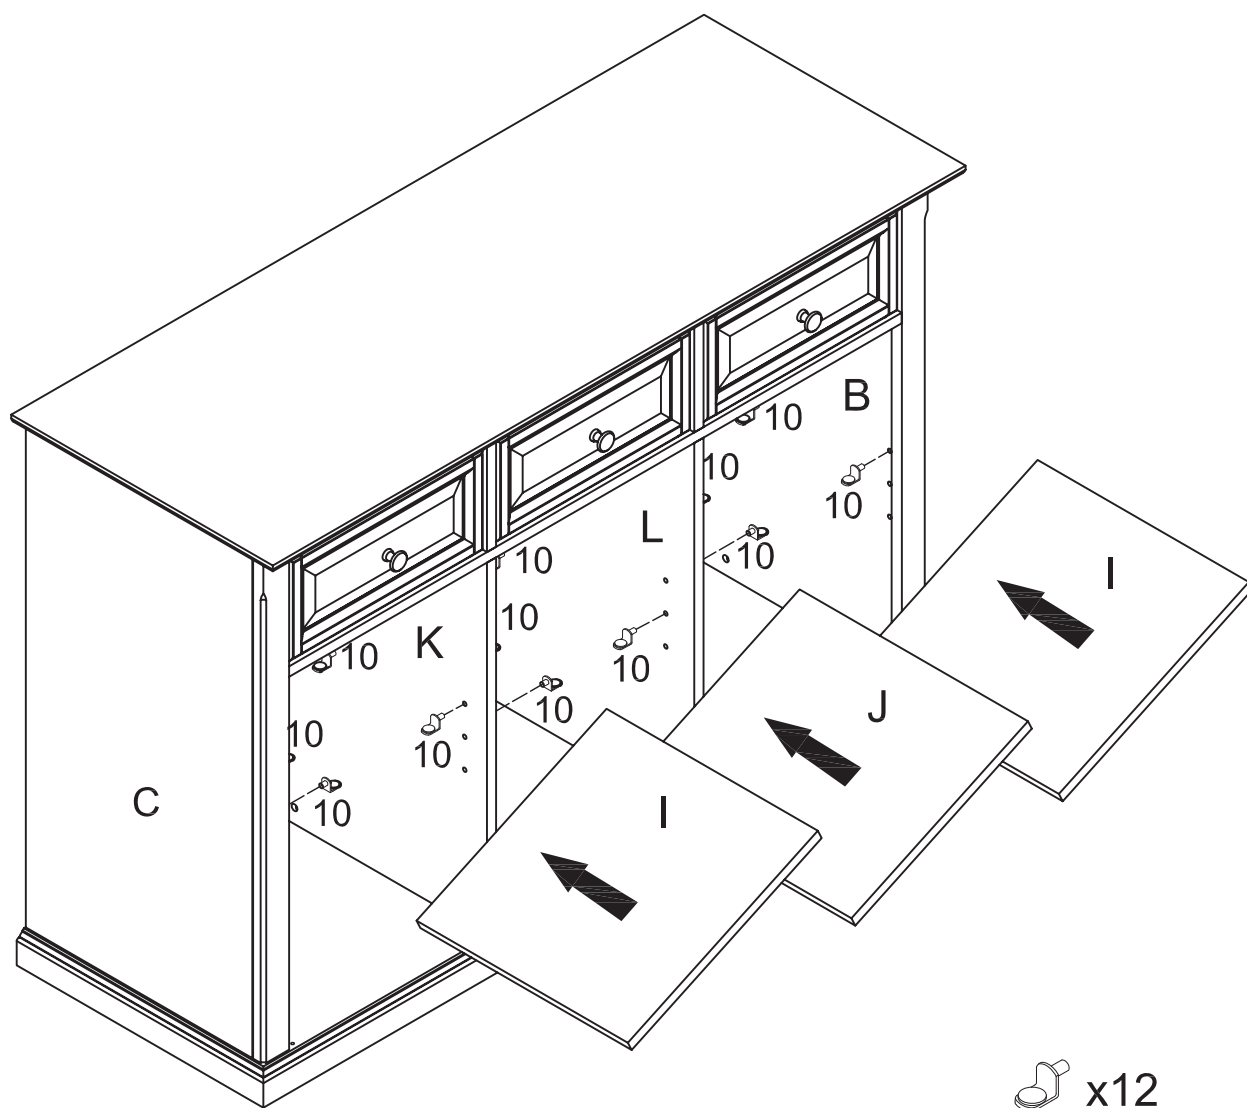


Step 12. Slide Parts U & Part T together as shown. Repeat this step for other Wine storage grid.
Making sure that Shelf J is placed in the center hole position, carefully insert the wine storage grids into place in the center portion of the cabinet.

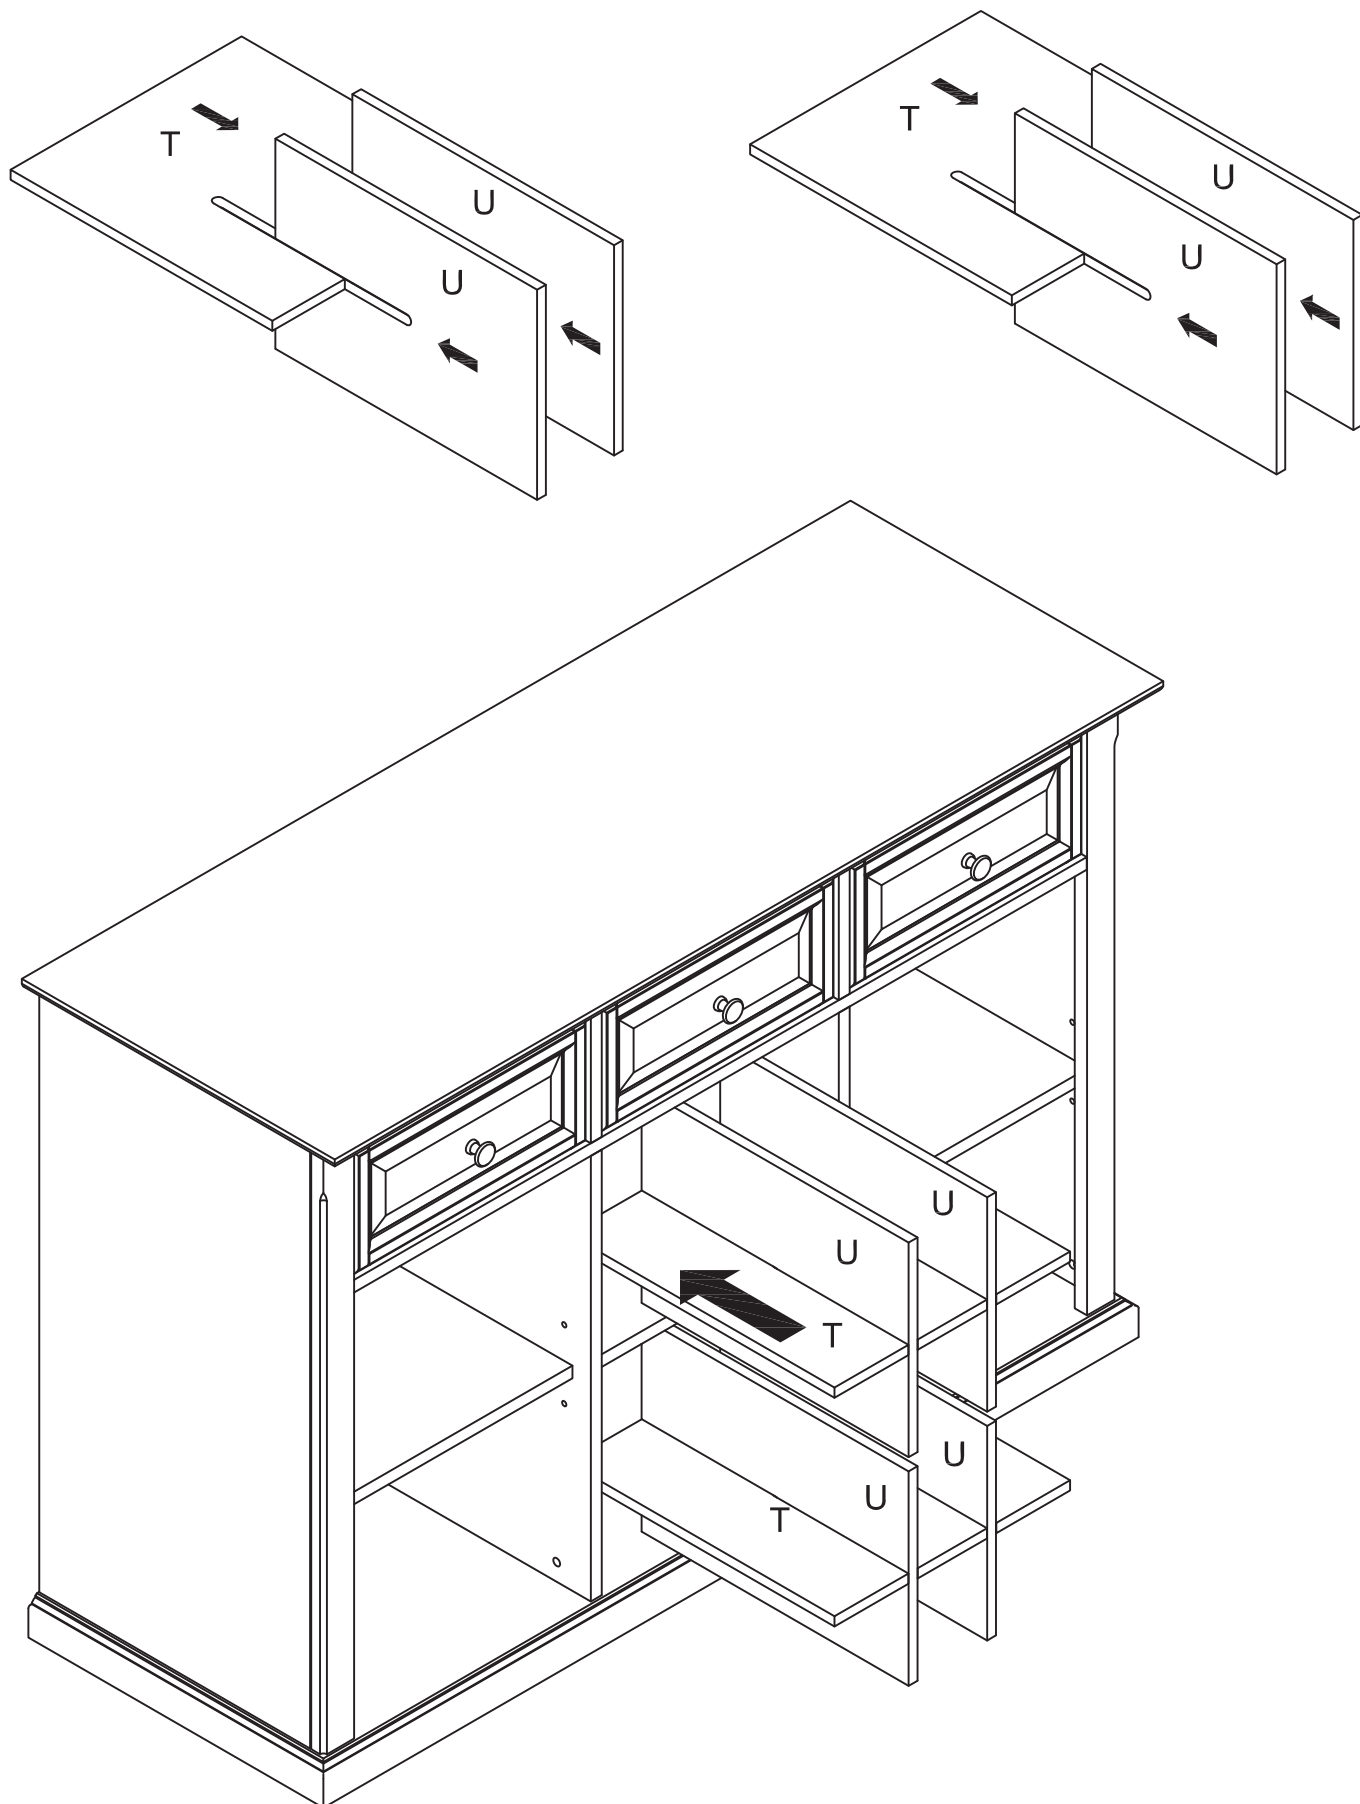

Step 13. Attach Hardware Knobs (Part #6) to the doors with Round Head Bolts (Part #7) using Phillips Head screwdriver as shown. Attach doors to cabinet by placing bottom Pin Hinge into pre-drilled holes in Base S & depressing top spring loaded Pin Hinge to fit door into place in Rail E.


Note: Be sure Pin Hinges (top & bottom) have fully extended into the pre-drilled holes in Base S and Rail E to secure doors into place.

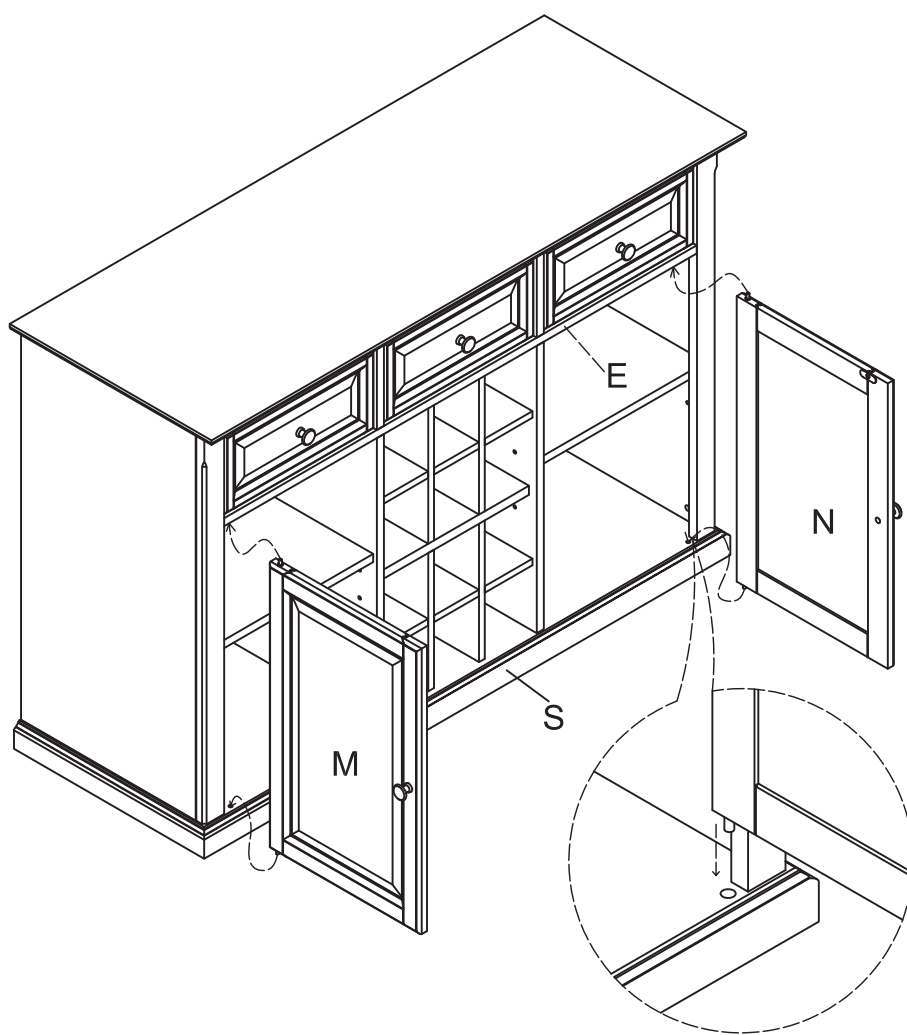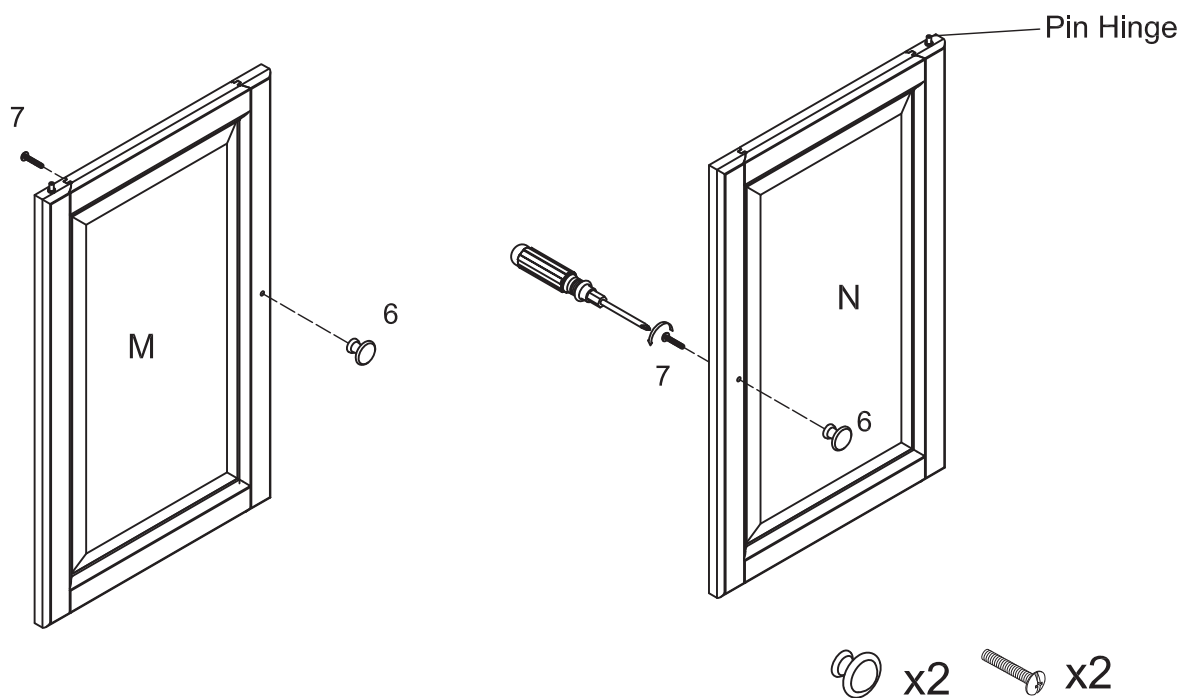

15



SAFETY STRAP KIT
1 PC

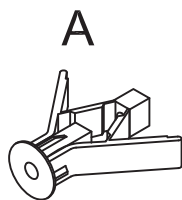

WALL ANCHOR
Ax1 PC



WASHER
Bx2PCS




D8*3/4"

SHORT SCREW
Cx1PC



D8*1-1/2"

LONG SCREW
Dx1PC

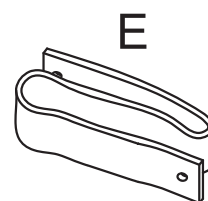

SAFETY WALL STRAP
Ex1PC



SAFTY WALL STRAP ASSEMBLY INSTRUCTION

1) Insert Short Screw(Part#C)through Washer(Part#B) and Safty Wall Starp(Part#E) and screw it into Parts A.

2) Drill a 9mm hole at a point where you want to secrue/attach your Kitchen Cart. Make sure that the height of the hole being drilled into the wall is equal to the height of the hole in part A. Tap Wall Anchor (Part #A) into the hole.

3) Insert Long Screw (Part#D) through a Washer (Part #B) and Wall Safty Strap (Part#E) into Wall Enchor (Part#A).

Note: This item is not intended for clothing storage use.

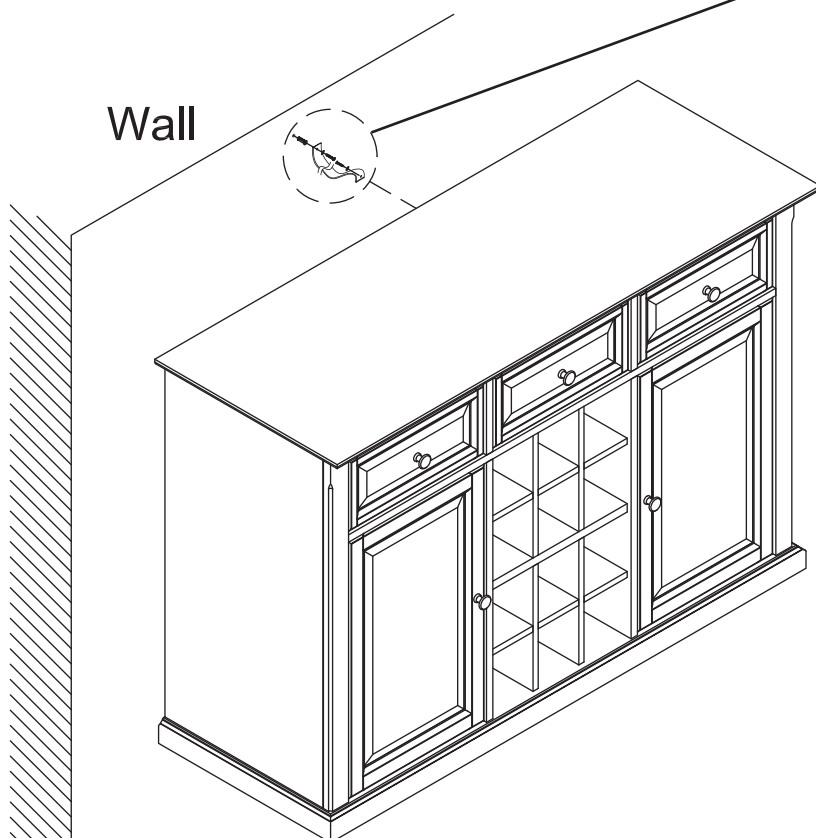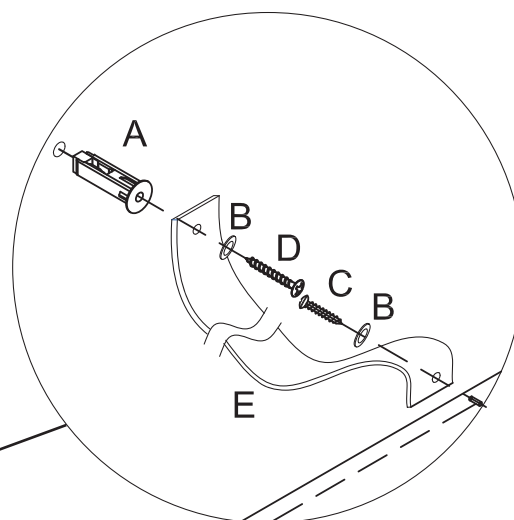

⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.



*This is a permanent label.
Do not remove!*