



Outdoor Wicker Armchair CO6223

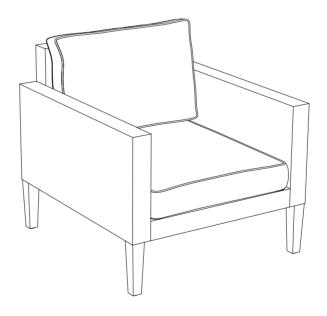

PART LIST

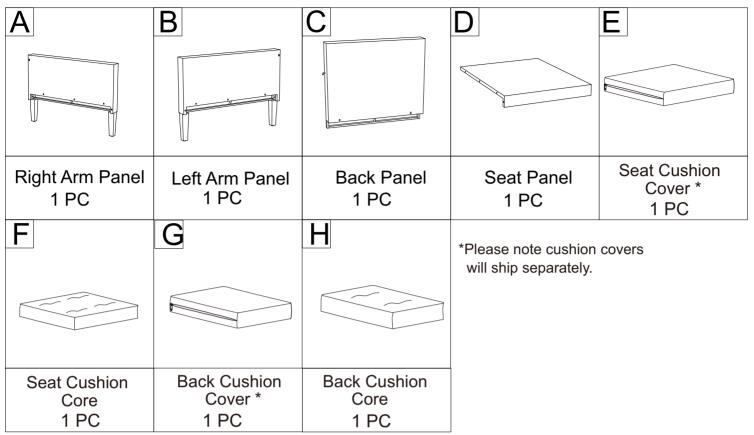


HARDWARE LIST

| #1 | #2 | #3 | #4 |
|-------------------------------|------------------------------|---------------------------------|----------------------|
| | | | |
| M6*25mm | M6*40mm | M6mm | M6mm |
| Short Bolt 2 PCS (Extra 1) | Long Bolt 8 PCS (Extra 1) | Flat Washer 10 PCS (Extra 1) | Allen Wrench 1 PC |


Step 1. Lay left arm panel (part B) down on a soft flat surface, such as carpet, as shown below. Attach seat panel (part D) to left arm panel (part B) using short bolt (part #1), long bolts (part #2), flat washers (part #3) and allen wrench (part #4).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

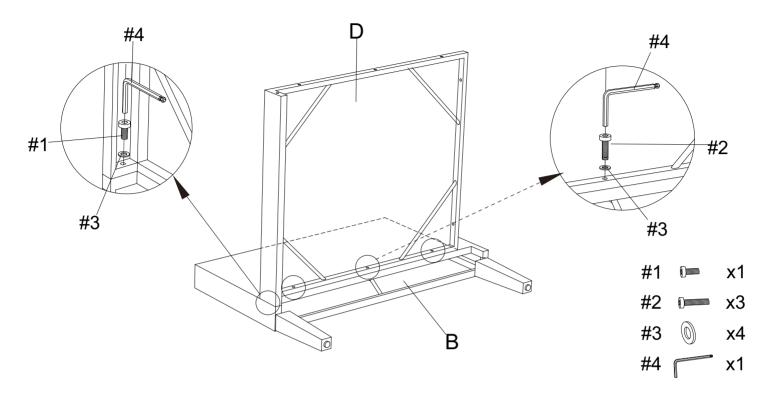


Step 2. Attach back panel (part C) to left arm panel (part B) and seat panel (part D) using long bolts (part #2), flat washers (part #3) and allen wrench (part #4).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

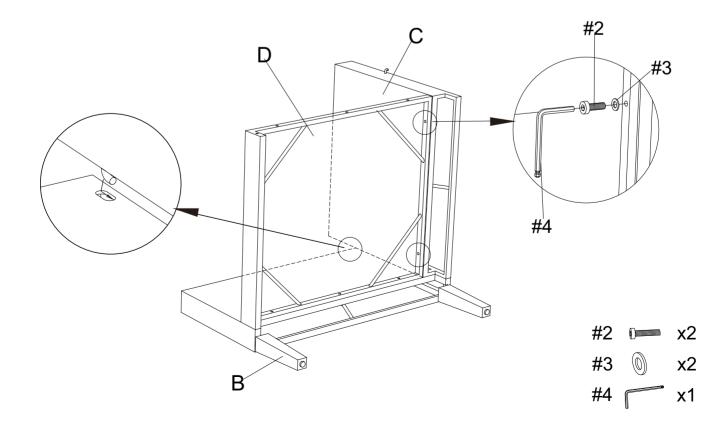


- Step 3. Attach right arm panel (part A) to seat panel (part D) and back panel (part C) using short bolt (part #1), long bolts (part #2), flat washers (part #3) and allen wrench (part #4).
 - NOTE: Please fully tighten all bolts at this time.

It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

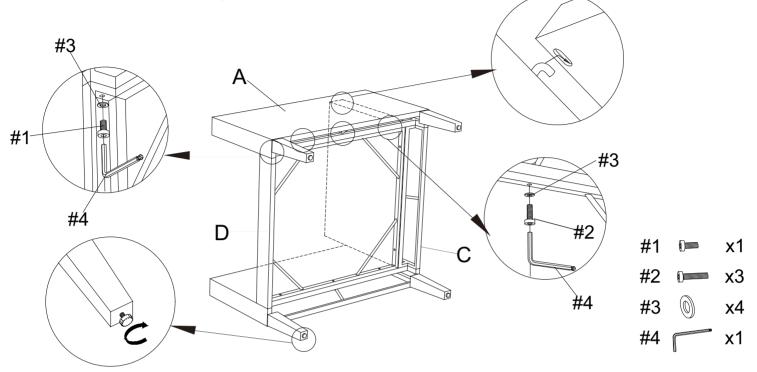

Step 4. Insert seat cushion core (part F) into seat cushion cover (part E). Insert back cushion core (part H) into back cushion cover (part G).

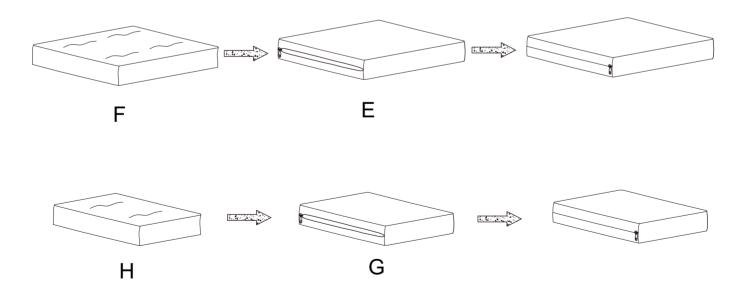

Step 5. Carefully turn unit upright. Place seat cushion and back cushion as shown below.

