



Outdoor Wicker Ottoman CO7143

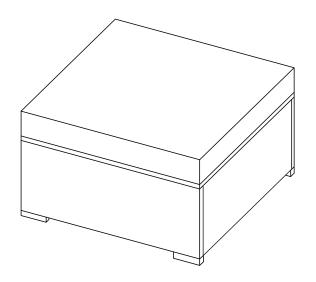

PART LIST

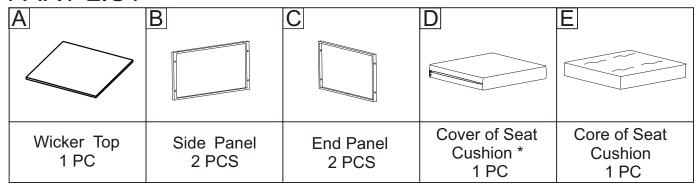

^{*}Please note cushion covers will ship separately.

HARDWARE LIST


#1	#2	#3	#4	#5
(9)				
M6*30mm	M6*35mm	D18mm	D12mm	M6mm
Short Bolt 12 PCS	Long Bolt 8 PCS	Washer 12 PCS	Small Washer 8 PCS	Nut 8 PCS
#6	#7	#8		
5				
M6mm	M6mm			
Wrench 1 PC	Allen Key 1 PC	L Foot 4 PCS		

EXTRA HARDWARE LIST

#1	#2	#3	#4	#5
M6*30mm	M6*35mm	D18mm	D12mm	M6mm
Short Bolt 1 PC	Long Bolt 1 PC	Washer 1 PC	Small Washer 1 PC	Nut 1 PC


Step 1. Lay wicker top (part A) on a soft flat surface, such as carpet, as shown below. Attach side panels (part B) to top panel (part A) using short bolts (part #1), washers (part #3) and allen key (part #7).

NOTE:Please do not fully tighten bolts until unit is fully assembled.

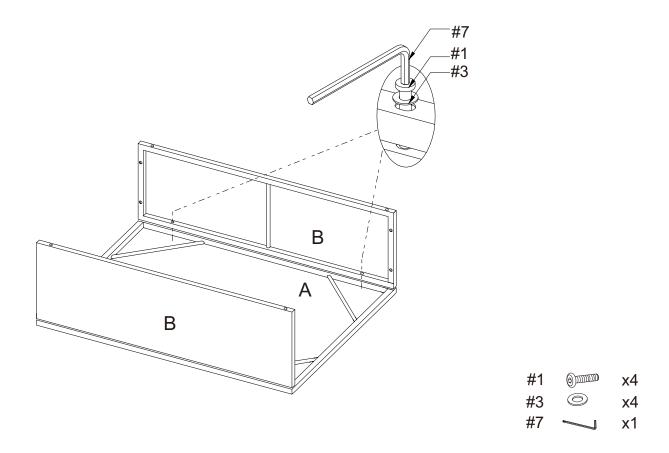


Step 2. Attach end panels (part #C) to assembled unit (parts A&B) using short bolts (part #1), washers (part #3) and allen key (part #7).

NOTE:Please do not fully tighten bolts until unit is fully assembled.

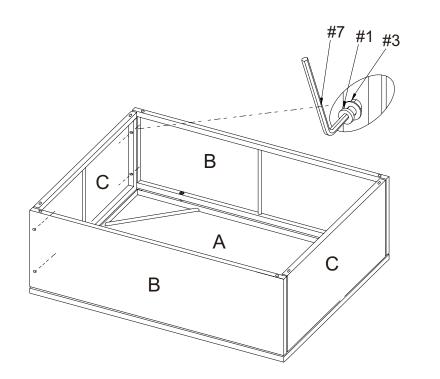


Step 3. Attach L feet (part #8) to assembled unit (parts B&C) using long bolts (part #2),small washers (part #4),nuts (part #5),wrench (part #6) and allen key (part #7).

NOTE: Please fully tighten all bolts at this time.

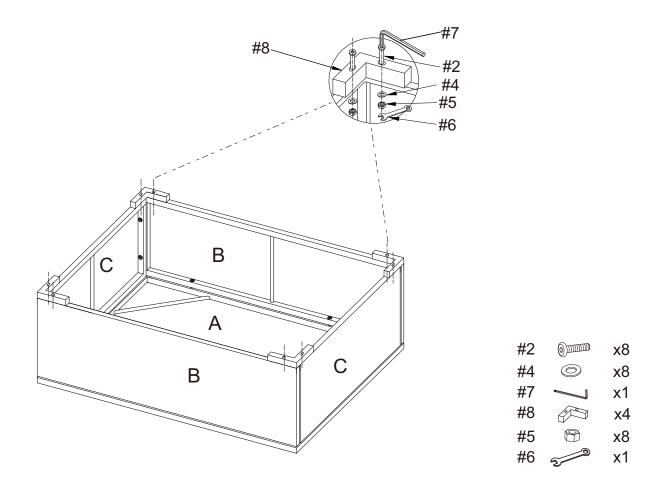

Step 4.Insert core of seat cushion (part #E) into cover of seat cushion (part #D).



Step 5. Carefully turn the assembled ottoman upright and add cushions as shown below.

