






# DSF-16KPO01


## INSTALLATION INSTRUCTIONS




### Tools You Will Need:

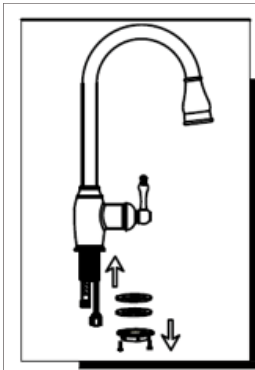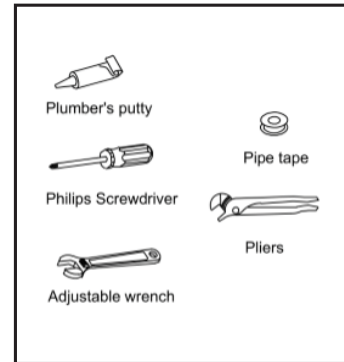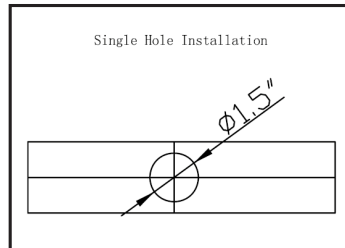


1. Remove washer, metal washer and lock nut from the faucet.

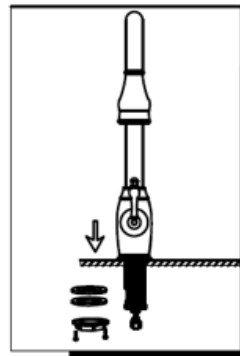


2. Install faucet through center hole assembly washer and metal washer onto faucet, and tighten with lock nut.

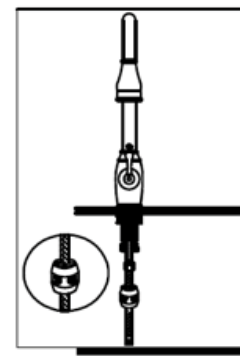


3. Proper installation of the hose weight kit will ensure that the hand sprayer retracts smoothly. On the handspray side of the hose, measure 15" down from the body of the faucet. Install the hose weight kit at this point. Pull out on the hand spray. It should move easily and retract smoothly. Reposition the hose weight kit as necessary. Make sure that the hot and cold supply hoses do not interfere with the hand spray hose. They can be repositioned slightly if necessary.

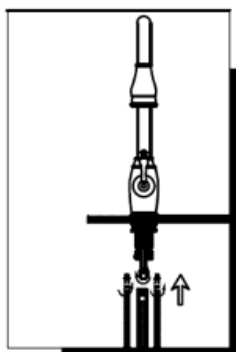

4. Screw and tighten the flexible hoses to the faucet. Do not allow the water supply brass tube to twist.

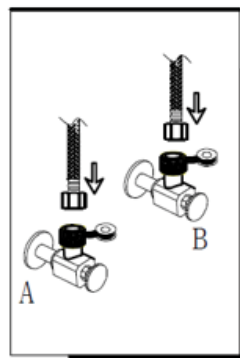

5. Attach two flexible hoses to water supply.

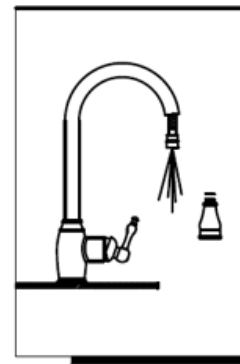

6. After installing faucet, remove shower assembly and open the hot and cold water supplies. Check for leaks. Turn on faucet handle for one minute to flush debris from faucet. Close the handles and re-assemble the shower.