



DSF-38BSS01


CONCEALED SHOWER SET INSTALLATION INSTRUCTIONS



Notes before installation:

1. Please check that all components are present.
 2. Before installation ensure that all feed lines are clear of debris and on/off valve is present.
 3. Ensure water pressure is between 20-125 PSI (Includes combination of hot and cold feed lines).
 4. Pictures in the manual are general in content and may not represent exactly your Purchased faucet. If you are having difficulties, please contact a professional plumber.
 5. If you will be away from home for an extended period you should shut off the main water supply.
- All valves have passed air and water testing during manufacture. If air test is requested before installation, it MUST be under the guide of professional plumber. Make sure the air pressure DOES NOT exceed 145PSI (=10KG).**


Tools you will need:




1. Adjustable Wrench




2. Pipe Tape




3. Hexagon Wrench




4. Phillips Screwdriver

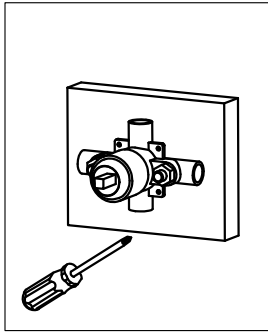


1) Confirm the installed place of the pressure balance valve is fixed on the wood block.

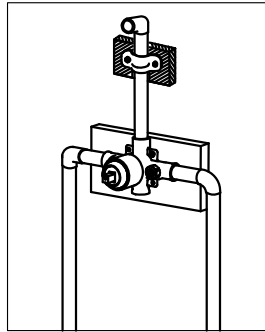


2) Connect the hot & cold inlet tube and outlet tube, then make sure the tube is fixed stable on the wooden wall.

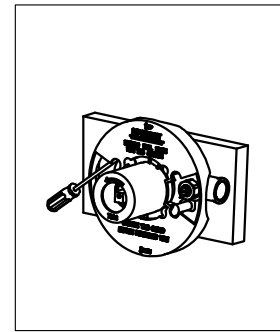


3) Lock the install protective cover into the body.(Ø140mm round type).

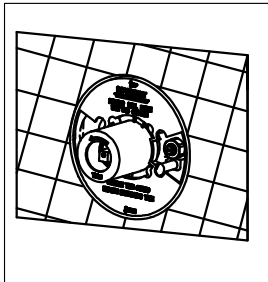


4) Cut the size of the tile hole according to the size and shape of the protective cover (about 5mm bigger than the protective cover from each side). And please put the tile outside the wooden wall (please note that we keep the same central point for the tile hole with the protective cover-->).

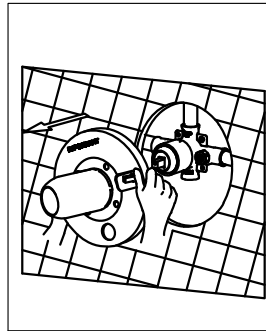


5) Loosen the screw and remove protective cover.

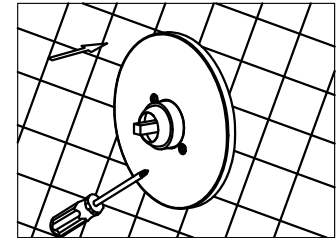


6) Lock the deck plate into the body and attach to the wall, then tighten the screw.

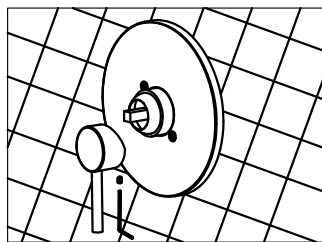

7) Put on the handle, then tighten the screw.

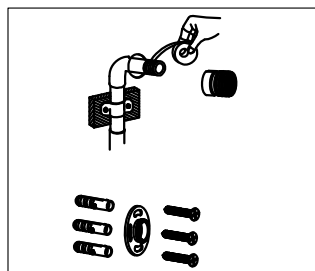

8) Screw down the inlet water connector. Measure the center distance between inlet water connector and fixed seat, Drilling the holes to install the fixed seat

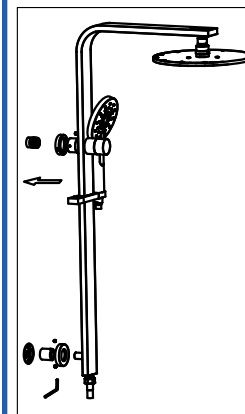

9) Insert the bracket, screw down the connector. Cover the inlet water connector, screw up the diverter by screw. Cover the fixed seat and connect to the shower column by screw.