


## Majestic C/E King Assembly Instructions

Hardware List includes factory installed bolts and washers for side rails attachment.

A	В	C	D	Ε	F	G	I	J	K	R	T
97777	OTHER !	OTHER !	0	0				9	Olimin	@IIIII	<b>OTTIME</b>
φ6*15MM	φ8*30MM	φ8*60MM	ф6ММ	ф8ММ			φ8MM	U	φ8*80MM	φ8*70MM	φ6*20MM
8PCS	12PCS	4PCS	16PCS	26CS	4PCS	4PCS	1PC	8PCS	2PCS	8PCS	8PCS

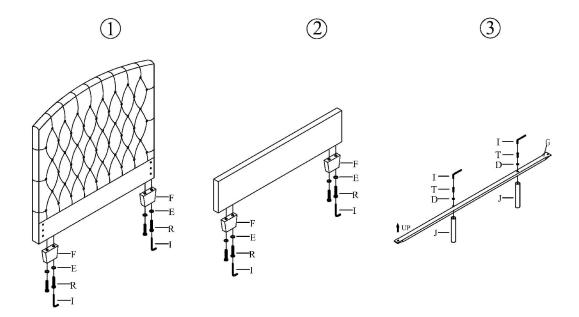

#### Step#1

Retrieve feet and hardware from HB in zipper. Attach bed feet (F) to the headboard using Wrench (I), Bolt (R) and Washer (E).

#### Step#2

Attach bed feet (F) to the footboard using Wrench (I), Bolt (R) and Washer (E).

#### Step#3

Attach steel center support legs (J) to the Metal slat (G) using Wrench (I), Bolt (T) and Washer (D). Center support legs (J) are cable tied to the center support rails during shipment.


#### CONGRATULATIONS ON YOUR NEW BED PURCHASE

 $\sim\!\!Warning\!:$  do not move bed after final assembly as it may result in damages to floor and/or bed. $\!\sim\!$ 

# Majestic C/E King Assembly Instructions

Hardware List includes factory installed bolts and washers for side rails attachment.

Α	В	C	D	Е	F	G	I	J	K	R	T
<b>OTTOM</b>	OTHER !	@IIIII	0	0				9	@IIIII	@IIIII	
φ6*15MM	φ8*30MM	φ8*60MM	ф6ММ	φ8MM			ф8ММ	U	φ8*80MM	φ8*70MM	φ6*20MM
8PCS	12PCS	4PCS	16PCS	26CS	4PCS	4PCS	1PC	8PCS	2PCS	8PCS	8PCS

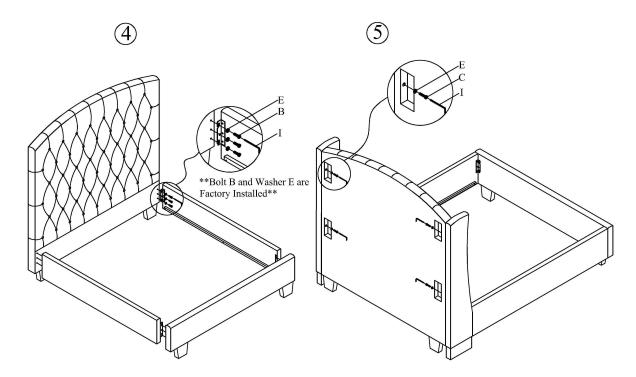

#### Step#4

Attach side rails by using factory installed Bolt (B) and Washer (E) of Headboard and Footboard with Wrench (I).

#### Step#5

Attach wings through HB finger tight, using Wrench (I), Bolt (C) and Washer (E).


#### CONGRATULATIONS ON YOUR NEW BED PURCHASE

~Warning: do not move bed after final assembly as it may result in damages to floor and/or bed.~

# Majestic C/E King Assembly Instructions

Hardware List includes factory installed bolts and washers for side rails attachment.

A	В	С	D	Е	F	G	I	J	K	R	T
<b>OLIMIN</b>	@IIIII	@IIIII	0	0				•	OTHER DESIGNATION OF THE PROPERTY OF THE PROPE	@IIIII	OTTOM OTTOM
φ6*15MM	φ8*30MM	φ8*60MM	ф6ММ	φ8MM			φ8MM	U	φ8*80MM	φ8*70MM	φ6*20MM
8PCS	12PCS	4PCS	16PCS	26CS	4PCS	4PCS	1PC	8PCS	2PCS	8PCS	8PCS

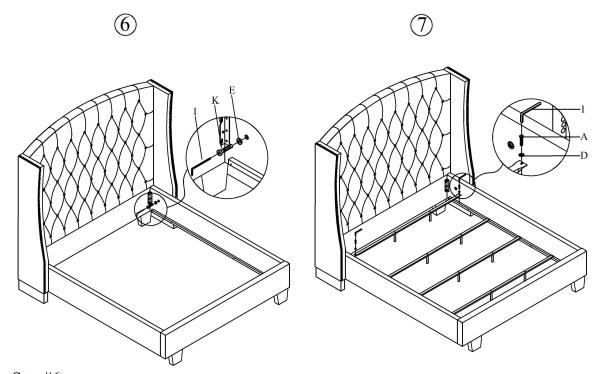

### Step#6

Attach wings through side rail finger tight, using Wrench (I),Bolt (K) and Washer (E). Tighten/secure wings(6 bolts) with Allen Wrench until snug.

### Step#7

Move/place bed into final position in bedroom.

Attach steel slat support system to full length steel side rail support cleats (flat side facing up). Verify the slats are inserted properly into support cleats and center support legs are perpendicular to the floor for full support.

### CONGRATULATIONS ON YOUR NEW BED PURCHASE

~Warning: do not move bed after final assembly as it may result in damages to floor and/or bed.~