


## Collection:Lawrence Installation manual for:

LD2346 D9.8"H11.8"L1

## Installation instructions:

- 1. Secure Mounting bracket(P1) to the junction box.
- 2.Insert screws(P2) in side of top unit the mounting bracket.
- 3.Black wire from ceiling(junction box) attaches to "L"wire from the fixture.
- 4. White wire from ceiling(junction box) attaches to "N"wire from the fixture.
- 5. "E" wire from the fixture is attaced to the mounting bracket and an additional "E" wire from the mounting bracket must be secured to the junction box.
- 6.Fix the Canopy(P3) to the Mounting bracket(P1) and tighten by the screws(P4).
- 7.Install the bulbs(bulbs not included) into the lampholder(P8).
- 8.Install the Glass shade(P9) with the screws(P6).

## The end!

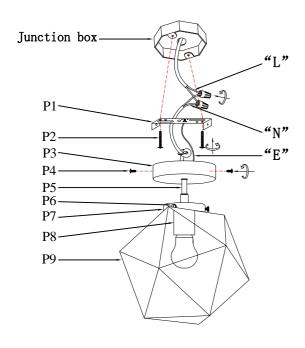

## PARTS LIST

picture	Description	Qty	Check	list
	L4.5" Mounting bracket	1		
(funnamum	5/32-32 Screw	2		
	Ø4.7″ Metal Canopy	1		
4	M4 Screw	2		
	L2.1" Metal Rod	1		
WANDALI	M4 Screw	3		
0 0	Ø3.1″ Metal Cover	1		
	E26 Metal Cup	1		
	ø9.8"Glass shade	1		
		L4. 5" Mounting bracket  5/32-32 Screw  Ø4. 7" Metal Canopy  M4 Screw  L2. 1" Metal Rod  M4 Screw  Ø3. 1" Metal Cover  E26 Metal Cup	L4. 5" Mounting bracket  5/32-32 Screw  2  24. 7" Metal Canopy 1  M4 Screw  L2. 1" Metal Rod 1  M4 Screw  3  23. 1" Metal Cover 1  E26 Metal Cup 1	L4. 5" Mounting bracket  5/32-32 Screw  2  24. 7" Metal Canopy 1  M4 Screw  2  L2. 1" Metal Rod 1  M4 Screw  3  23. 1" Metal Cover 1  E26 Metal Cup 1

L'' = Hot wire

"N" = Neutral wire

"E" = Ground wire