


Collection:Zane Installation manual for:

LD2348 L21. 5"W4. 7"H6. 2"L2

Installation instructions:

- 1. Secure Mounting bracket(P1) to the junction box.
- 2.Insert screws(P2) in side of top unit the mounting bracket.
- 3.Black wire from ceiling(junction box) attaches to "L"wire from the fixture.
- 4. White wire from ceiling(junction box) attaches to "N"wire from the fixture.
- 5. "E" wire from the fixture is attaced to the mounting bracket and an additional "E" wire from the mounting bracket must be secured to the junction box.
- 6.Fix the Canopy(P3) to the Mounting bracket(P1) and tighten by the Nuts(P5).
- 7.Install the bulbs(bulbs not included) into the lampholder(P7).

The end!

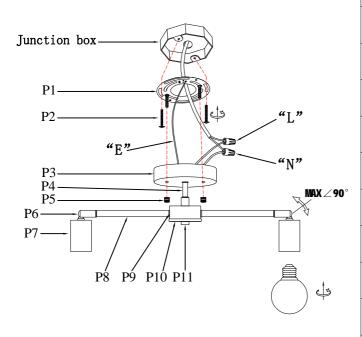

part	picture	Description	Qty	Check	list
P1	Q.	Ø4.5" Mounting bracket	1		
P2	(Instantina	5/32-32 Screw	2		
Р3		Ø4.7″ Metal Canopy	1		
P4		L2.1" Metal Rod	1		
P5		M5 Nuts	2		
P6		Cardan joint	2		
P7		E26 Metal Cup	2		
P8		L5.5" Metal Rod	2		
P9		Ø2.4" Metal Box	1		
P10		Ø2.4″ Metal Cover	1		
P11		M10 Flat nut	1		

L'' = Hot wire

"N" = Neutral wire

"E" = Ground wire