## DISTRICT


Collection: Cason
Installation manual for:

LD6183BK W6"H12"E6.8" L1

## Installation instructions:

- 1. Black wire from ceiling(junction box) attaches to "L"wire from the fixture.
- 2. White wire from ceiling(junction box) attaches to "N"wire from the fixture.
- 3. "E" wire from the fixture is attaced to the mounting bracket and an additional "E" wire from the mounting bracket must be secured to the junction box.
- 4. Secure mounting bracket to the junction box.
- 5.Insert screws (P4) in side of top unit the mounting bracket.
- 6. Put the canopy (P5) on the mounting bracket(P1) and tighten it with nut (P6).
- 7.Install E12 light source,no include bulb.
- 8.Install the shade (P12) to the bulb.

## The end!

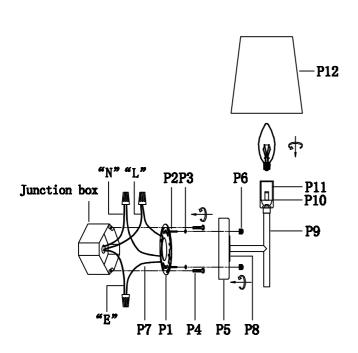

## PARTS LIST

part	picture	Description	Qty	Check list
P1	<b>6</b>	D4" Mounting bracket	1	
P2	_	5/32-32 Screw	2	
Р3	<b>©</b>	Hex mut	2	
P4		5/32-32 Screw	2	
P5		D4.75° Canopy plat	1	
P6		Cap nut	2	
P7	~	Power Cord L1.5 1332 18AWG Blackswhite	1	
P8	0	D2" Round flat gasket	1	
P9		L6. 1" Arm	1	
P10		Socket cover	1	
P11	▣	E12 Socket	1	
P12	<b>/</b>	DS"4HS" Lamp shade	1	
	_			
	•	•	•	

"L" = Hot wire

"N" = Neutral wire

"E" = Ground wire