UVING ISTRICT

Collection:Gabe Installation manual for:

LD6210BK D6"H8.5" L1

Installation instructions:

1. Black wire from ceiling(junction box) attaches to "L"wire from the fixture.

- 2. White wire from ceiling(junction box) attaches to "N"wire from the fixture.
- 3. "E" wire from the fixture is attaced to the mounting bracket and an additional "E" wire from the mounting bracket must be secured to the junction box.

4.Secure mounting bracket to the junction box.


5.Insert screws (P4) in side of top unit the mounting bracket.

6.Put the canopy (P5) on the mounting bracket(P1) and use the cap nut(P6) to screw tighten.

7.Place the glass shade (P13) on the lamp head and twist it with the outer ring of the lamp head.

8.Install E26 light source, no include bulb.

The end!

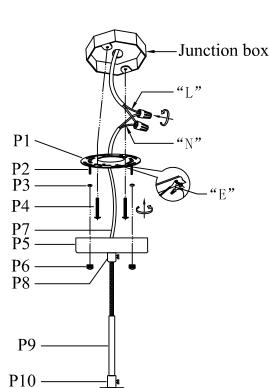

part	picture	Description	Qty	Check list
P1		D4" Mounting bracket	1	
P2	•	5/32-32 Screw	2	
P3	(i)	Hex nut	2	
P4	anni)	5/32-32 Screw	2	
P5		D4.75" Canopy plat	1	
P6		Cap nut	2	
Ρ7		Two-core Power Cord 5.6' Black	1	
P8		Car iron parts	1	
Р9		L4.15″Tube	1	
P10		Coupling	1	
P11		D2.12"Socket cover	1	
P12		E26 Socket	1	
P13		D6"*L6" Glass shade	1	

PARTS LIST

