UVING ISTRICT

Collection:Cade

Installation manual for:

LD650D34 D34"H12" L6

Installation instructions:

1.Black wire from ceiling(junction box) attaches to "L"wire from the fixture. 2.White wire from ceiling(junction box) attaches to "N"wire from the fixture.

3."E" wire from the fixture is attaced to the mounting bracket and an additional

"E" wire from the mounting bracket must be secured to the junction box.

4.Secure mounting bracket to the junction box.


5.Insert screws (P4) in side of top unit the mounting bracket.

6.Put the (P16) arm to the proper position.

7.Connect the top suction plate (P5) and the boom (P9),(P10),(P11) to the lamp body. 8.Put the canopy (P5) on the mounting bracket (P1) and use the Cap nut (P6) to screw tighten.

9.Install E26 light source, no include bulb.

The end!

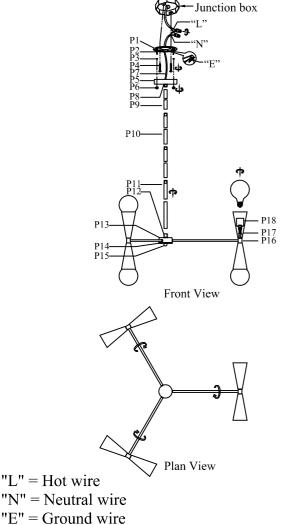

PARTS LIST

Part	Picture	Description	Qty	Check list
P1	0	L4" Mounting bracket	1	
P2		5/32-32 Screw	2	
P3	(C)	Hex nut	2	
P4		5/32-32 Screw	2	
P5		D4.72" Canopy cover	1	
P6		Cap nut	2	
P7		Power Cord 5.2' Black/Gold	1	
P8	0	Washer	2	
P9		D0.53"*L6" ROD	1	
P10		D0.53"*L12" ROD	2	
P11		D0.53"*L16" ROD	1	
P12	(11111)	Nipple	18	
P13	0 0	D2.76"Metal Wire Box	1	
P14	_	D2.83" Wire Box	1	
P15	0	Cap nut	1	
P16	0	L14.5" Lamp arm	3	
P17	\square	D3"H5.5"Conical cap	6	
P18		E26 Socket	6	