## ING Vistrict

Collection: Carmella Installation manual for:


LD7059D17BK/C D17" H13" L3

## **Installation instructions:**

- 1. Black wire from ceiling(junction box) attaches to "L"wire from the fixture.
- 2. White wire from ceiling(junction box) attaches to "N"wire from the fixture.
- 3. "E" wire from the fixture is attaced to the mounting bracket and an additional "E" wire from the mounting bracket must be secured to the junction box.
- 4. Secure mounting bracket to the junction box.
- 5. Separate and adjust the lamp arms, Use the Spanner (P15) and M4 screw (P16) to lock the M4 screw(P16), twist tube(P9) to Perforated tube(P11), connect chain(P6) to Toothed ring (P7), connect chain(P5) to canopy(P4)

- 6.Use the screw(P3) to lock the lamp body to the mounting bracket(P1) on the ceiling.
- 7.Install E12 light source.(Bulbs not supplied)

The end!

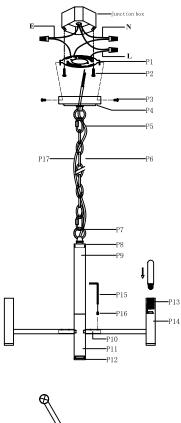

⊗

Part	Picture	Description	Qty	Check list
P1		mounting bracket Φ4.53"*H0.59"	1	
P2		Mounting bracket screw	2	
Р3		Screw	2	
P4		Сапору (Ф4.72"*H1.02")	1	
P5	<b>C</b>	Activity buckle L1.5″*W0.78″*⊄0.15″	2	
Р6		Hanging chain(CHAIN04P) L1.5"*W0.78"*\$\phi_0.15"(Total lenghth 59")	1	
P7		Toothed ring W1.3"*H1.6", M10	2	
Р8	TID.	Head metal part Φ1.26"*HO.39"	1	
P9		tube L7. 87″*Φ1. 26″	1	
P10		Aluminum tube Φ0.35″*L1.97″	3	
P11	0	Perforated tube L5"*Φ1.26"	1	
P12		Head metal part Φ1.26"*H0.39"	1	
P13		E12 holder	3	
P14		Lamp arm L7.87″*H5.31″	3	
P15		Spanner	1	
P16	- •	M4*4 Screw	6	
P17	وسع	UL18#SVT-3, L78. 7"	1	

"L" = Hot wire "N" = Neutral wire "E"=Ground wire